





Z-B0247 Yota 22RE Engine Bay for TF2 Chassis


Step 1. Install using Styrene Solvent Glue

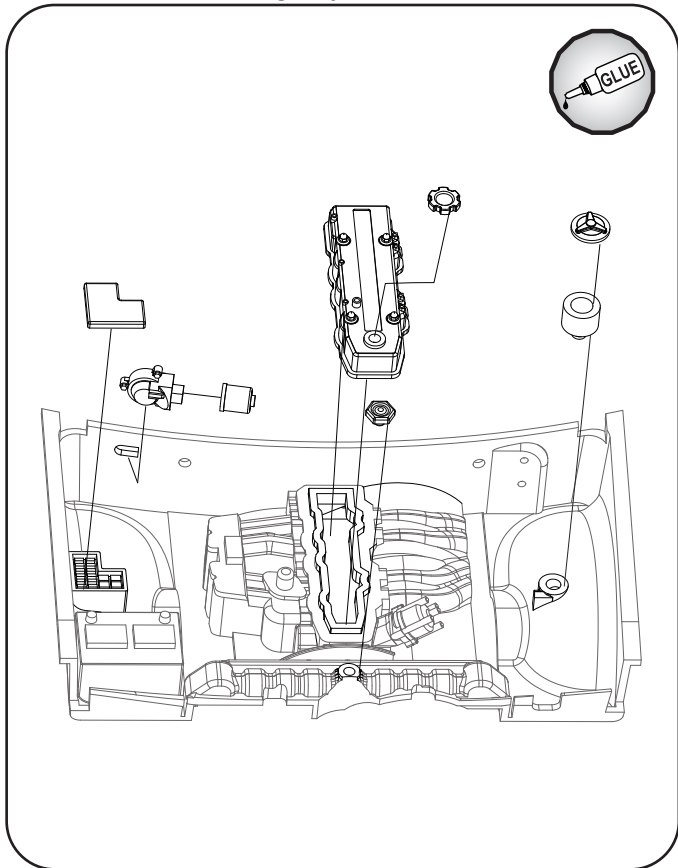


Step 2. Install using Styrene Solvent Glue

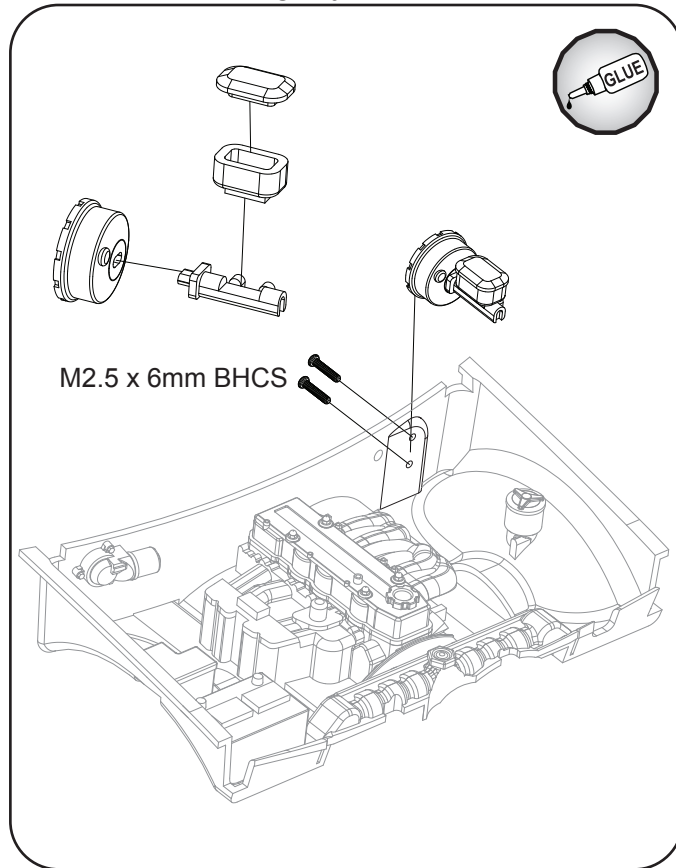

Step 3. Install using Styrene Solvent Glue

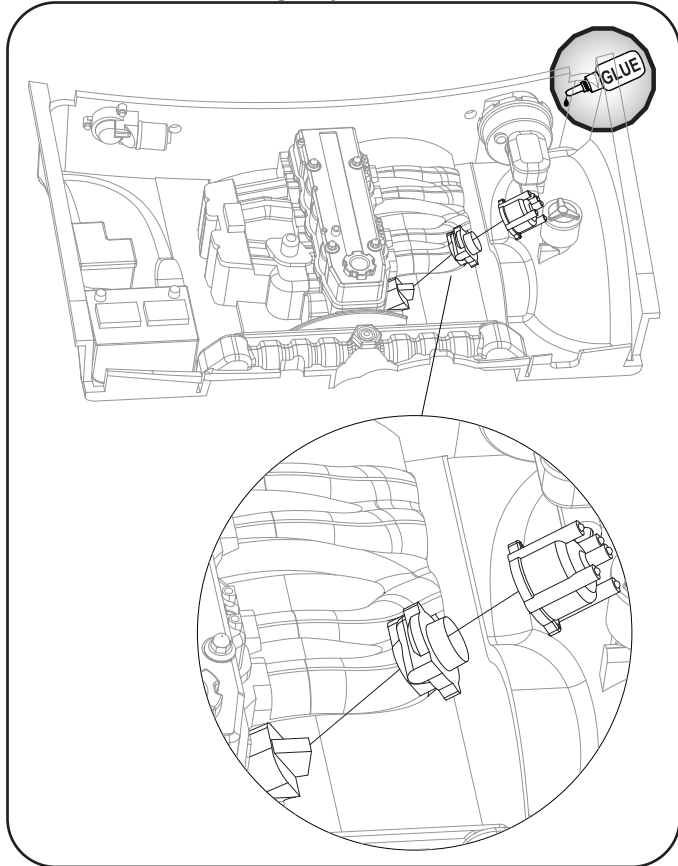


Step 4. Install using Styrene Solvent Glue

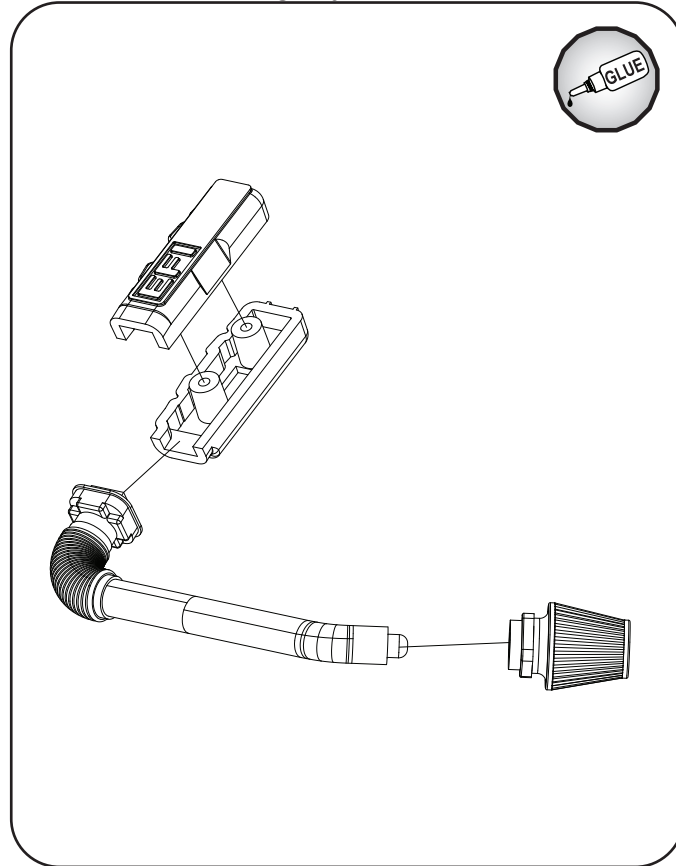




Z-B0247 Yota 22RE Engine Bay for TF2 Chassis


Step 5. *Install using Styrene Solvent Glue*

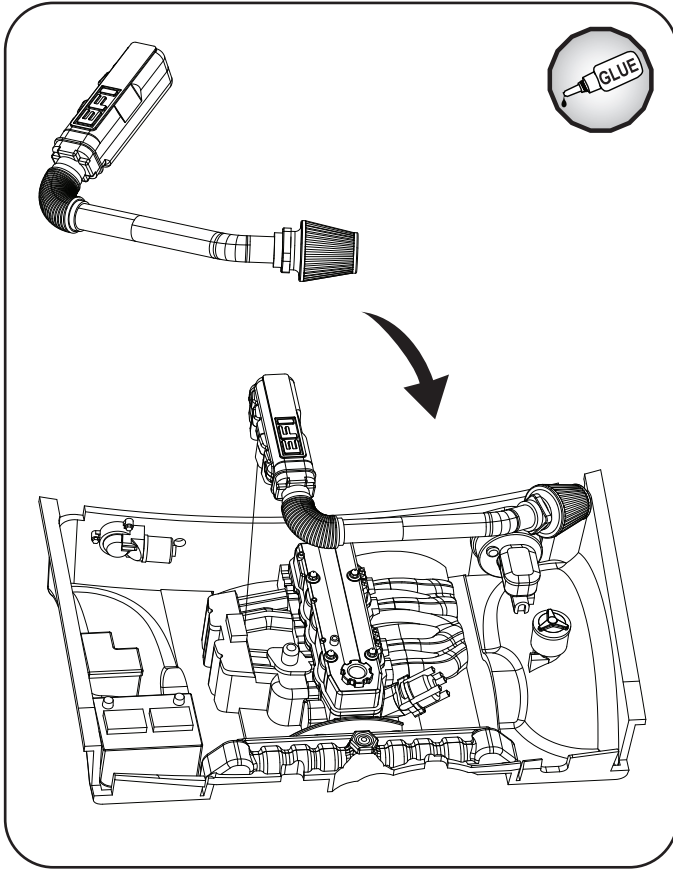

Step 6. *Install using Styrene Solvent Glue*

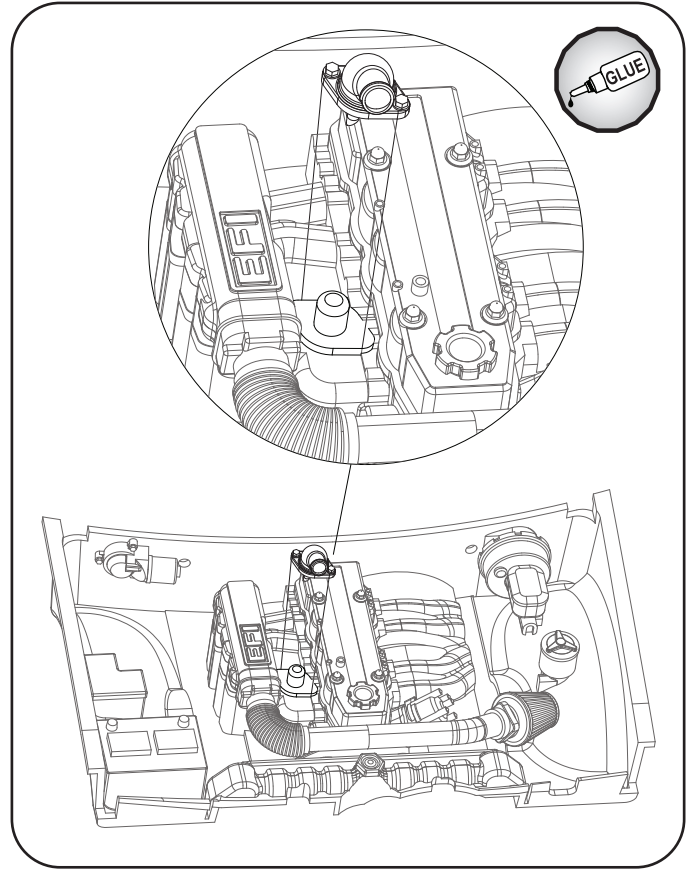


Step 7. *Complete Assembly*

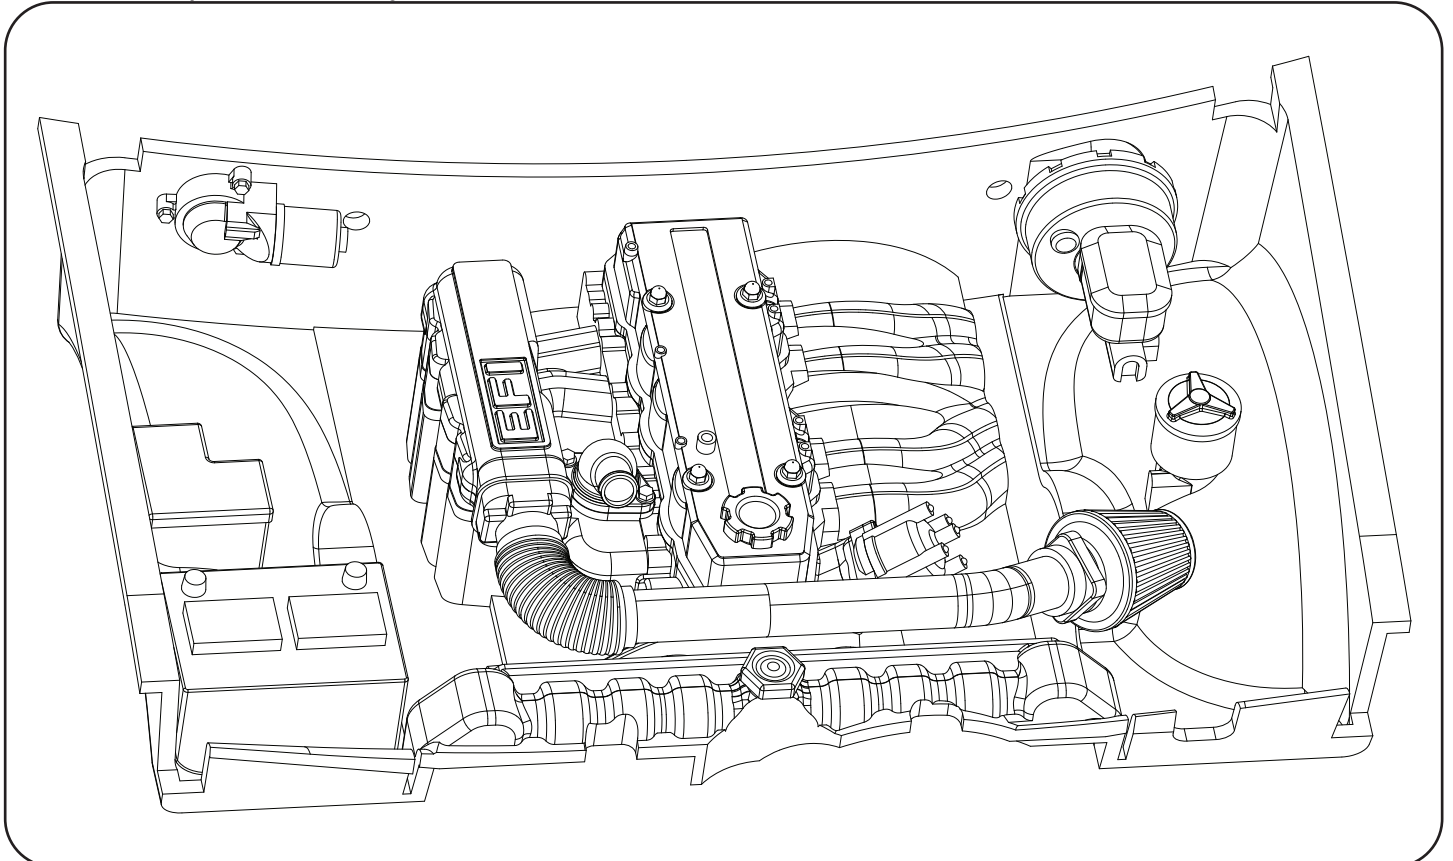




Z-B0247 Yota 22RE Engine Bay for TF2 Chassis

Step 8. Install in the 4runner

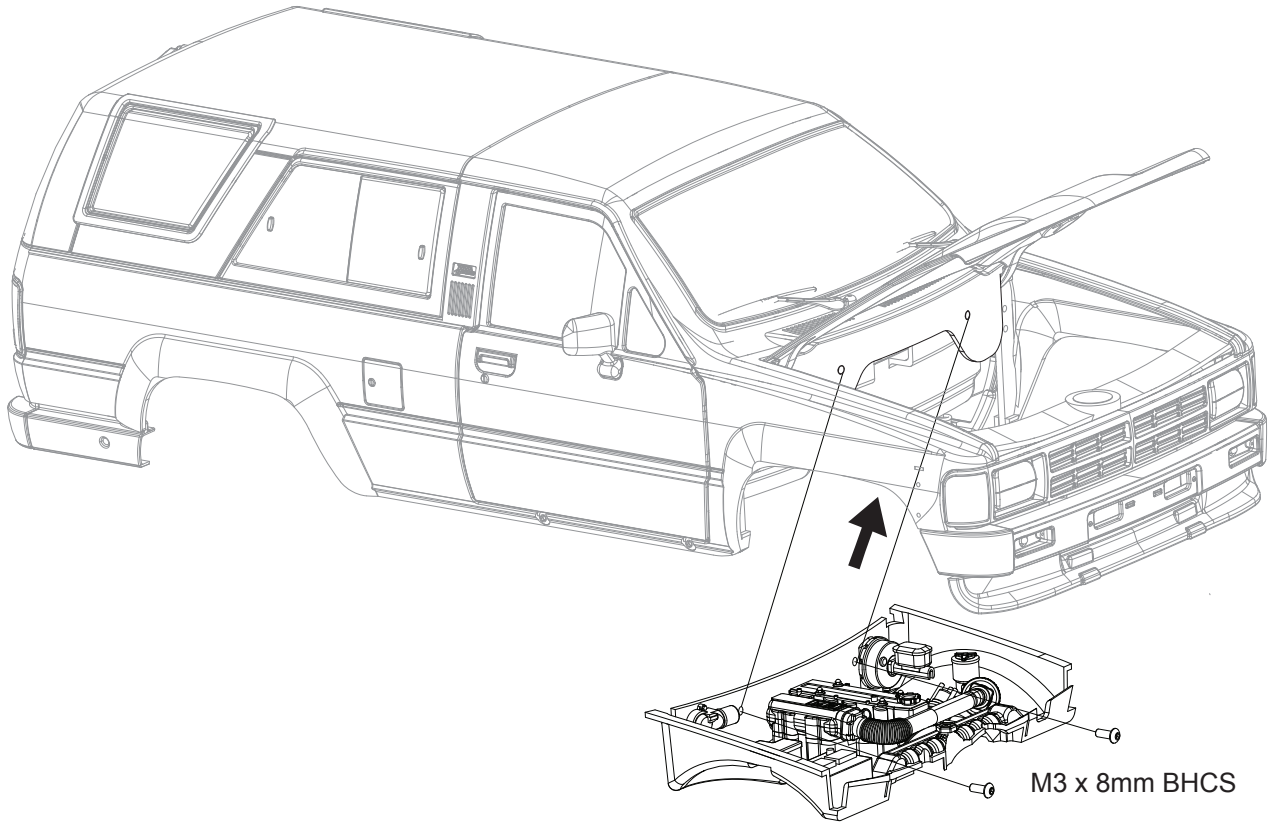


Step 9. Install in the 4runner

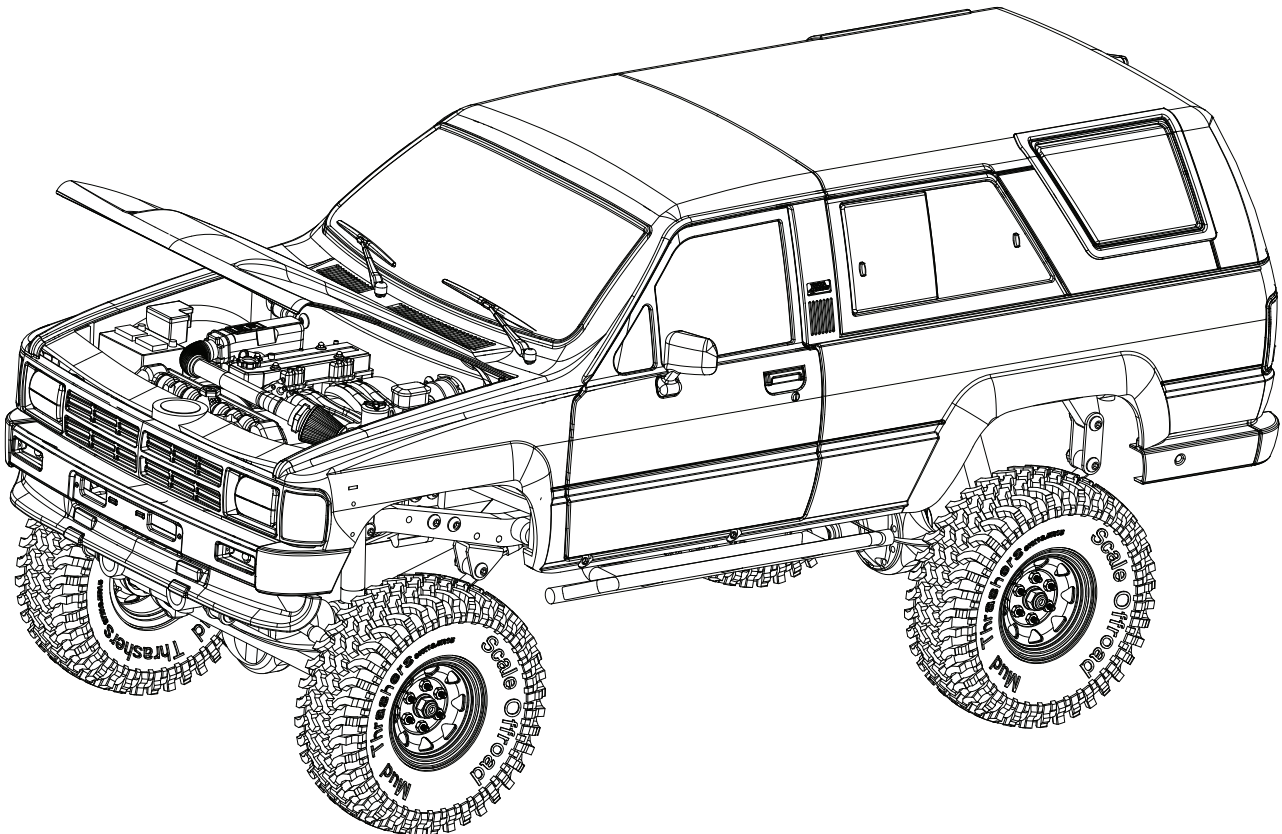




Z-B0247 Yota 22RE Engine Bay for TF2 Chassis

Step 10. *Install in the 87 truck*

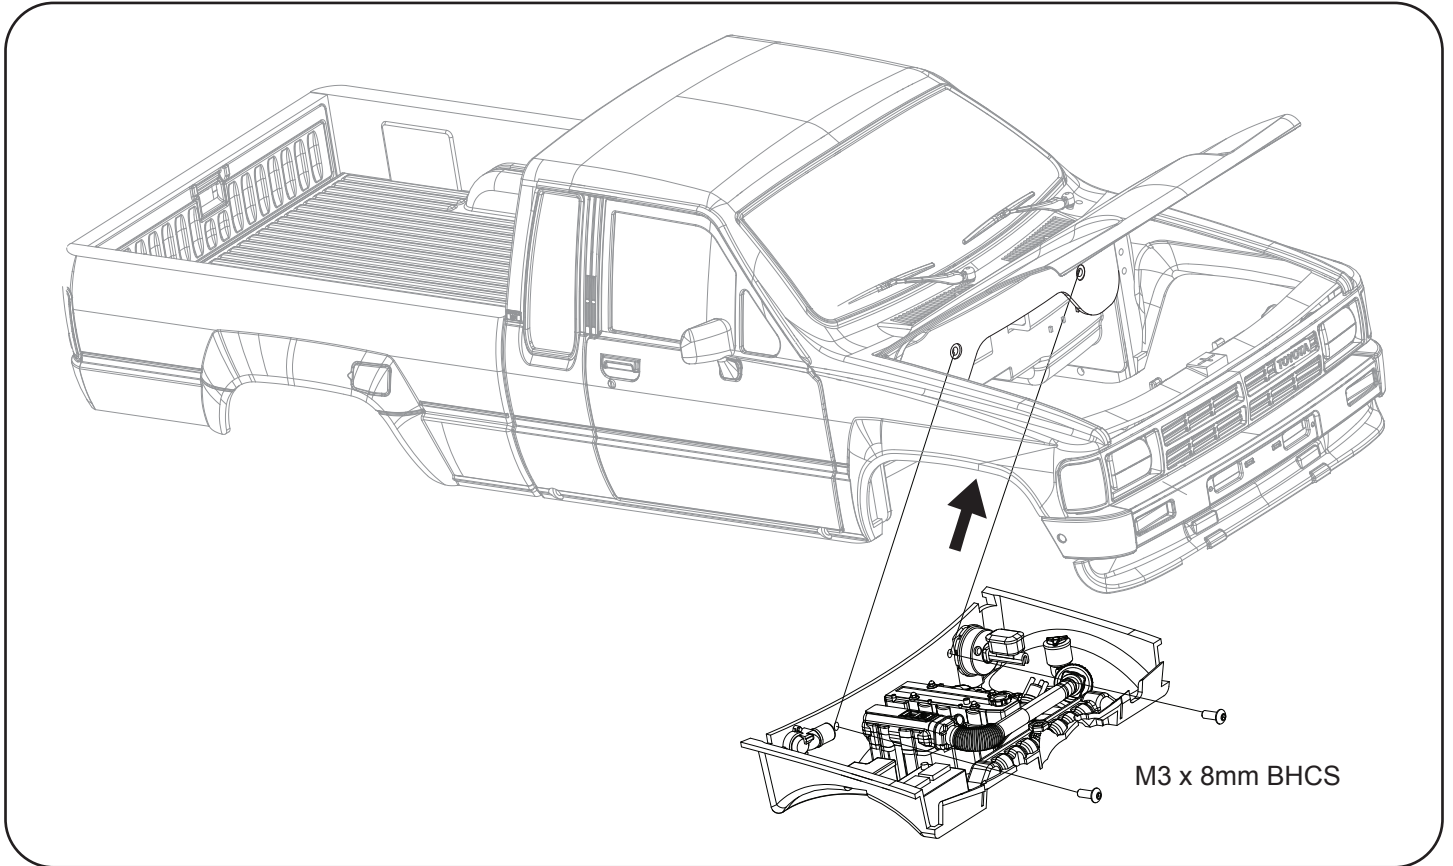


Step 11. *Install in the 87 truck*

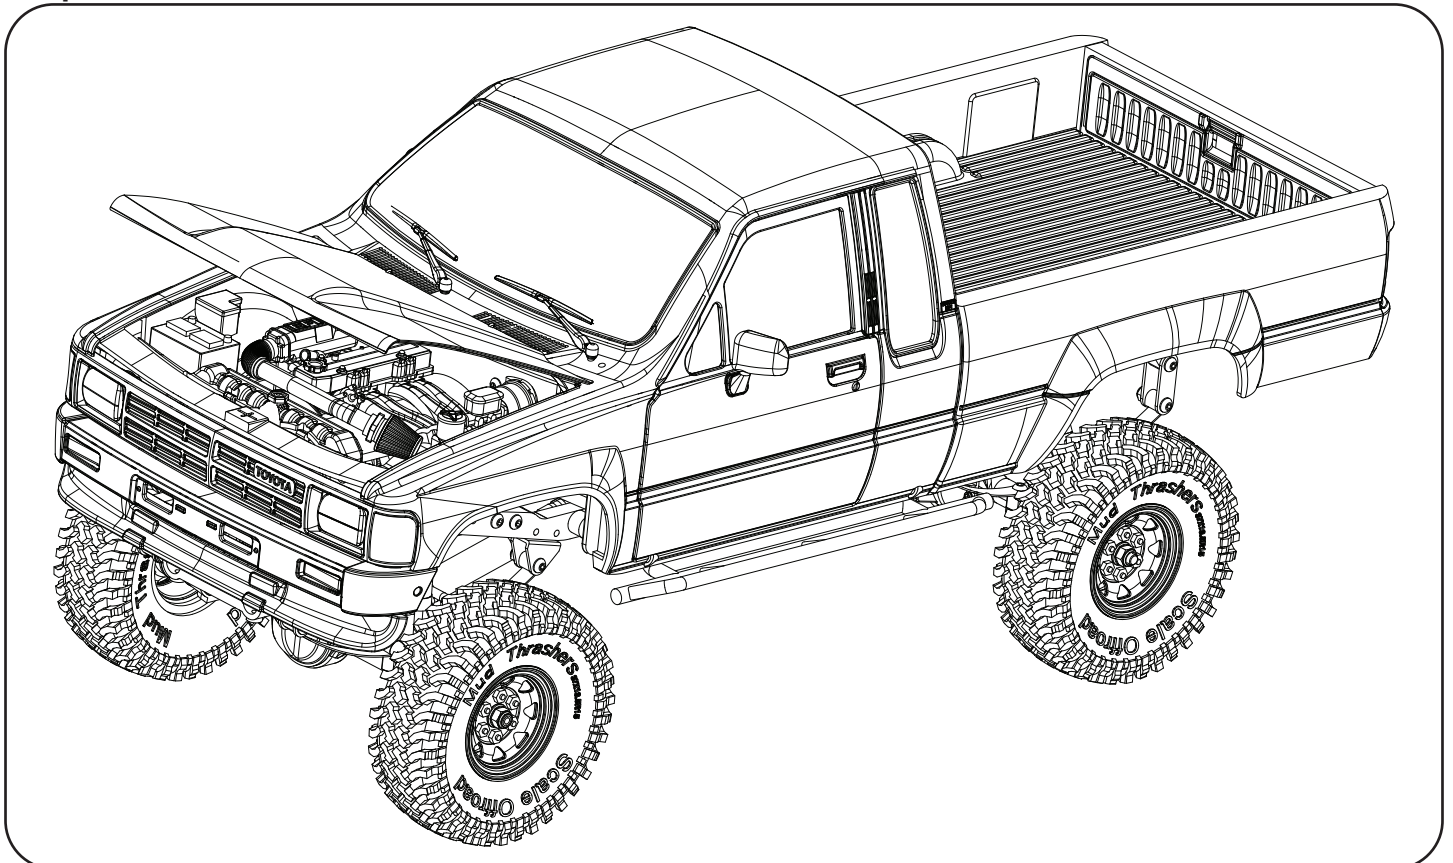




Z-B0247 Yota 22RE Engine Bay for TF2 Chassis

Step 12. *Install in the TF2 chassis*

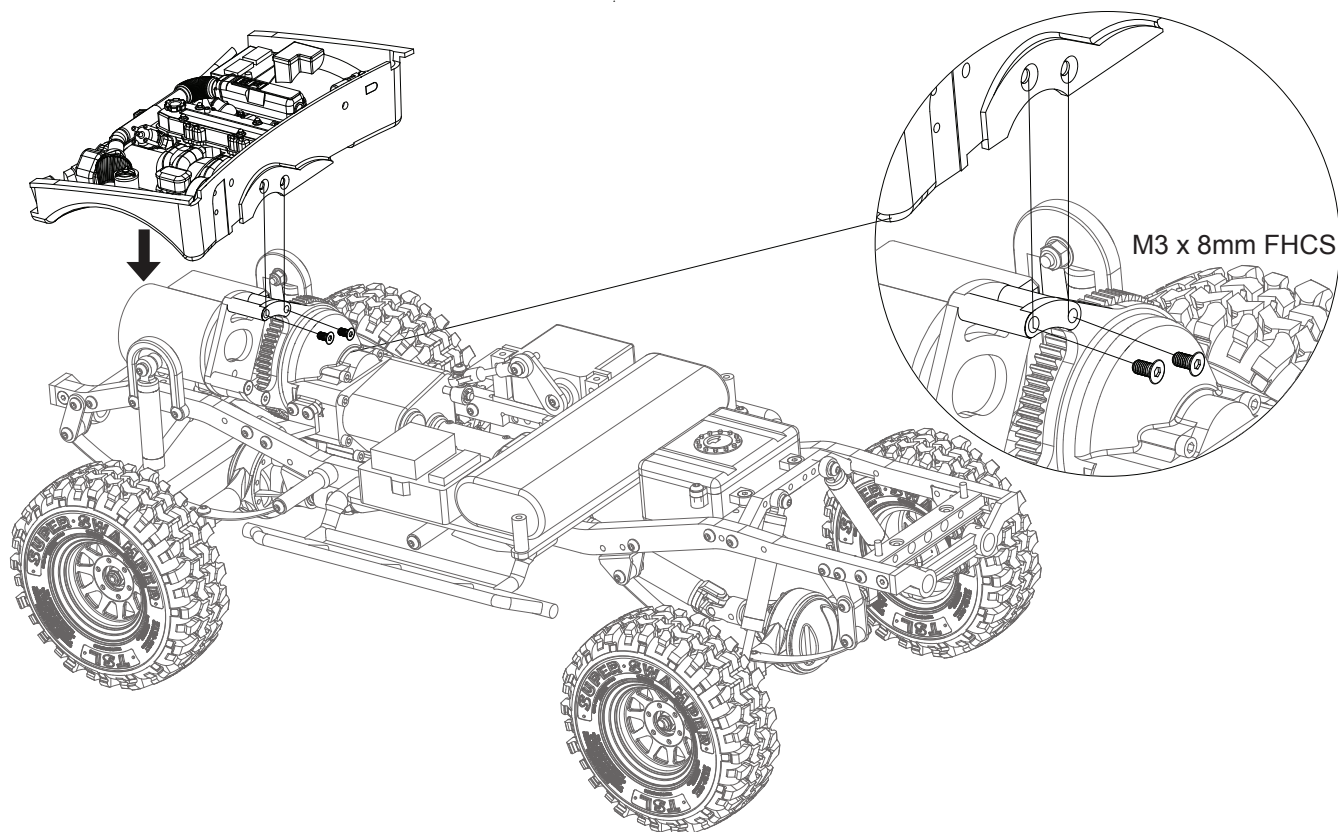


Step 13. *Install in the TF2 chassis*

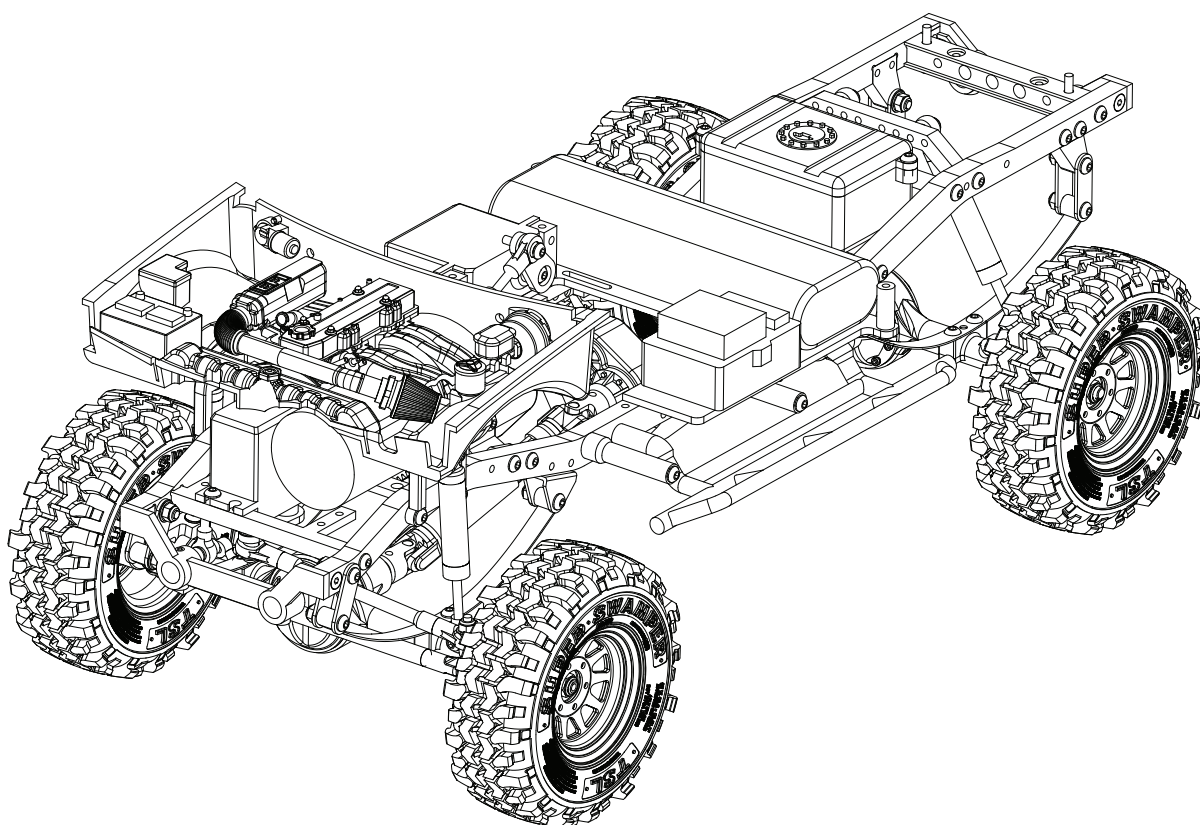



Z-B0247 Yota 22RE Engine Bay for TF2 Chassis

Step 14. Install the decals

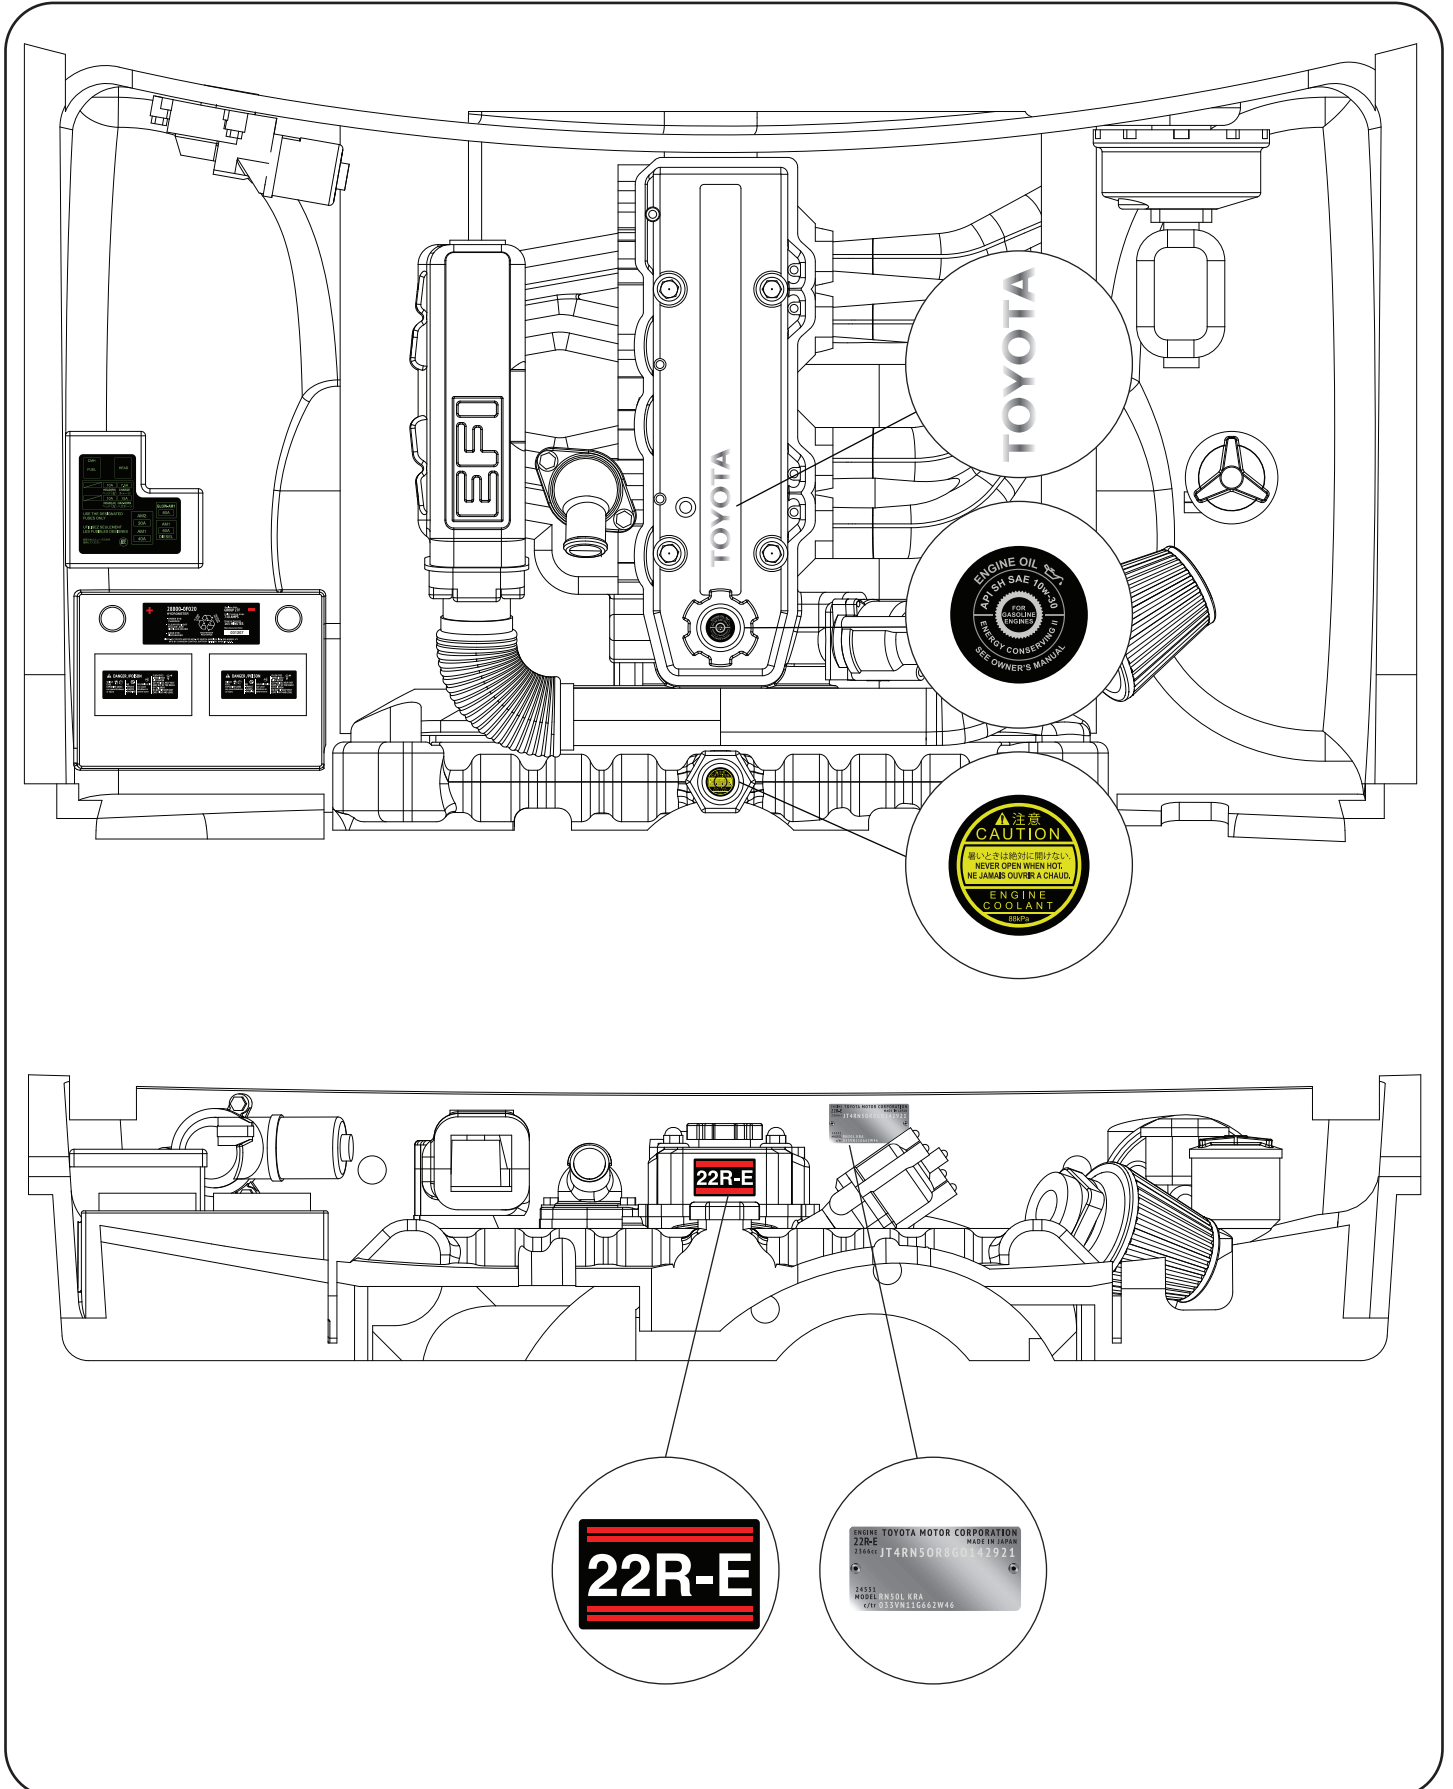

[illegible]