



No. DA-AM-EXR7

※ 组装前，请透彻理解说明书的含义（可到微信群或Facebook小组提问）。
Before assembly, please understand the instruction thoroughly
(You could ask in WeChat group or Facebook group- "DriftArt2 guide and share").

7075 EX-Arm-Rear

Infinite Extention 7075 Alu. Rear Lower Arm extend ranging from (0-6mm mono -side), (0-12mm bi-side). Its precision structural system includes finite adjustment , locking hole, shock-holder lock-screws , ensure extreme flexibility, durability, adjustability and stability supporting all 1/24 to 1/28 scale model.

蚊车无双 无极金属后摆臂

7075航空铝，单边0-6mm/双边0-12mm伸缩，无级调节。
适配所有24-28车壳。在方寸之间，锁定孔，避震孔，伸缩孔纵横交错，精度与强度齐飞，气质共颜值俱佳。

Product picture



Parts list



Assembly instructions



Make sure there is smooth movement here, if it is tight, please sand it a little with the sanding stick. Do not sand over, resulting in larger voids.
请确保这里可以顺畅活动，如果这里是紧的，请用细打磨棒稍微打磨。不要打磨过度以致产生明显的虚位。

7075 Toe-in Block.




Nylon Toe-in Block



Tiny drop of watery screw-adhesive here.
在这里使用低强度螺丝胶，防止螺丝掉落。



Optional ball head, (need to purchase separatly) screw glue free.
可以另购球头来代替螺丝，就无需使用螺丝胶。

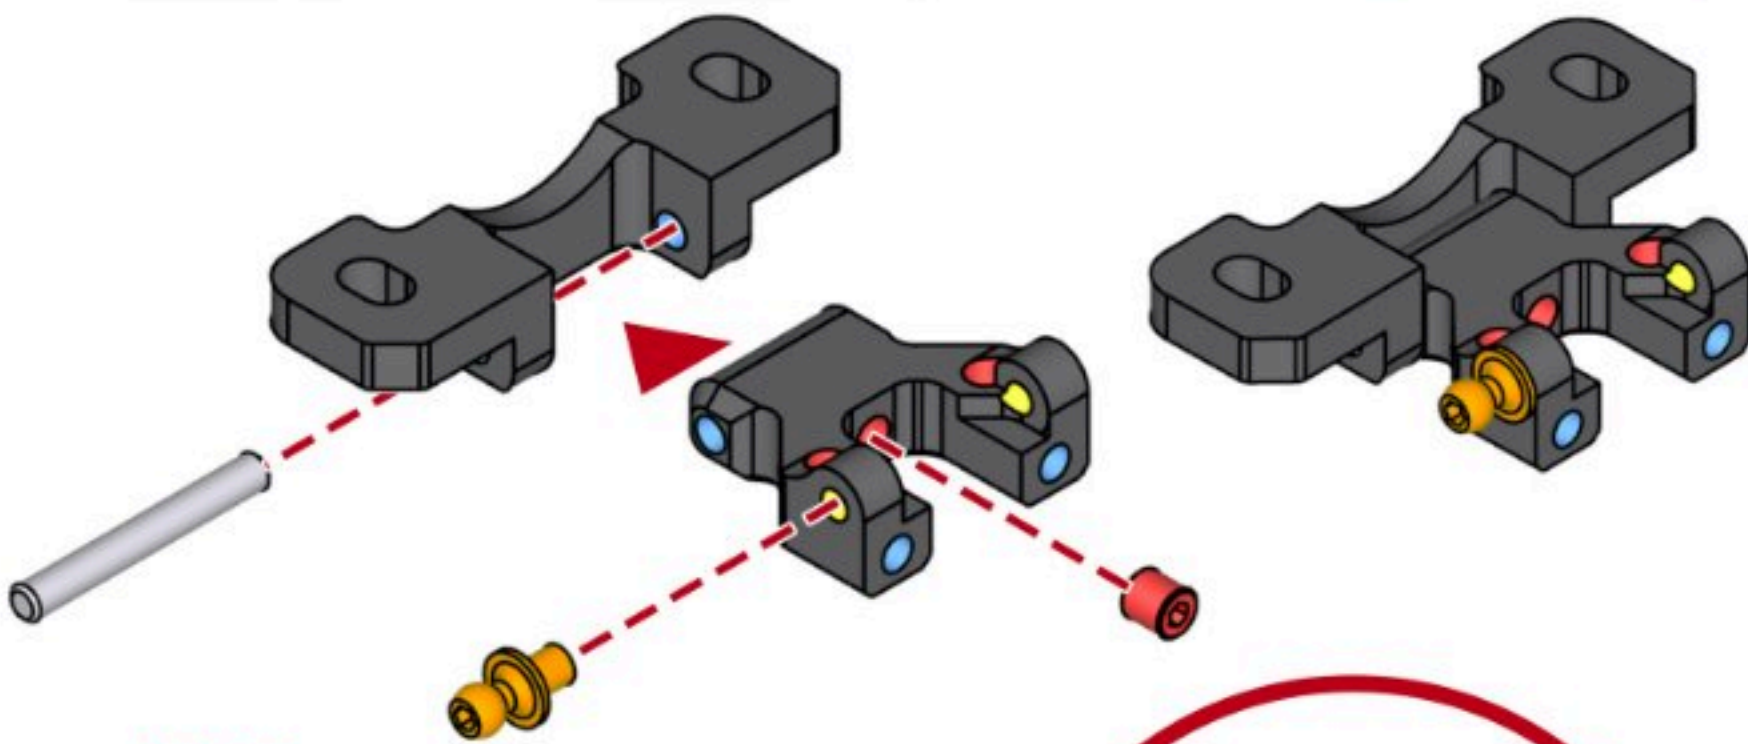

Notice:
M2x2mm screws will lock the steel pin. Loose it before removing the pin.
注意：
M2x2mm 螺丝会把钢针锁住。在取下钢针之前，请松开这颗螺丝。



Switch long/short pins to achieve different extension lengths.
切换长短钢针，实现不同的延长度。

