



PRODUCED BY
MIRCO DESIGN WORKSHOP 2019
FROM DALNY & NAGGASAKI

R


Drift Art2





@ART蚊车无双

For Drift.Fun.Art :-), to those Alone.Racing.Talents.


组立手册
Assembly
instructions

V1.00
2021/3/1

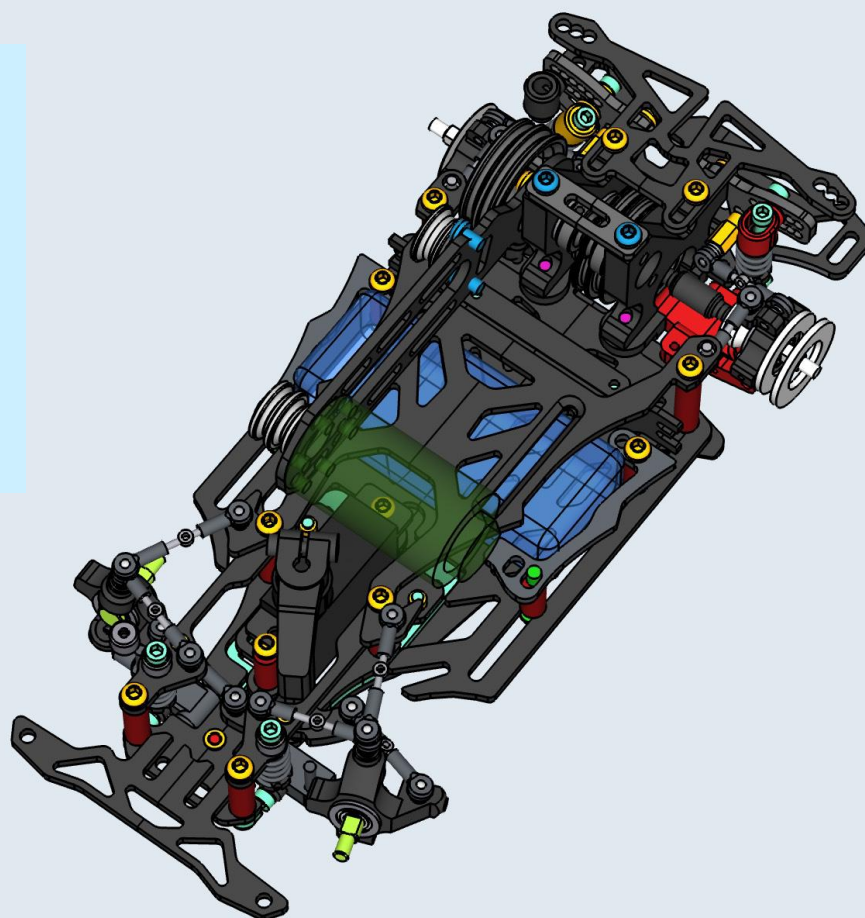


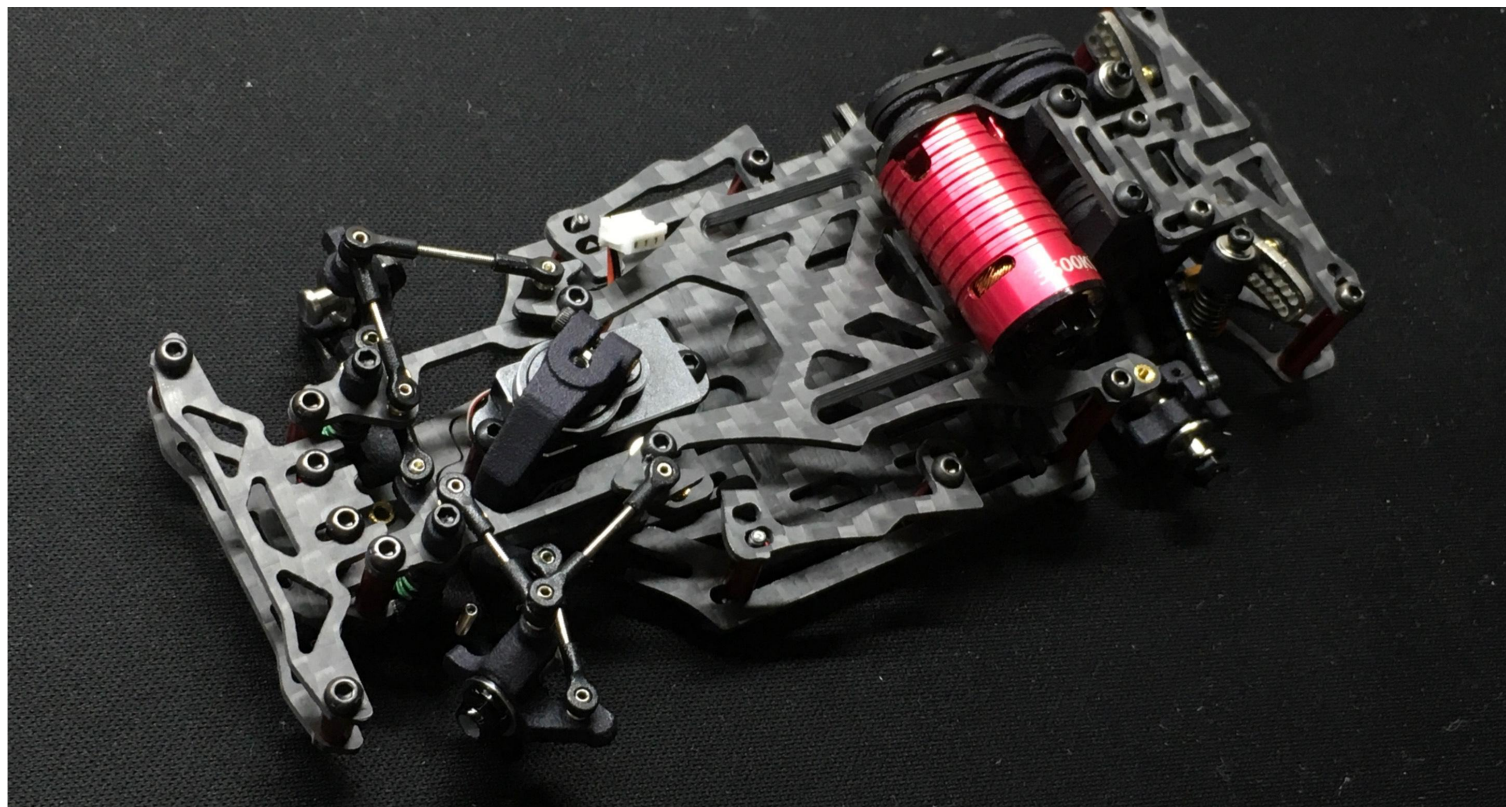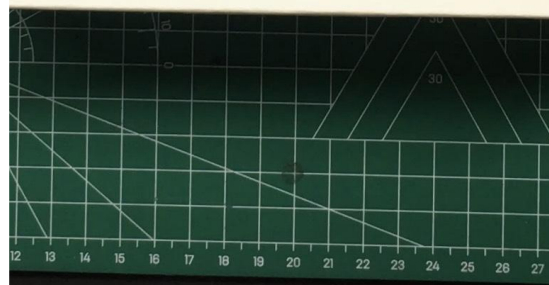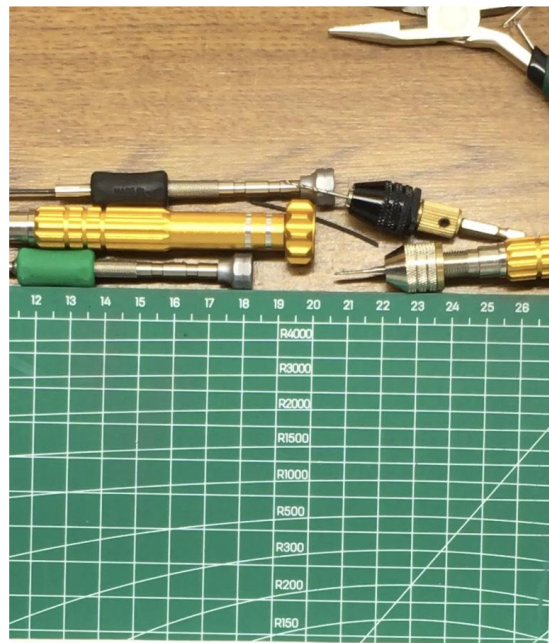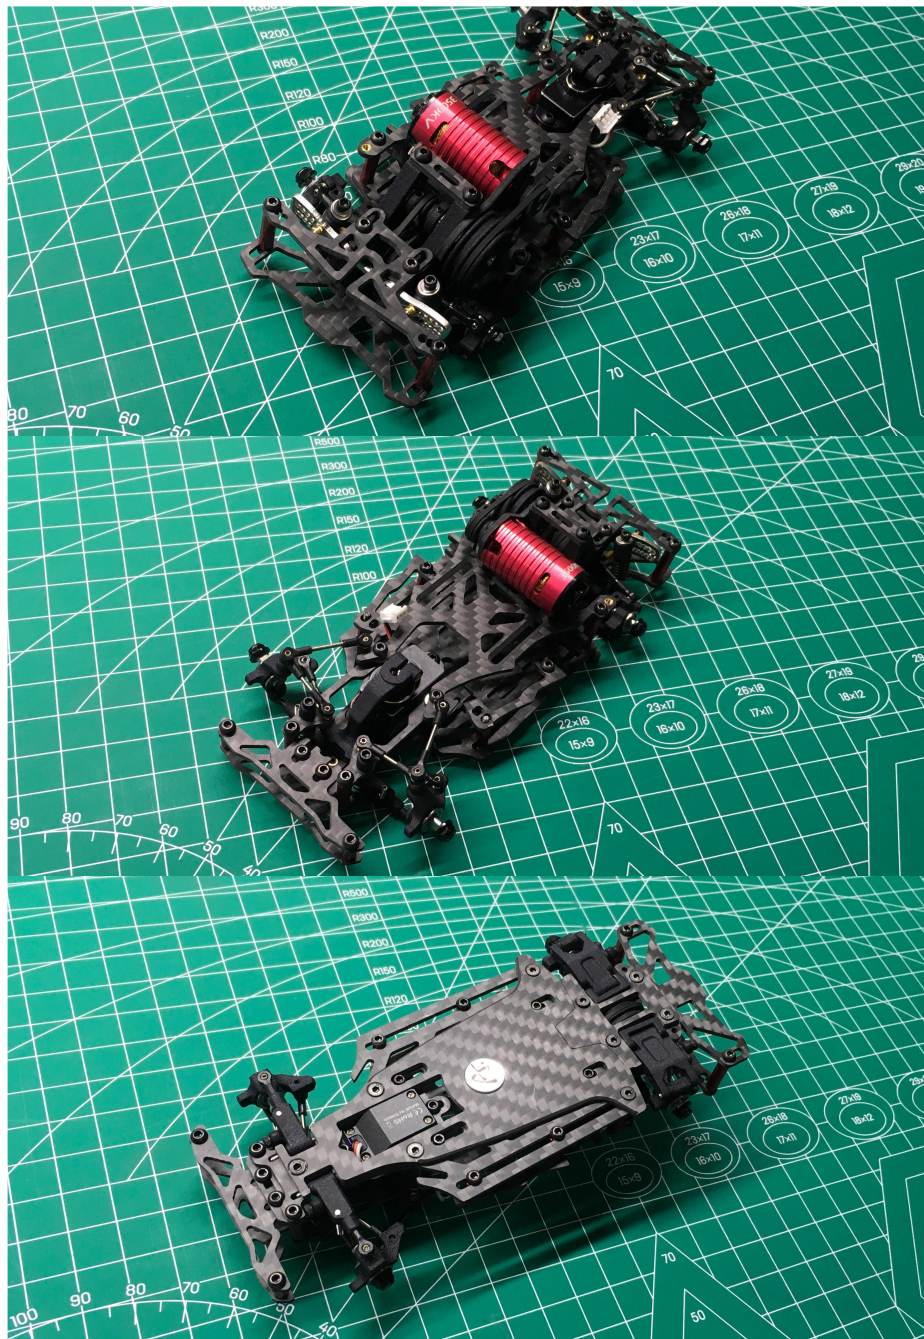

You must know this.

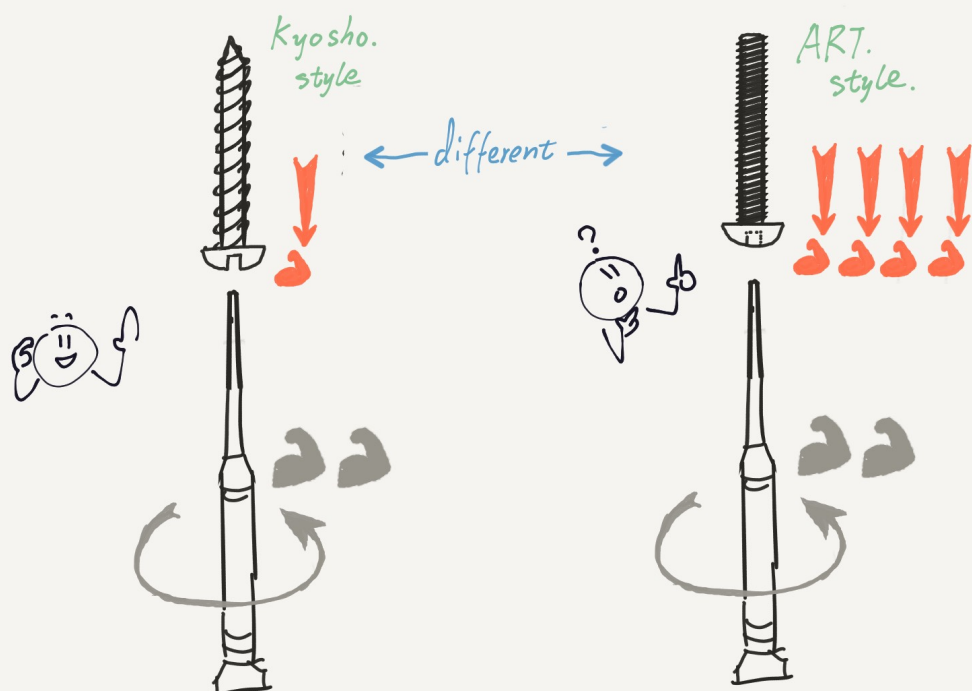

Choose wisely.

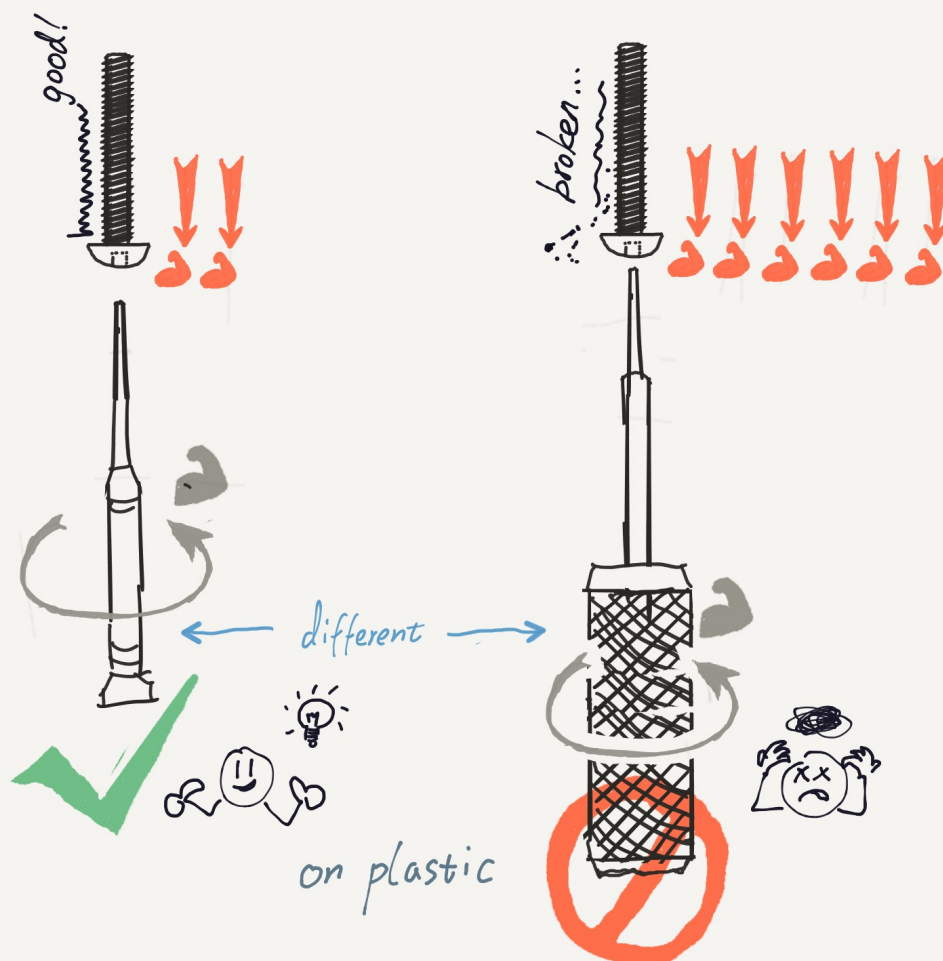




很好。
Good.

可以，要谨慎。
Ok, be careful.


不要，
除非你非常小心！


Bad!
Be very careful!!

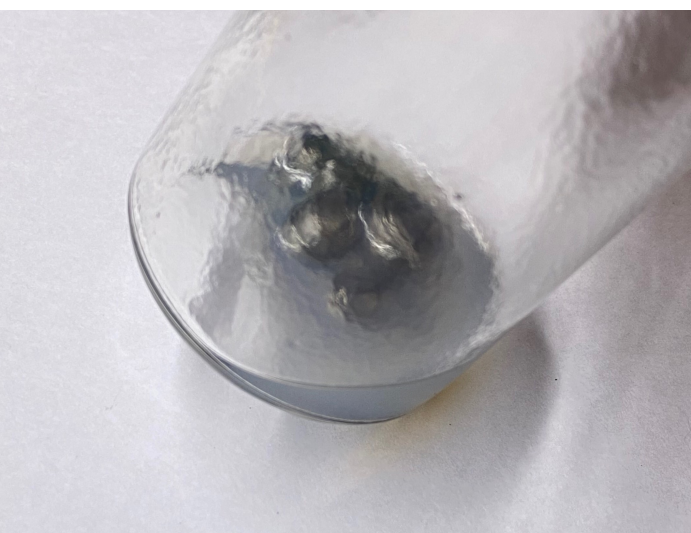

非必要步骤，
有条件可以做。

if you could,
Will be good.

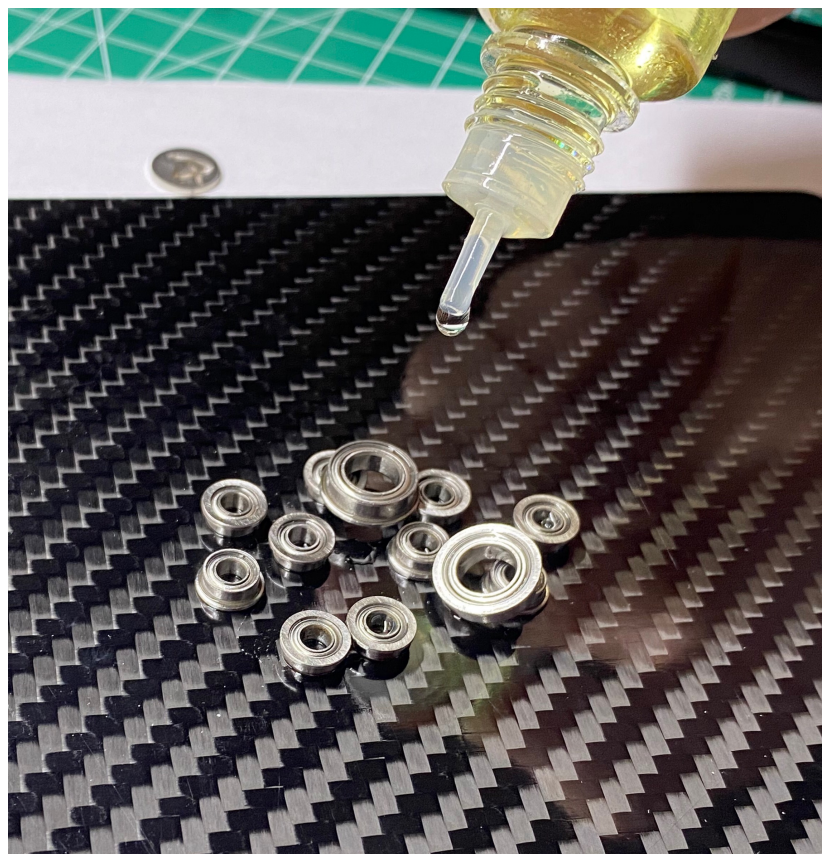

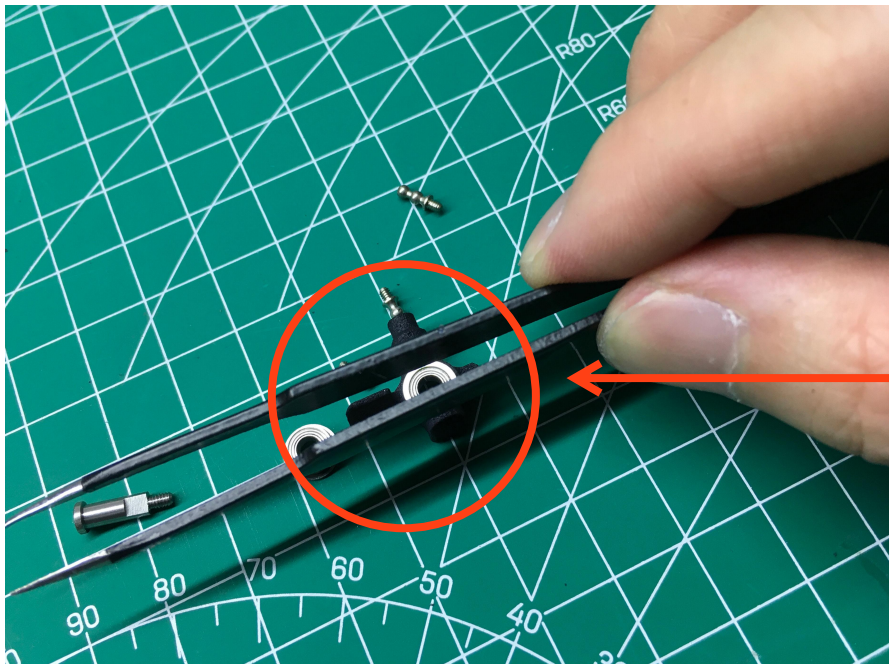


小技巧 Tips.

外侧轴承放置在于桌面并押入；
内侧轴承用镊子押入。
！ 请注意合理的受力点！

Use tweezers flexibly to push the bearing into the hole.

B-side VS U-side

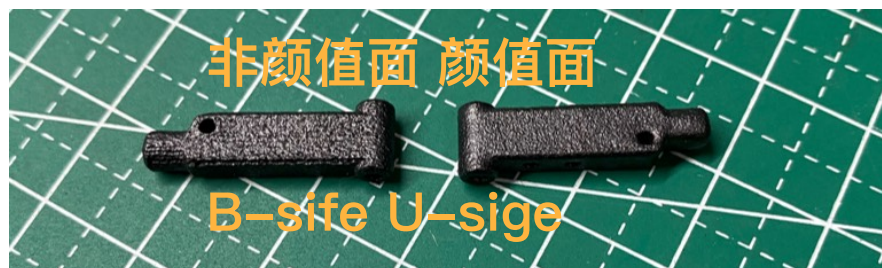


颜值面/非颜值面。
颜值面应置于经常被看到的方向。
摆臂的颜值面应朝下；
波箱的颜值面应向外。


Beautiful-side/Ugly-side.
the B-side of the arm should face down.
B-side of the gearbox should face the outside.



ART,从这里开始
Start at here,plz.




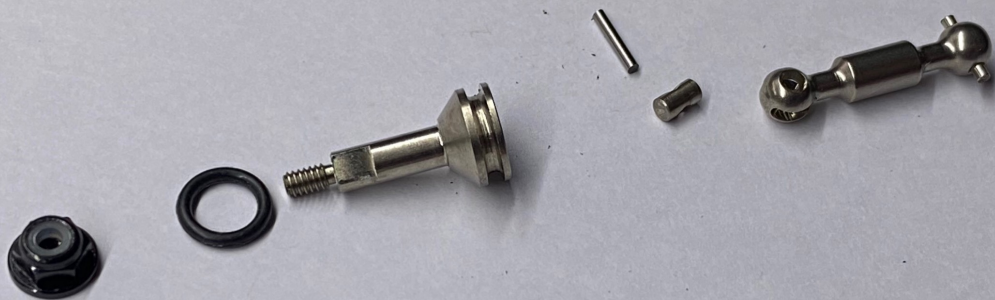


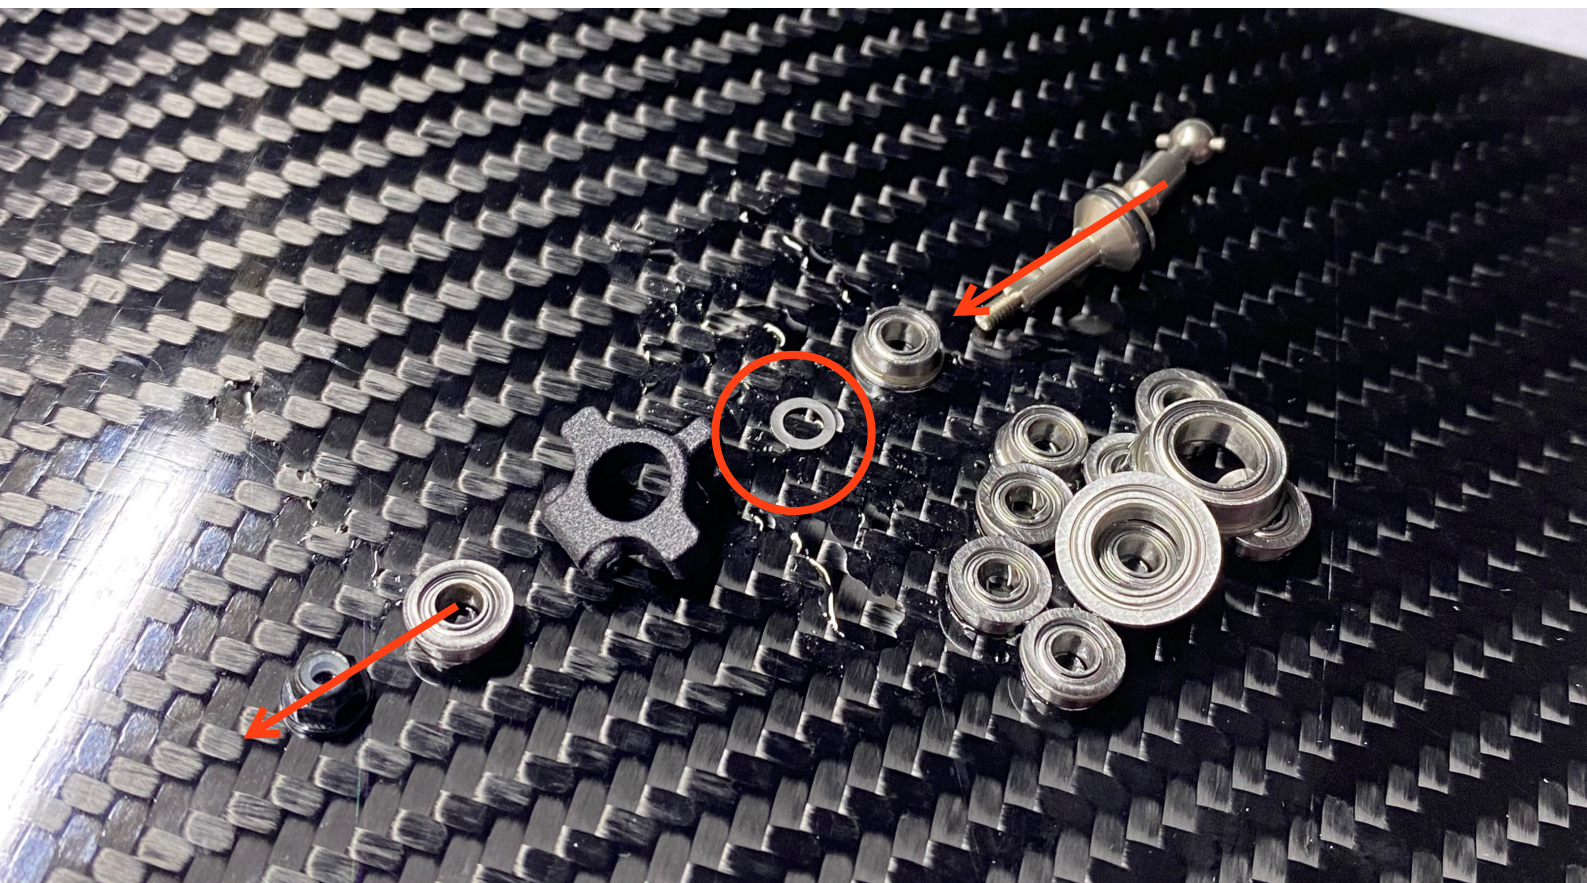





适当打磨箭头处，达到顺滑的效果。
Polish here to ensure smoothness.

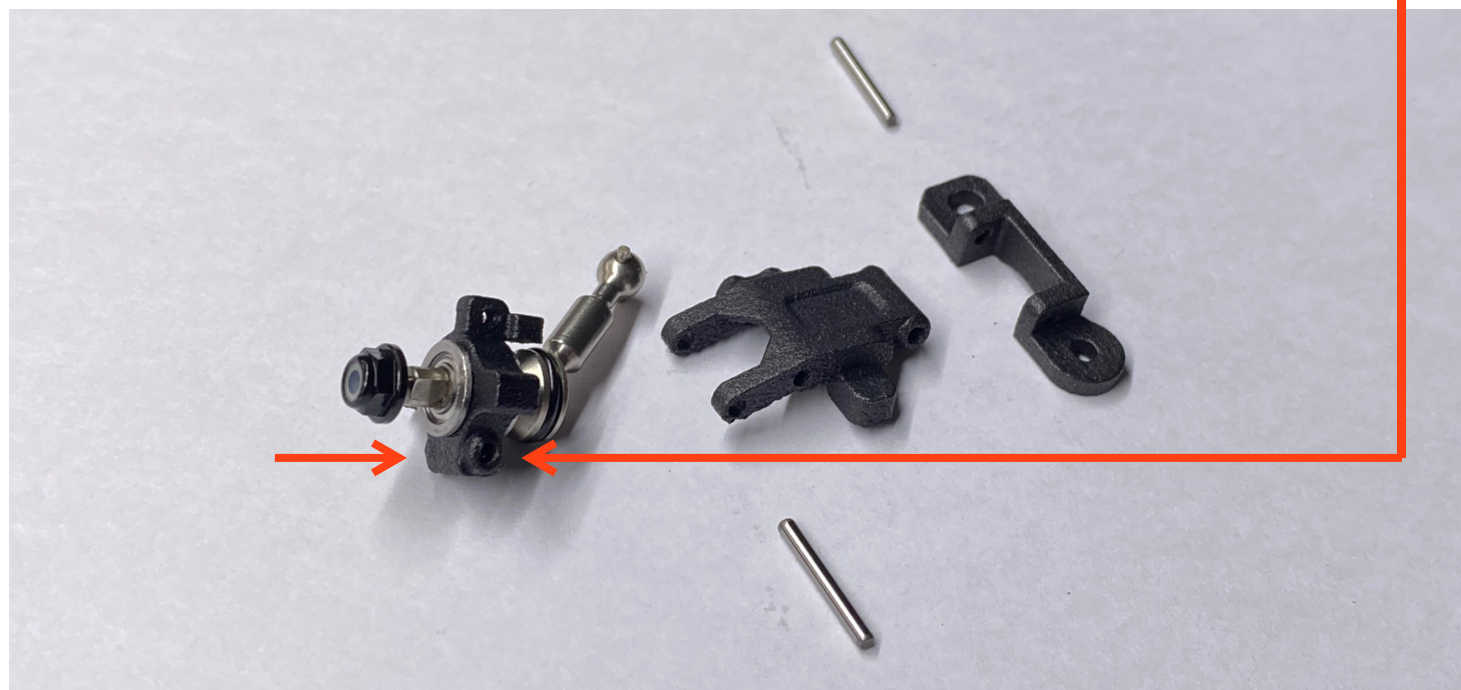

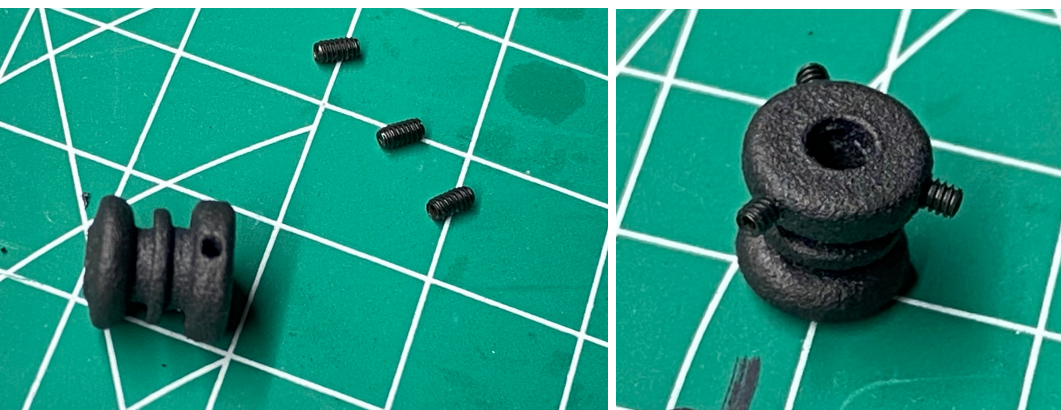

or

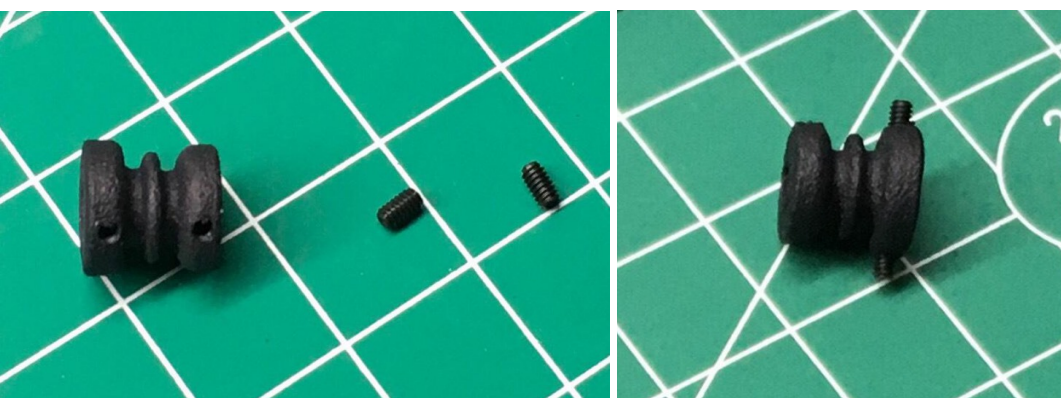

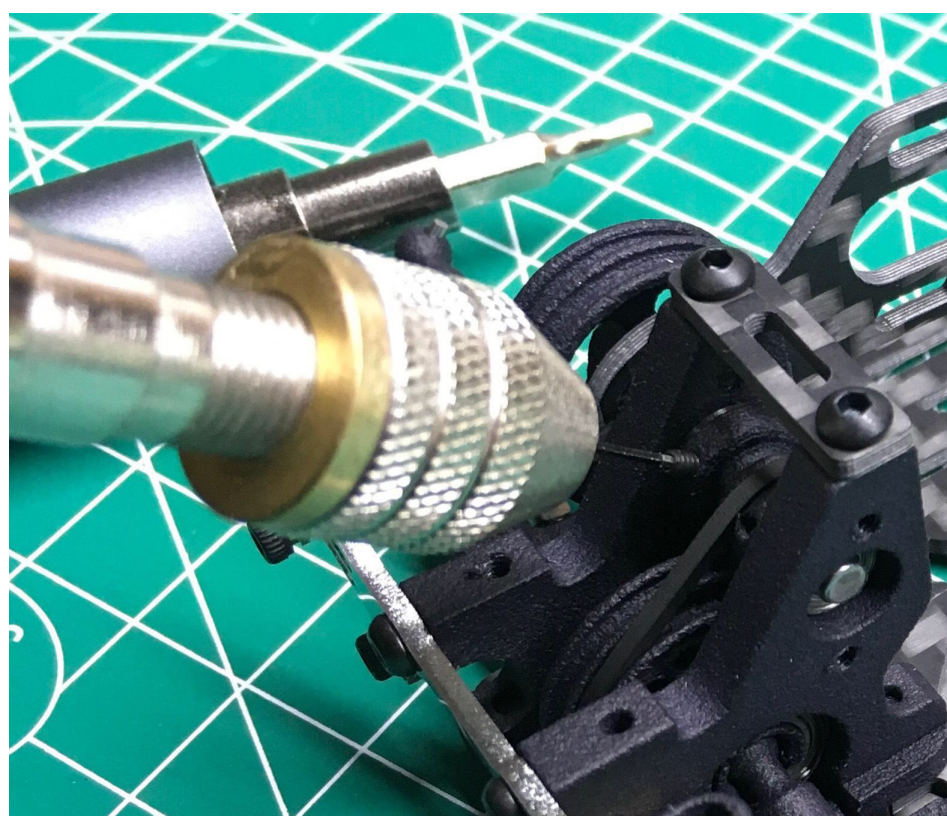



使用附赠的最小号L形扳手，
轻轻锁死机米螺丝
！！ 不该用力过度！！

Use the smallest L-
wrench provided,




Gently lock the screw
without excessive force! !





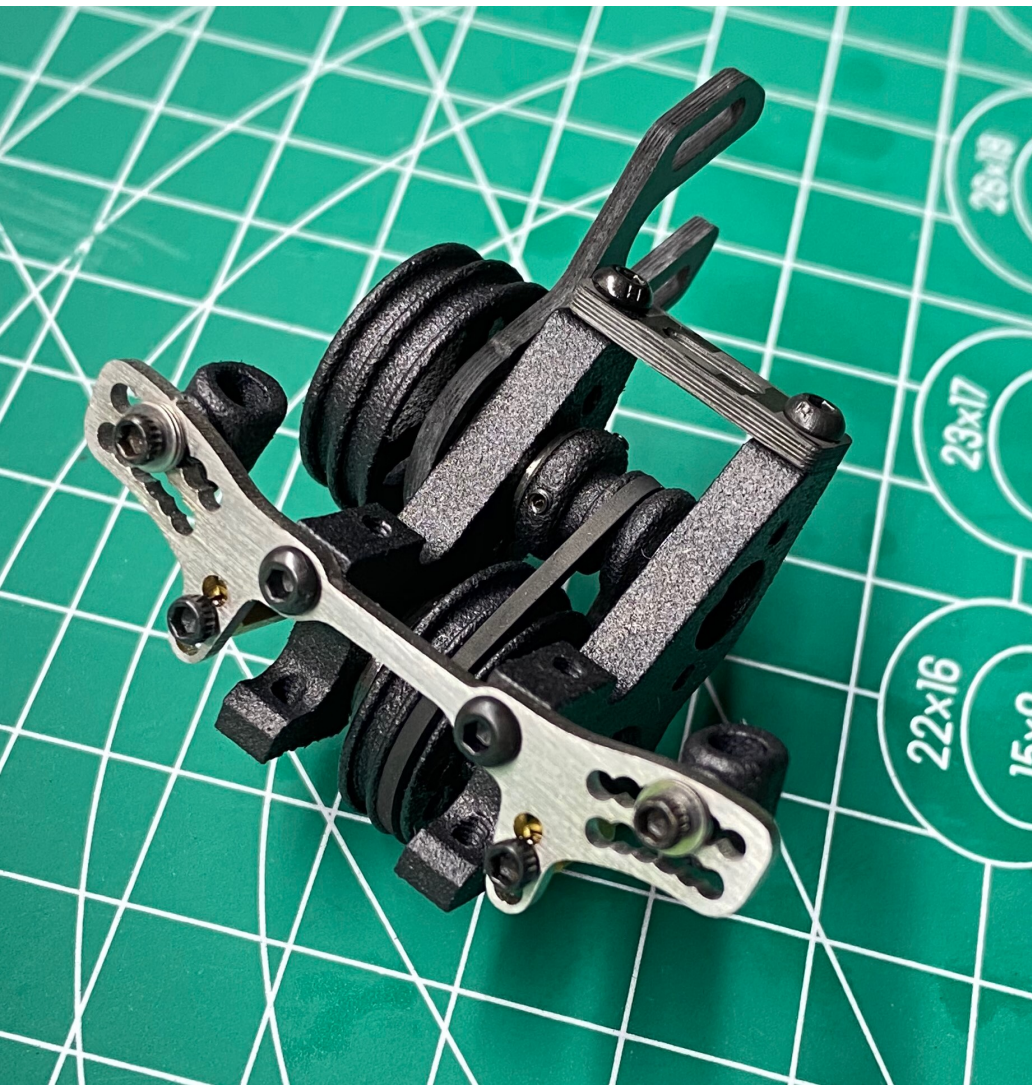

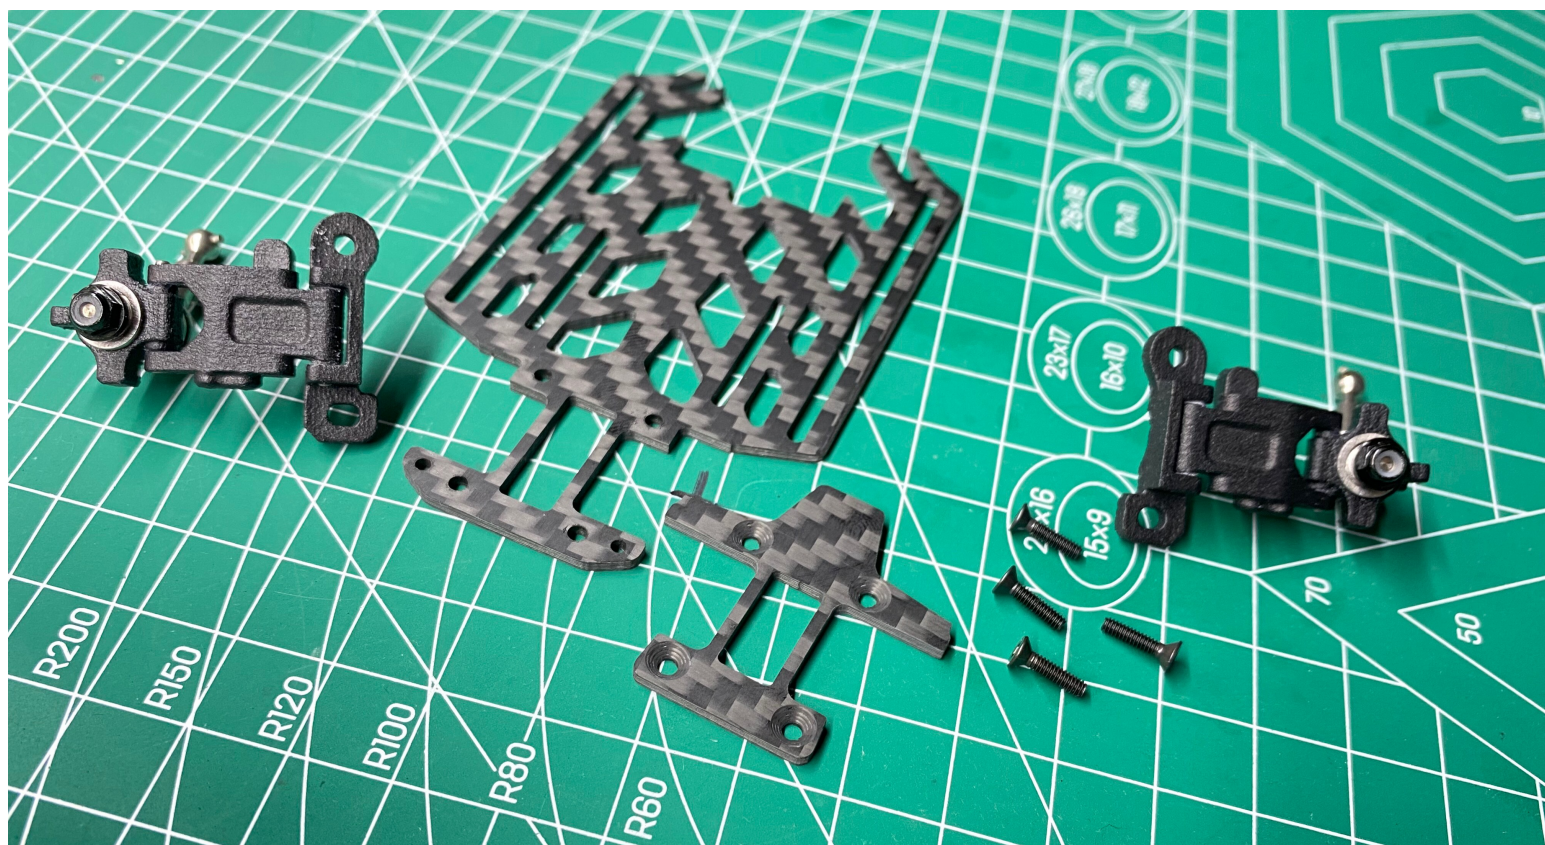

请注意这里的叠放次序。
Notice the three-tier structure here.

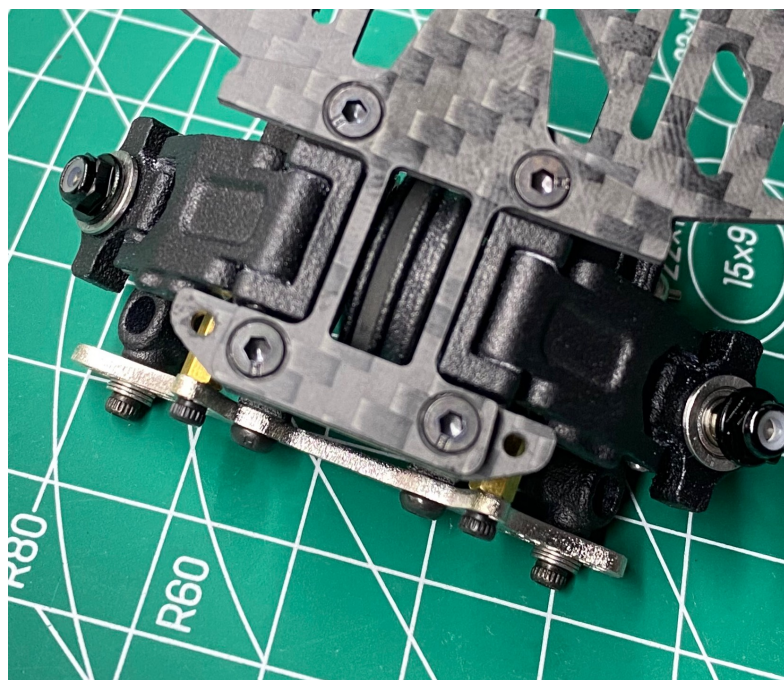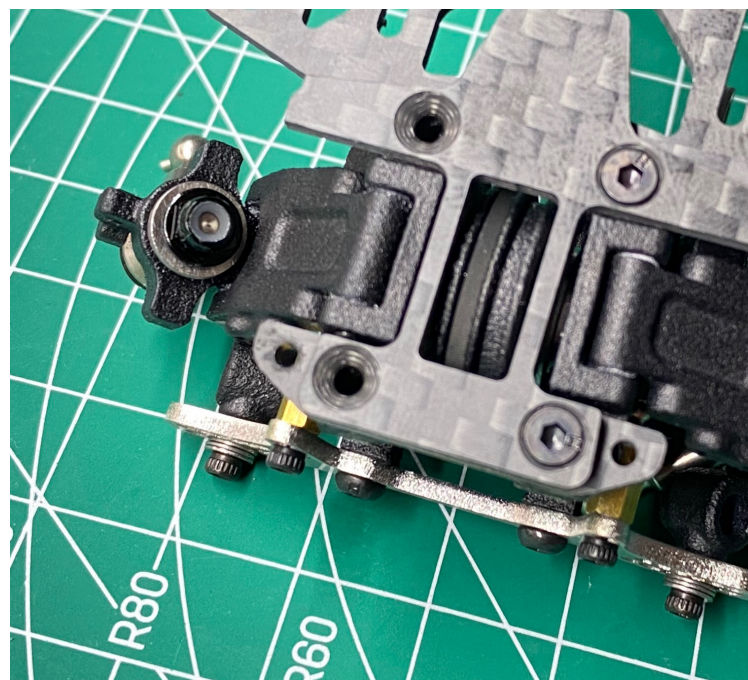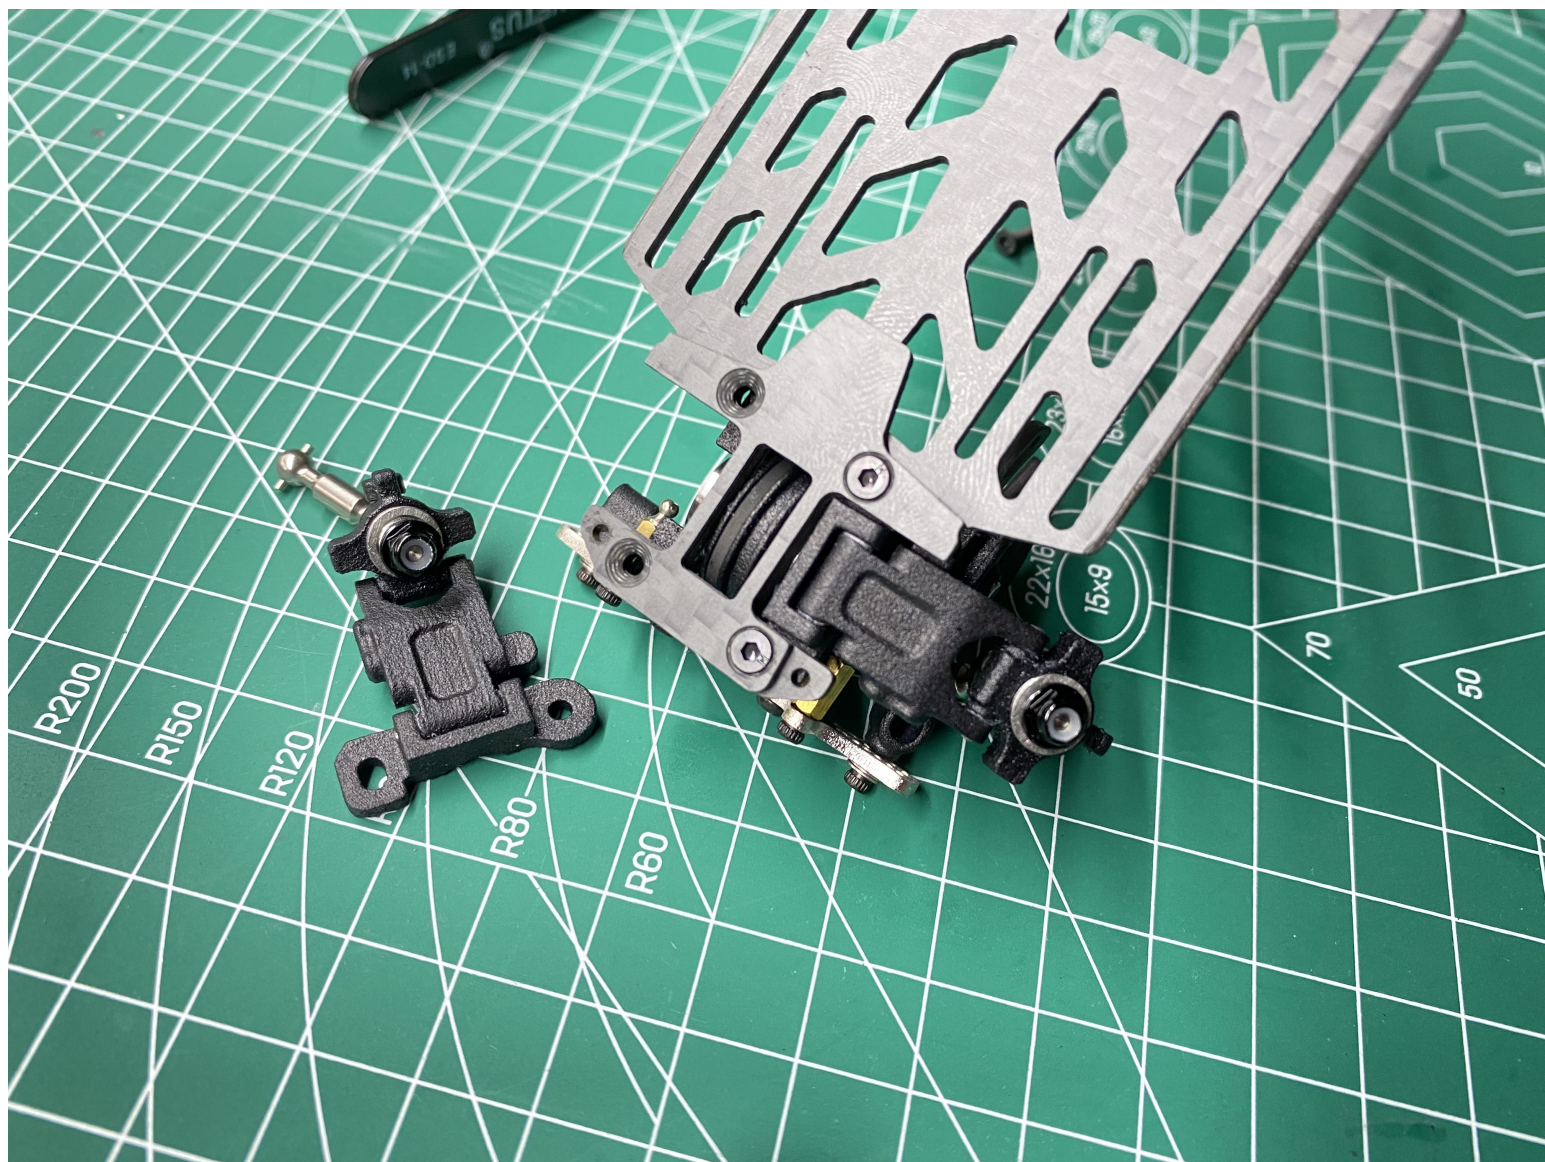


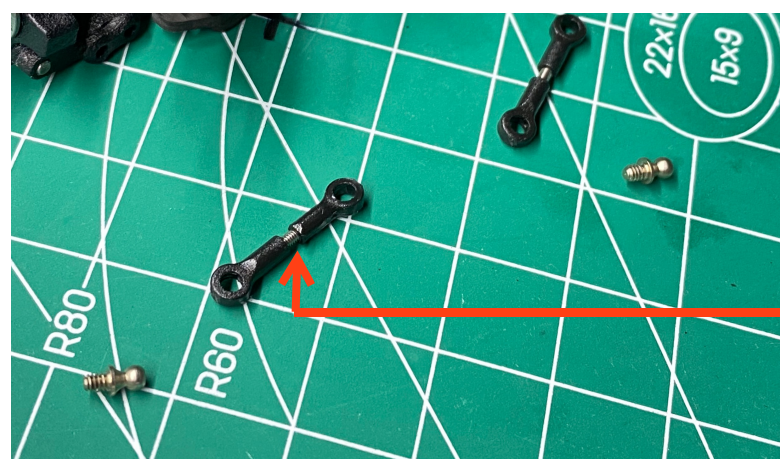
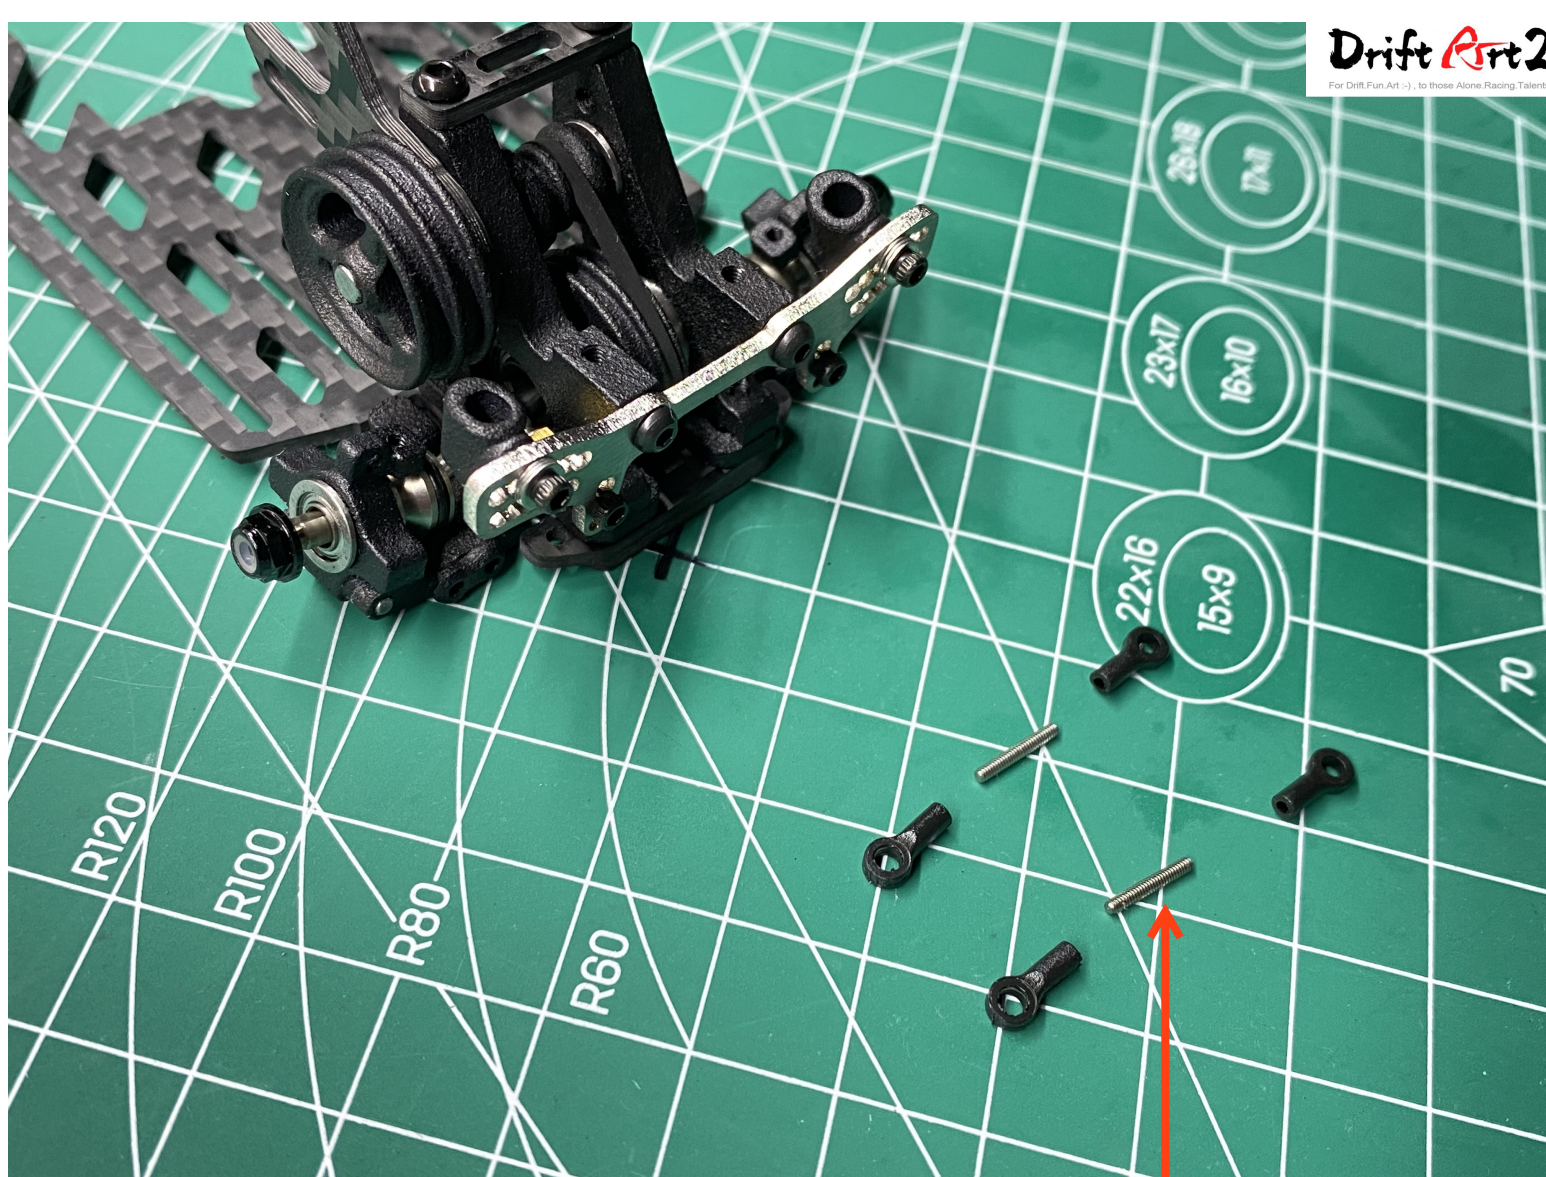



m1.2x8mm

间距1mm

spacing: 1mm

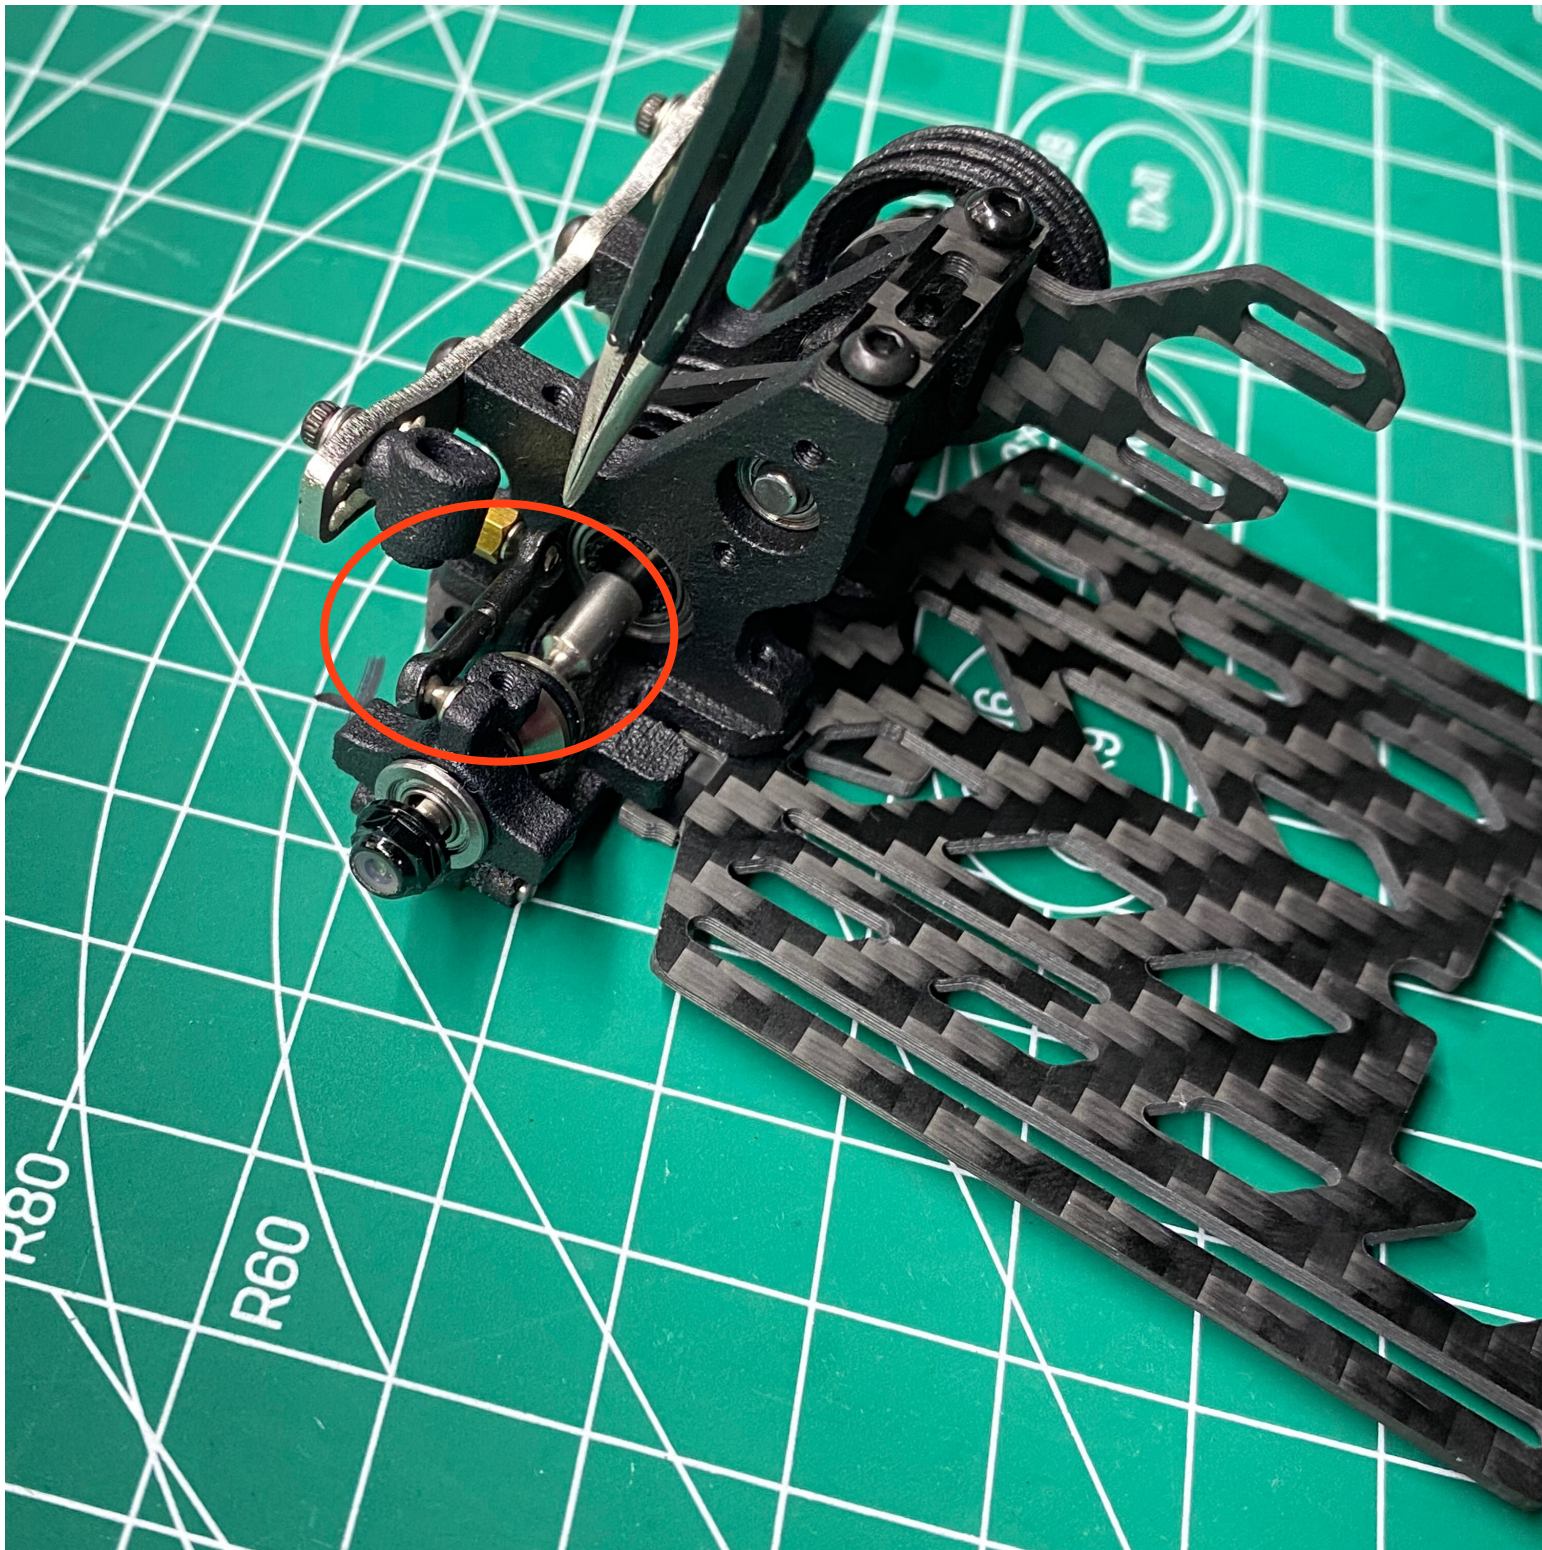

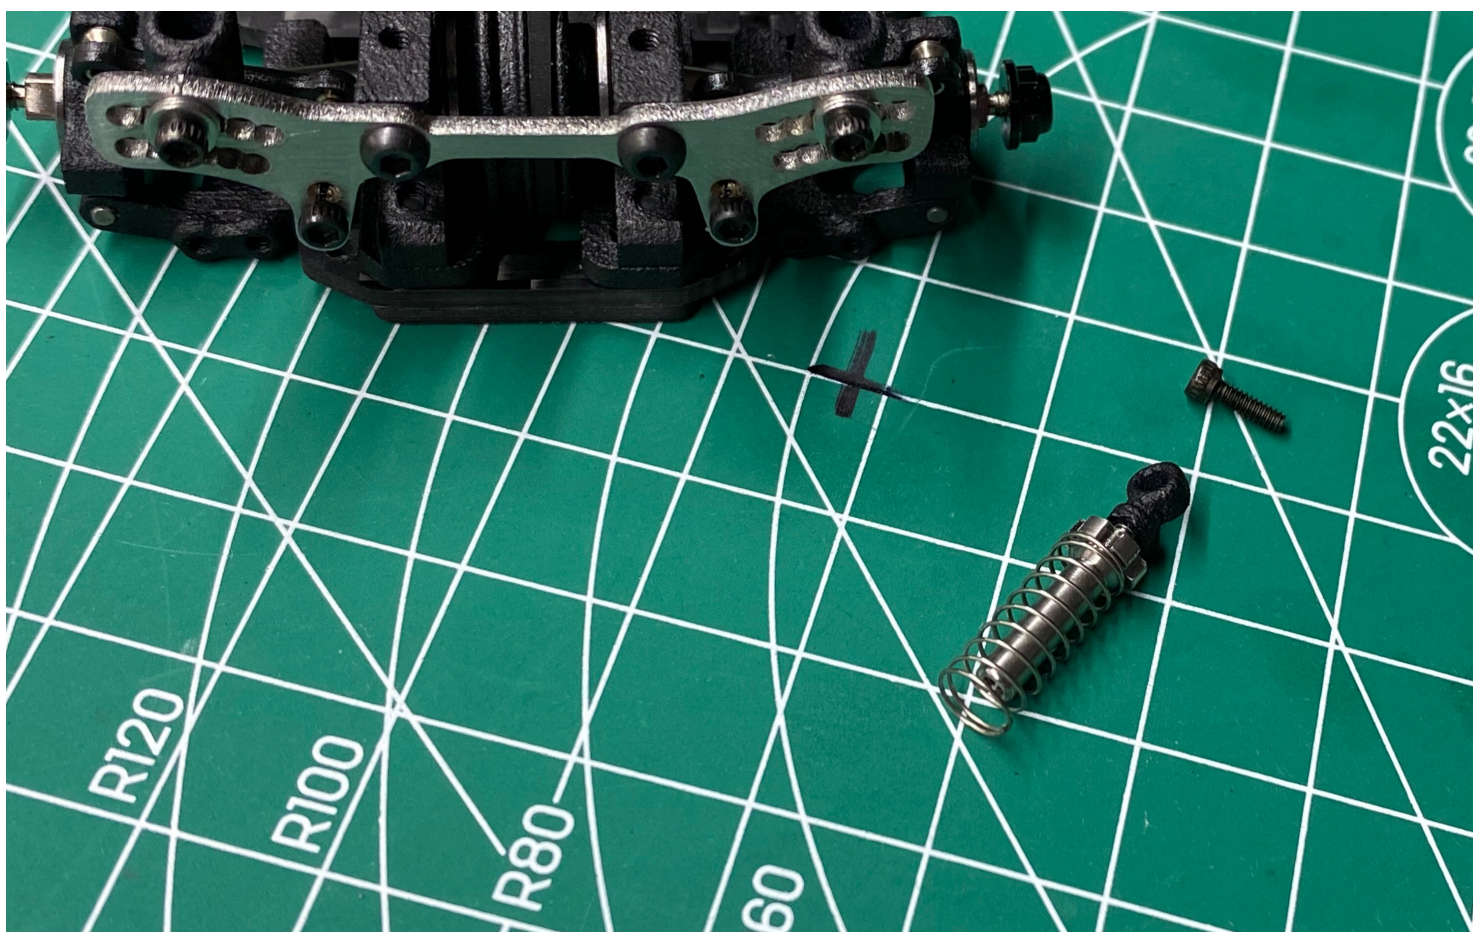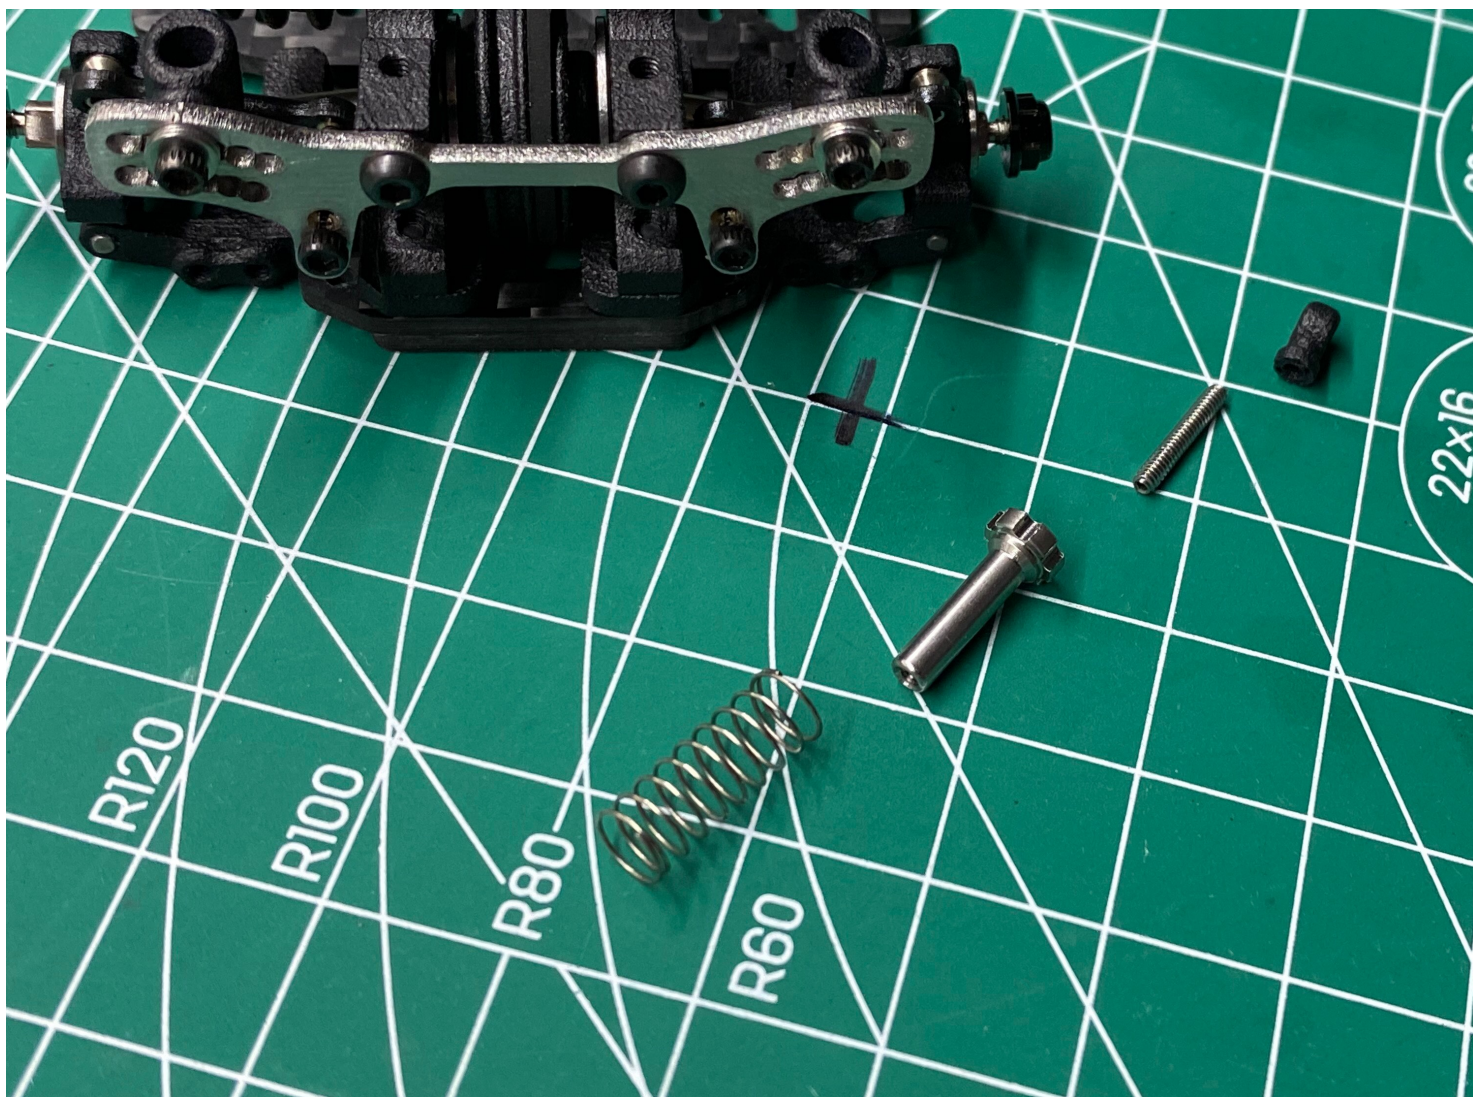

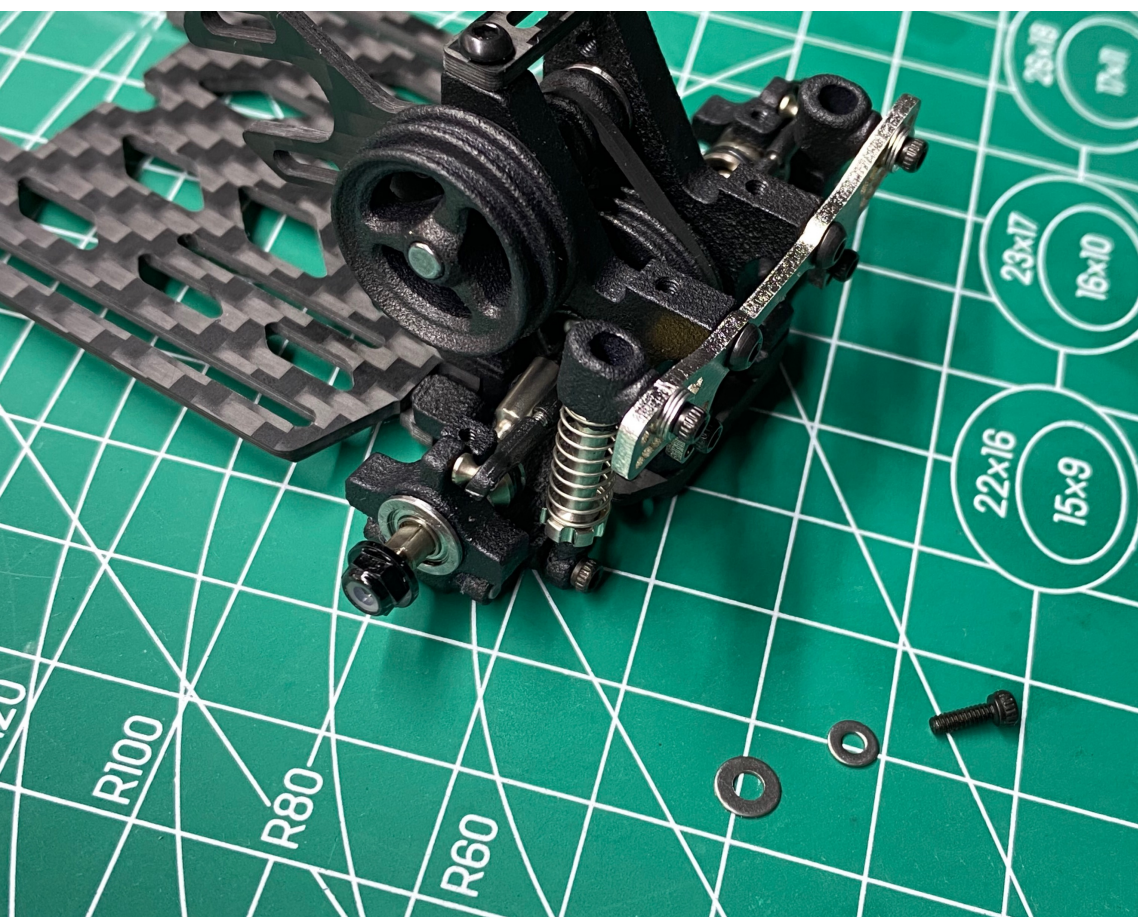


尾部完成！！
接下来 开始车头
XD

The tail is complete! !
Next, start the front
part!! XD



打磨箭头处以达到顺滑的效果。
Polish here to ensure smoothness.



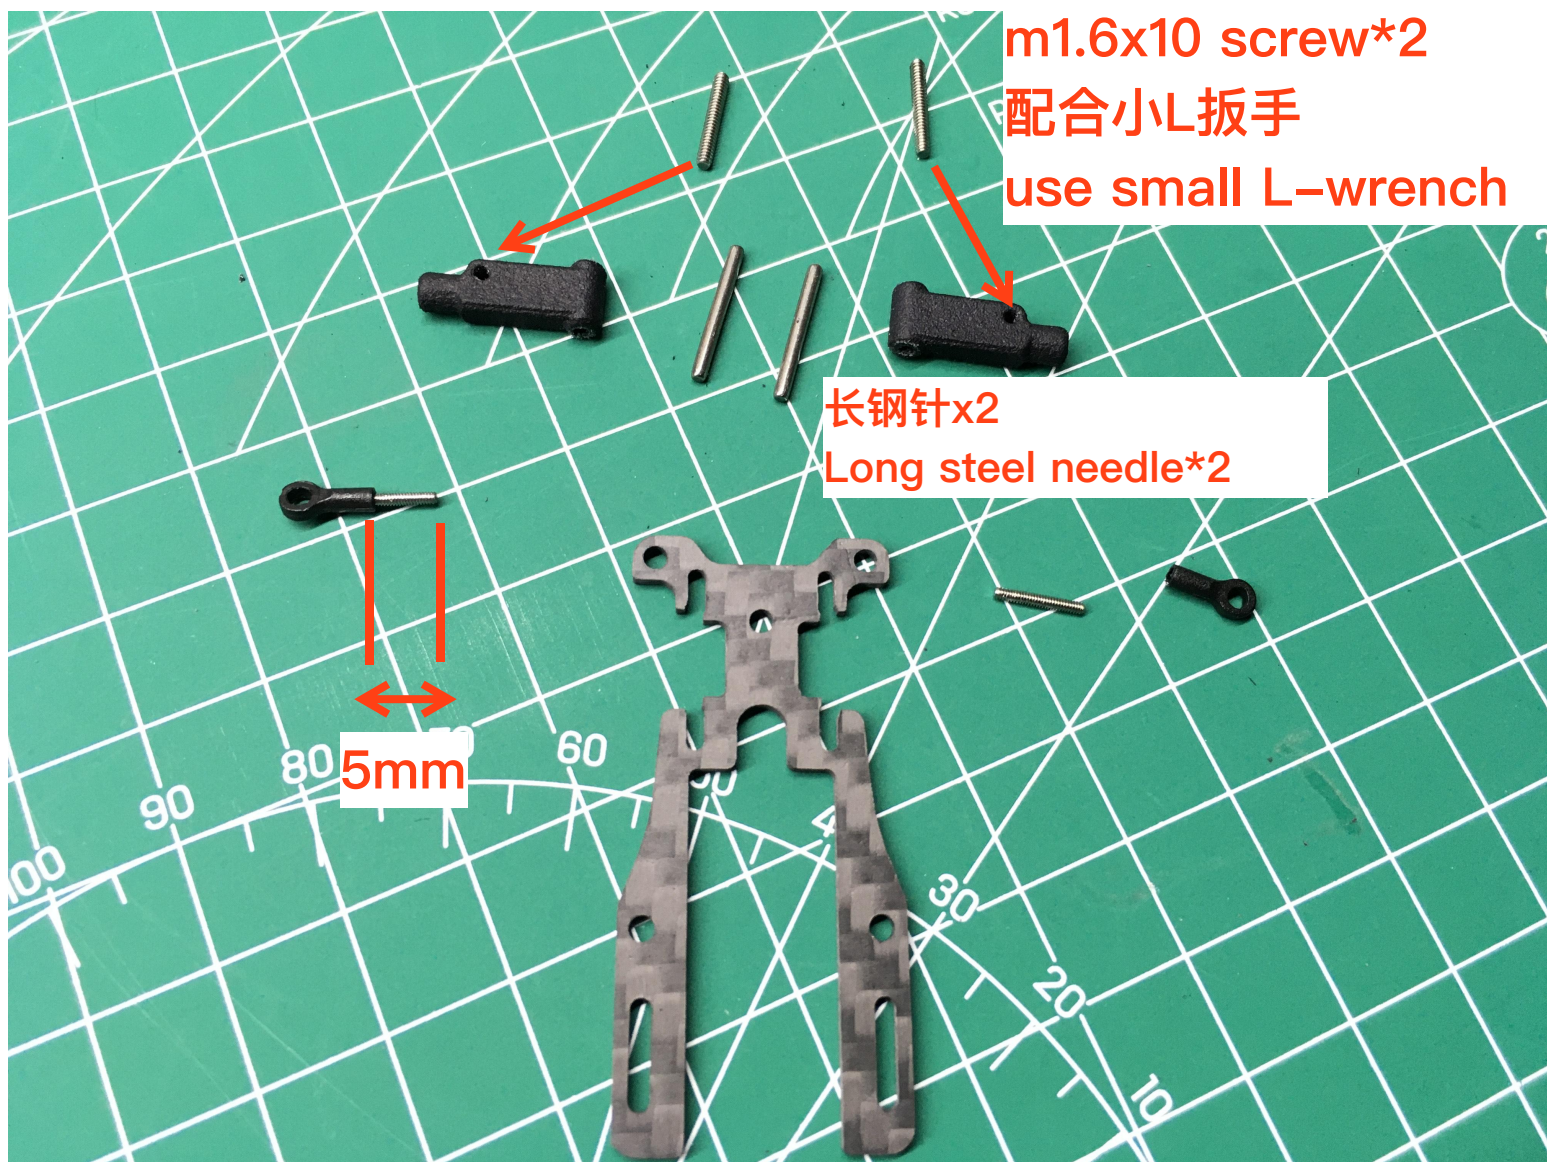


高能预警!

顺畅且无虚位,

•耐心&睿智•


Give your wisdom and patience

Goal: smooth and without shaking

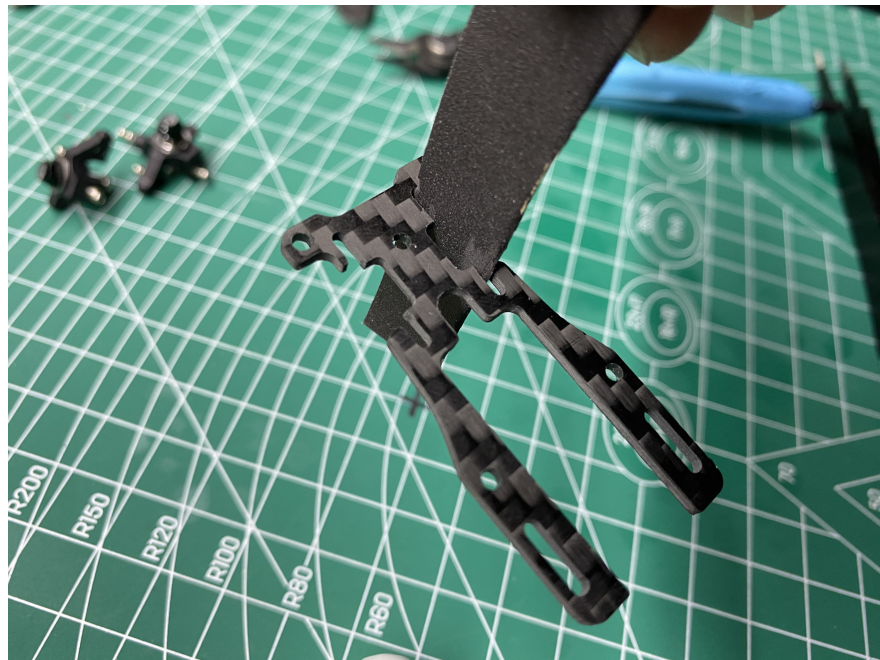

打磨此处凸点

Polish the bumps here

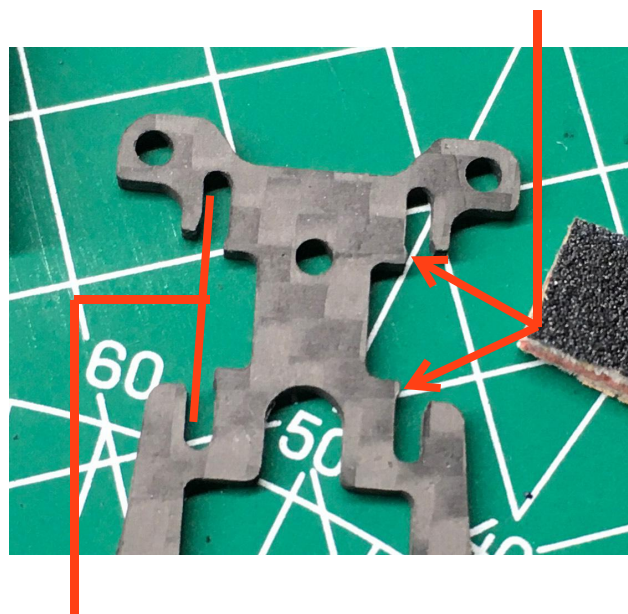

以附带的砂纸，
逐渐打磨红线处，
少量多次。

Use sandpaper Included,
Gradually polish the red line,
A small amount many times.


不断放入摆臂尝试，
目标：顺畅、无垫片、无虚位。
Keep putting in the swing arm
to try,
aims: Smooth,no shakingk.

安心提示——


此碳纤维件，标配X2，
练手一个，备用一个：)


This carbon fiber part comes
standard with double,
Practice one, spare one:)




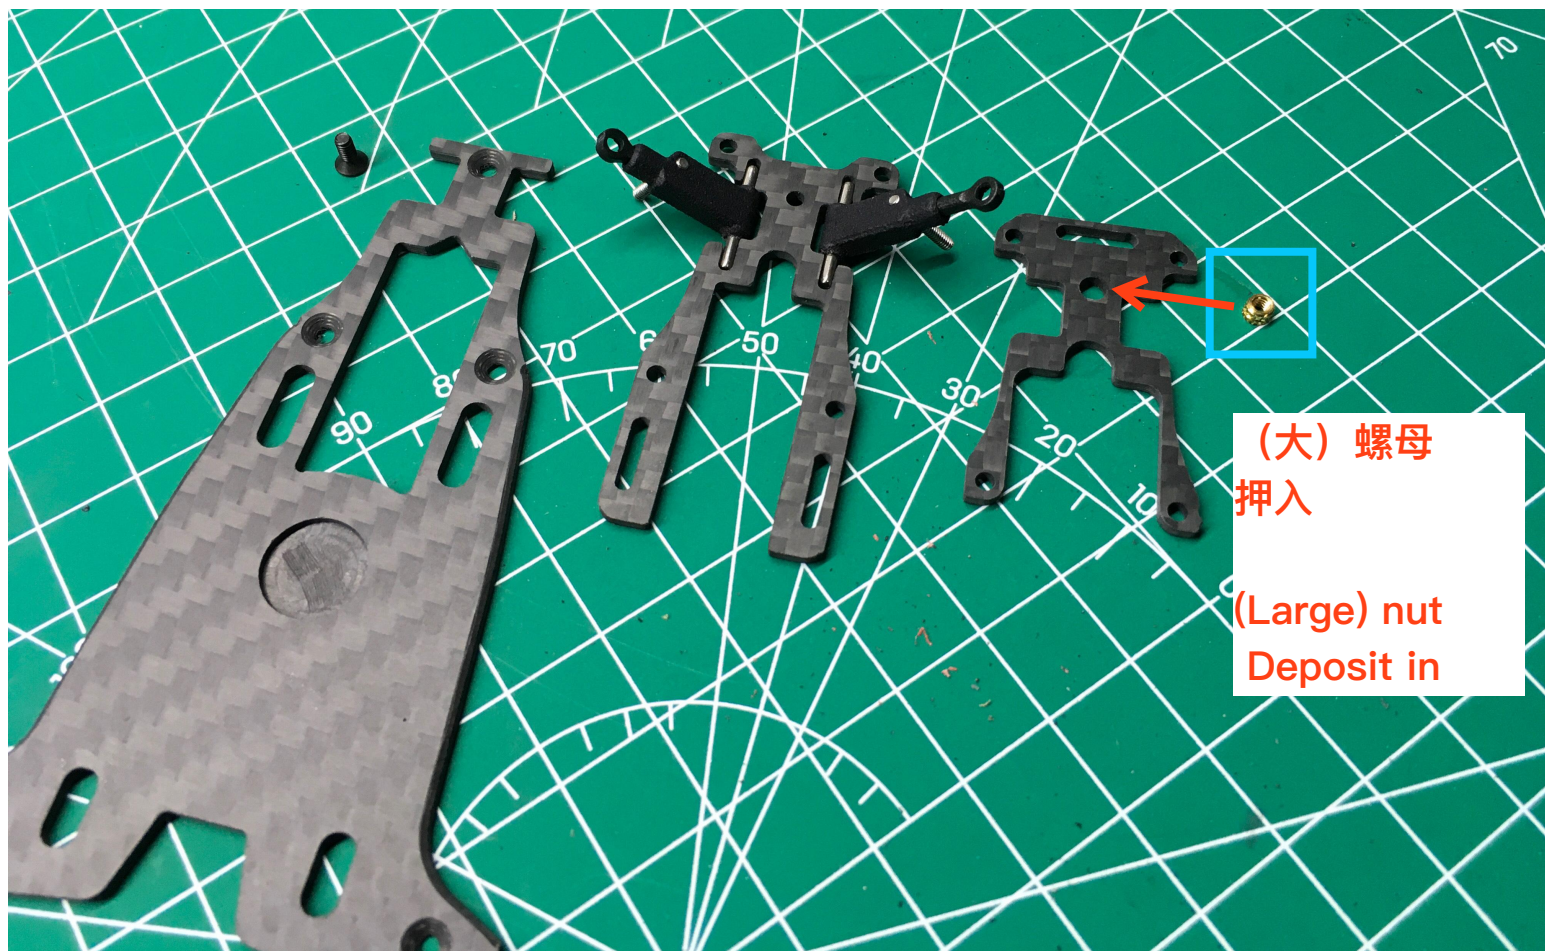

8mm铝柱x2
Aluminum pillar

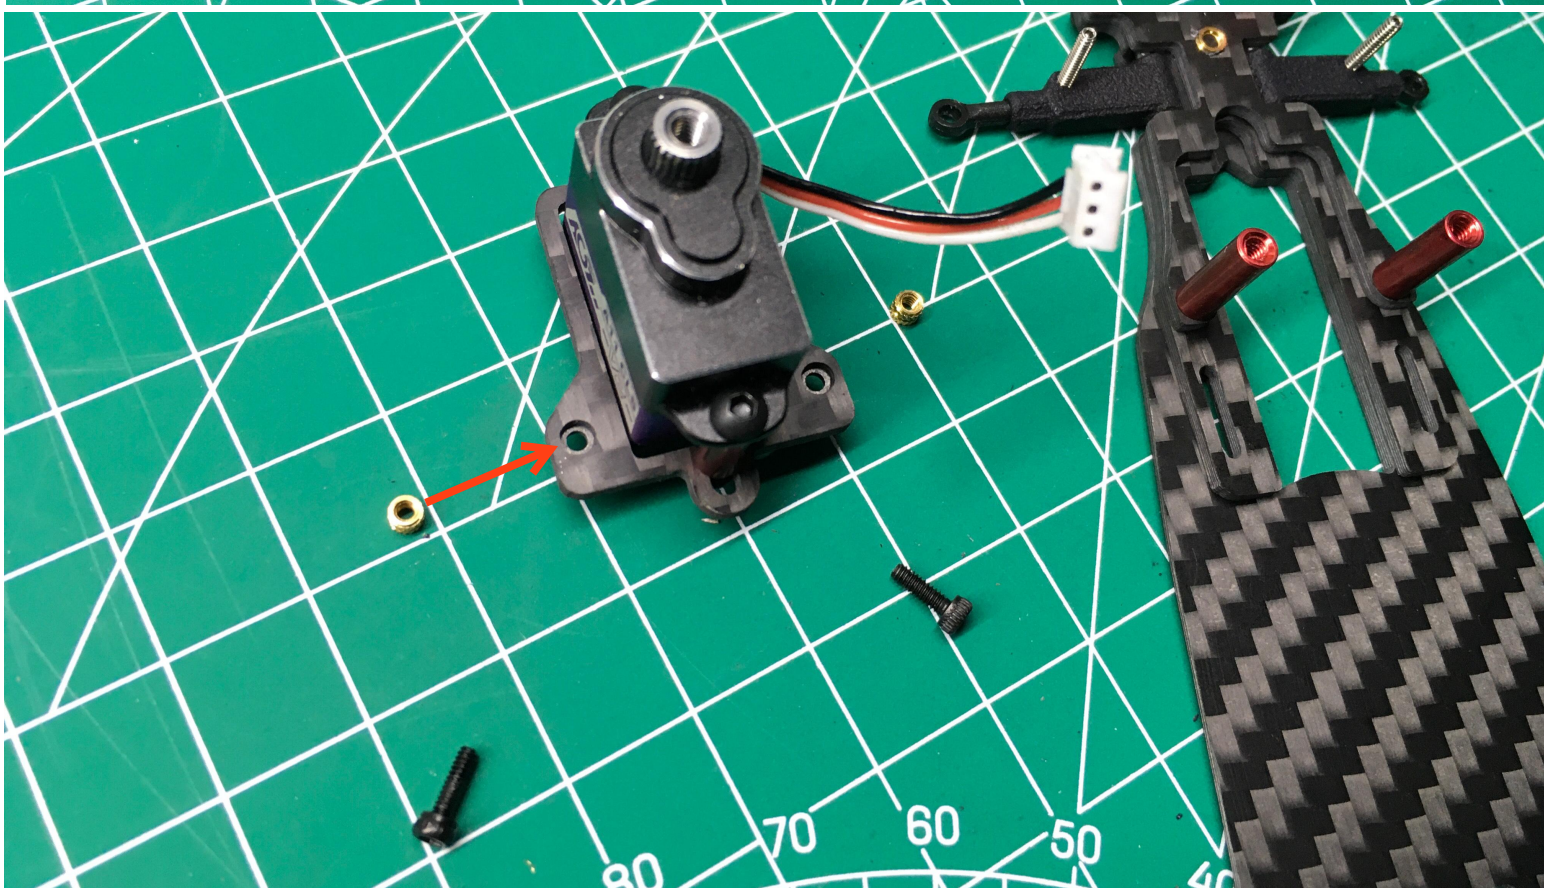


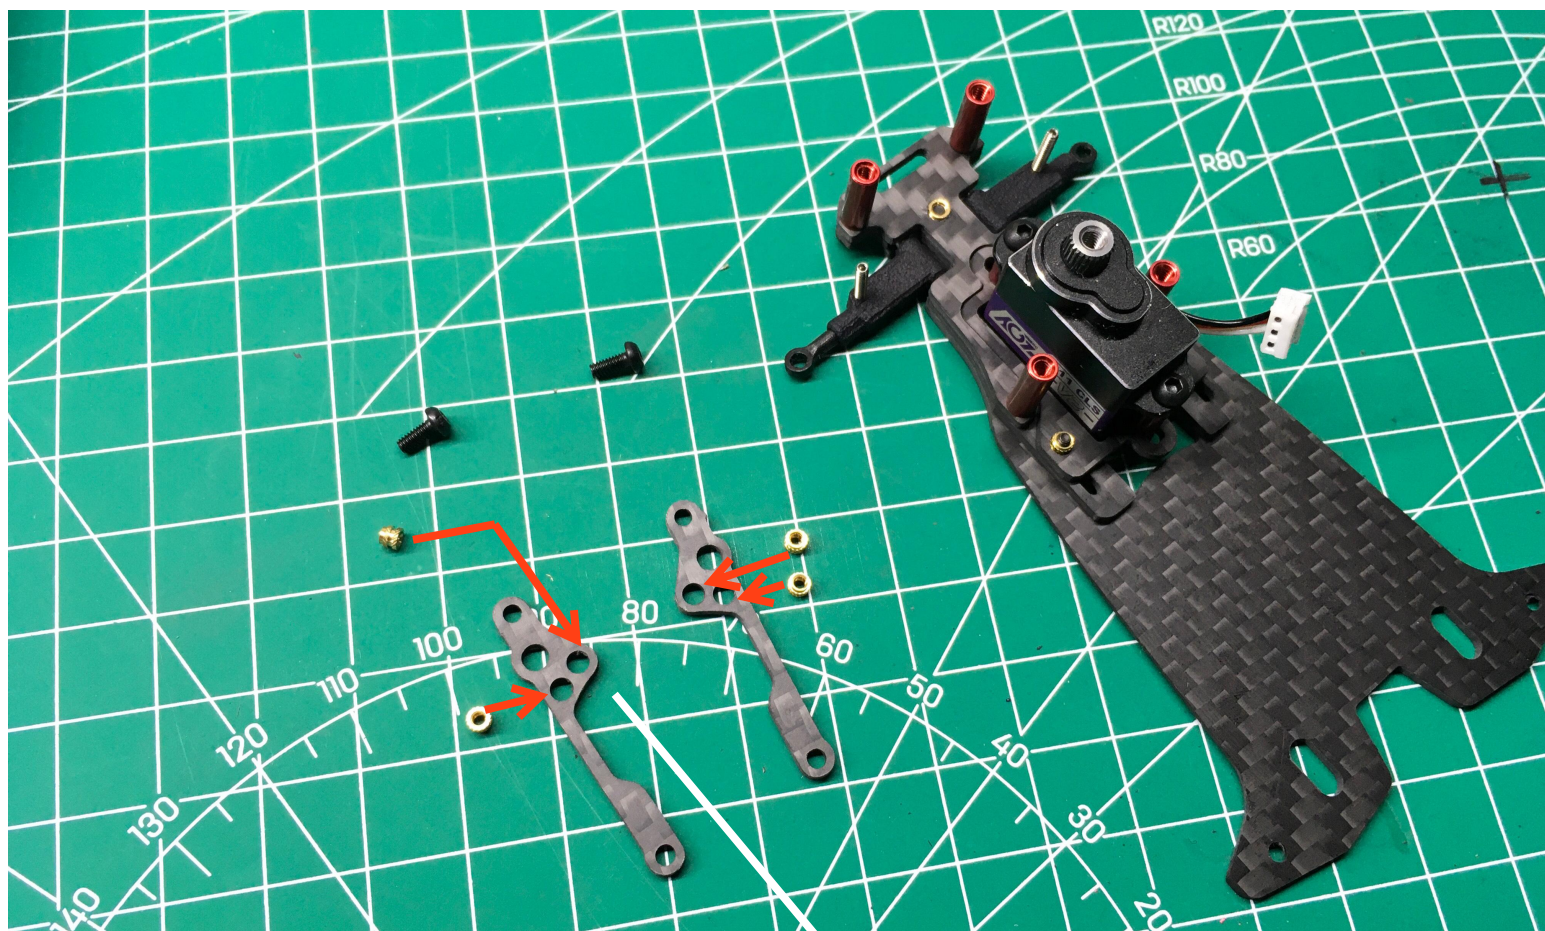



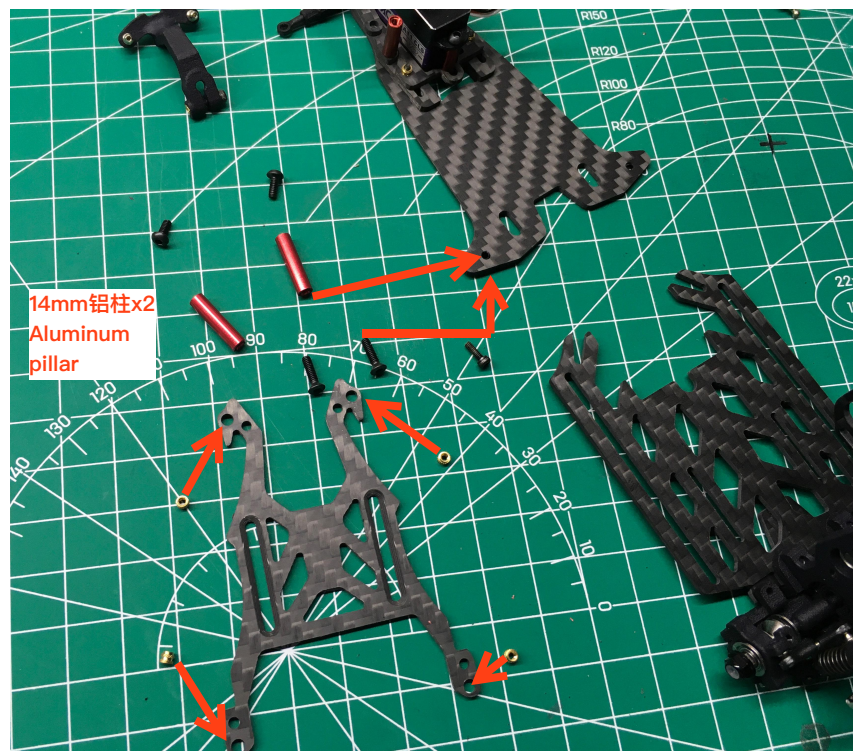




押入螺母，
必要时可用胶水加固。
(胶水有助于消除虚位，
但不是必须的。
如果是瞬干胶水，
注意先押入，再点胶。
小心胶水溢出拉低颜值)



Push in the nut,
Use glue to reinforce if necessary.
(Glue is not required.
If it is instant glue,
Pay attention, push in the nut first,
and then dispense.
Be careful of overflowing glue
makes bad looking)

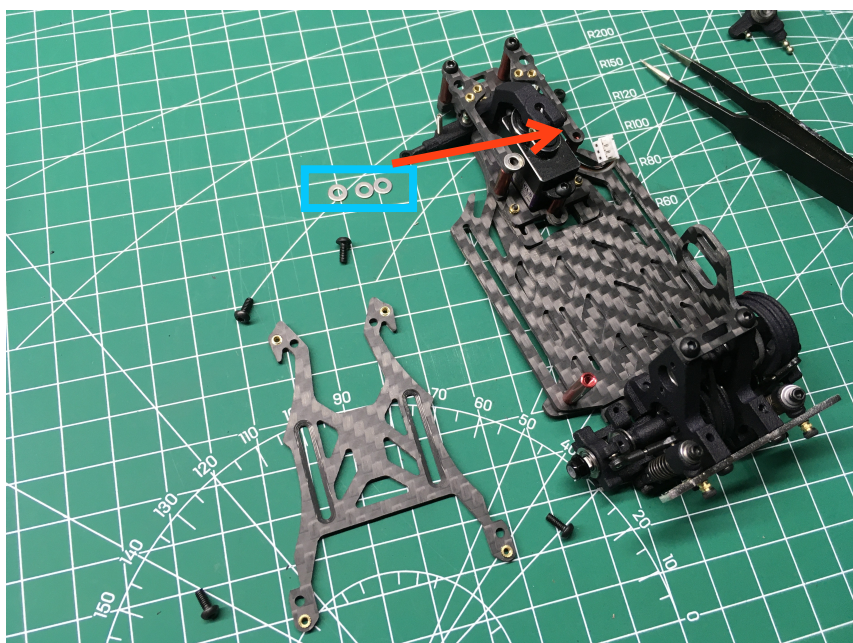

螺丝/screws:
12mm x2
螺柱/Aluminum pillar:
8mmx4

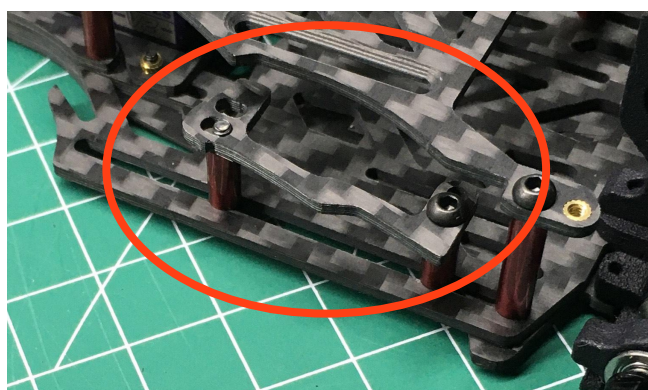
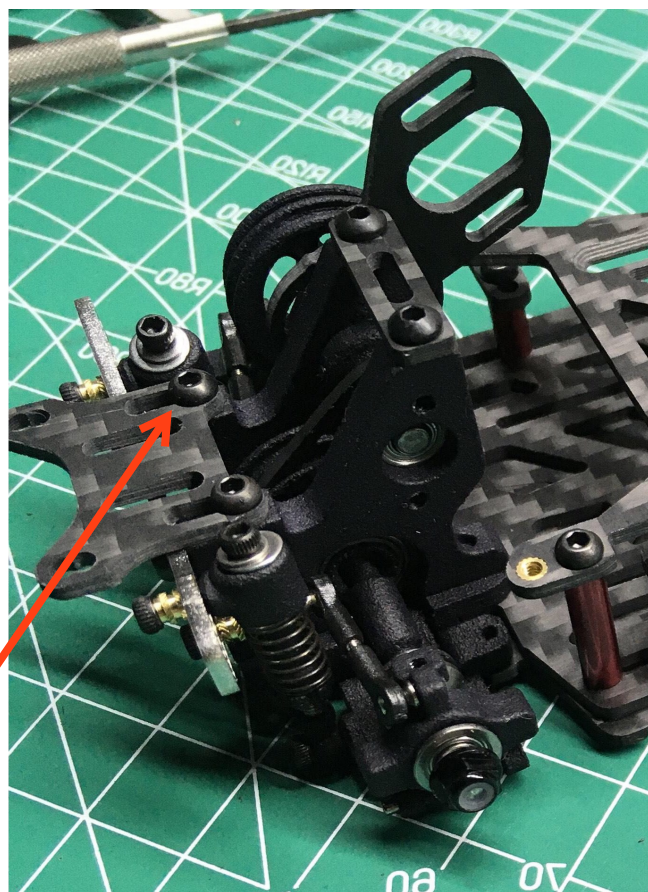
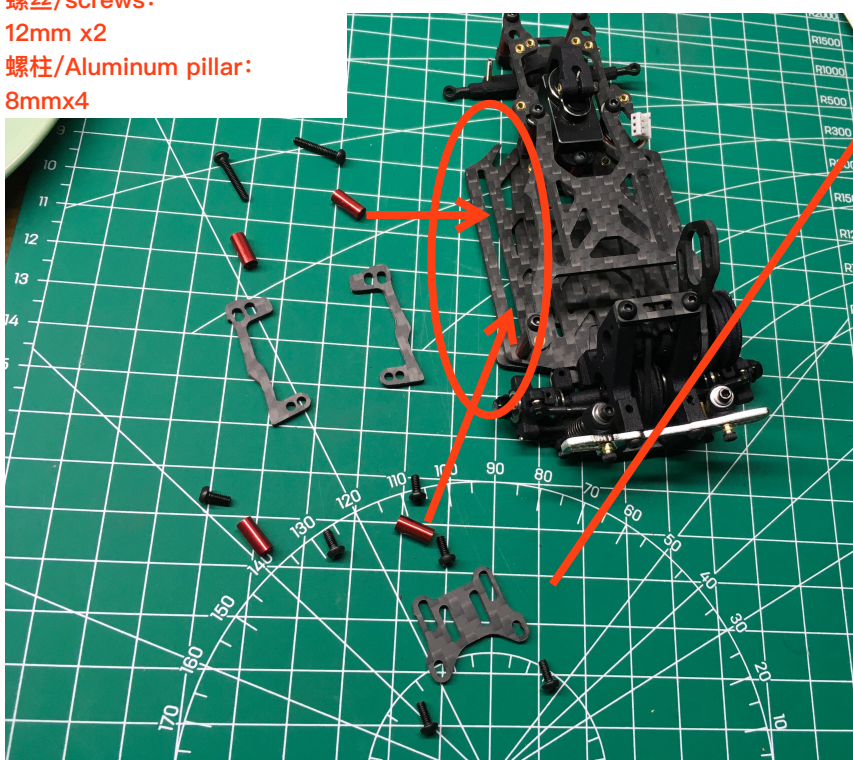


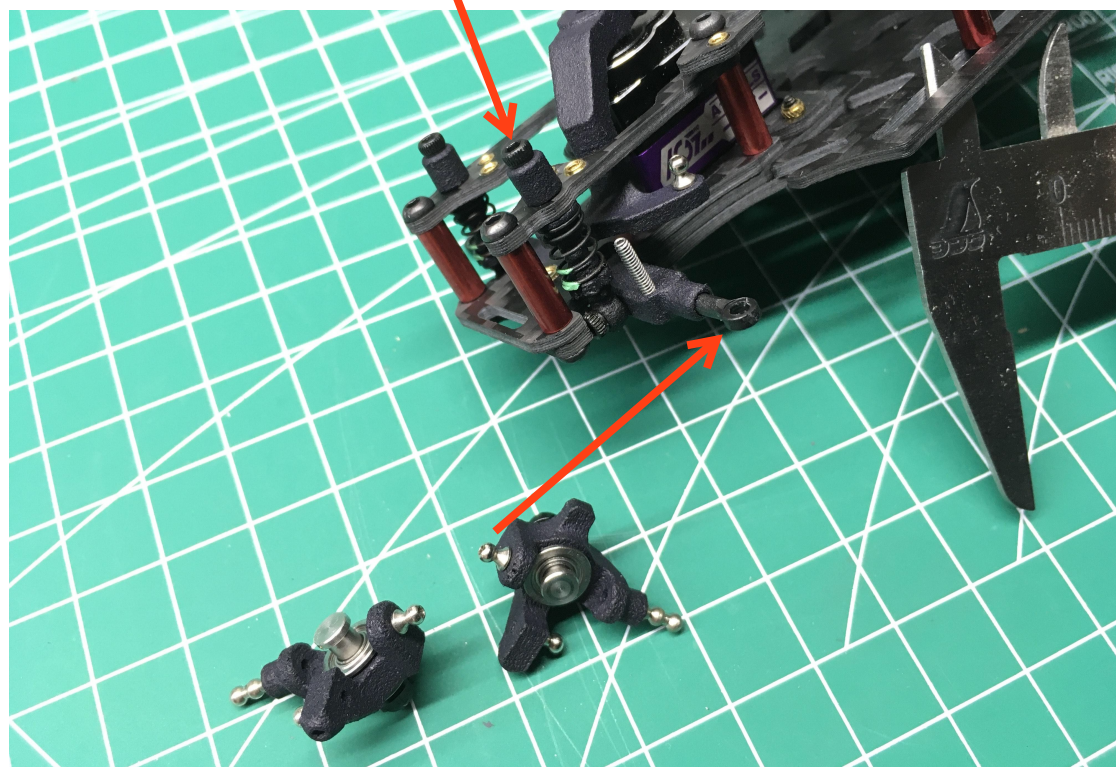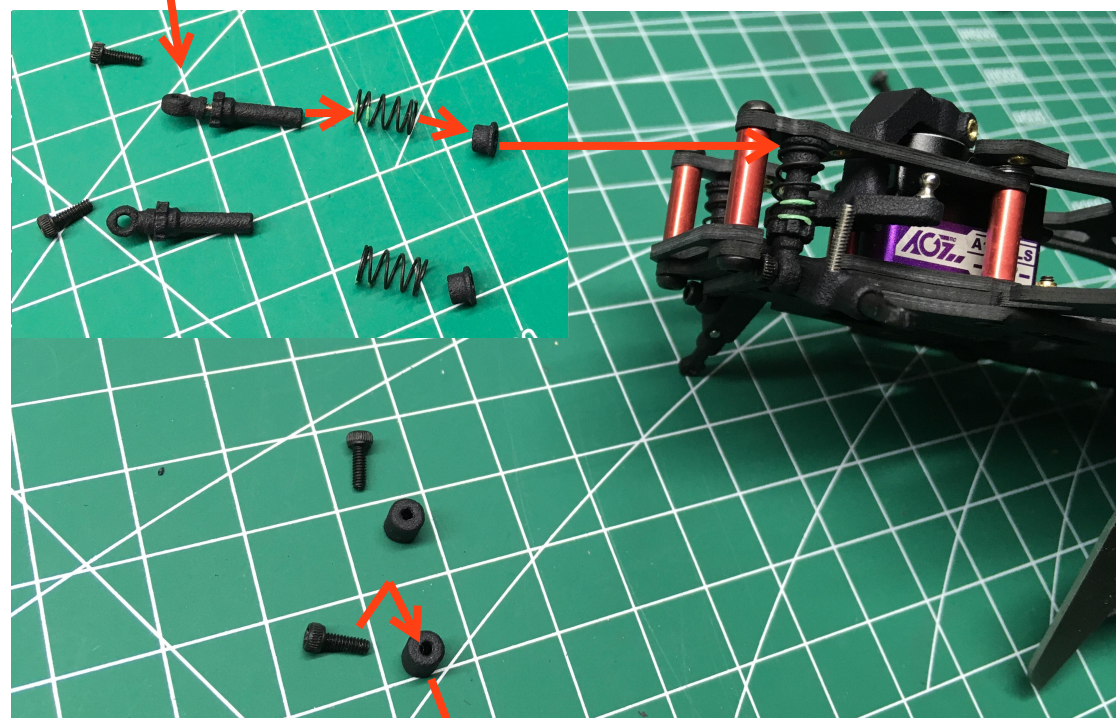

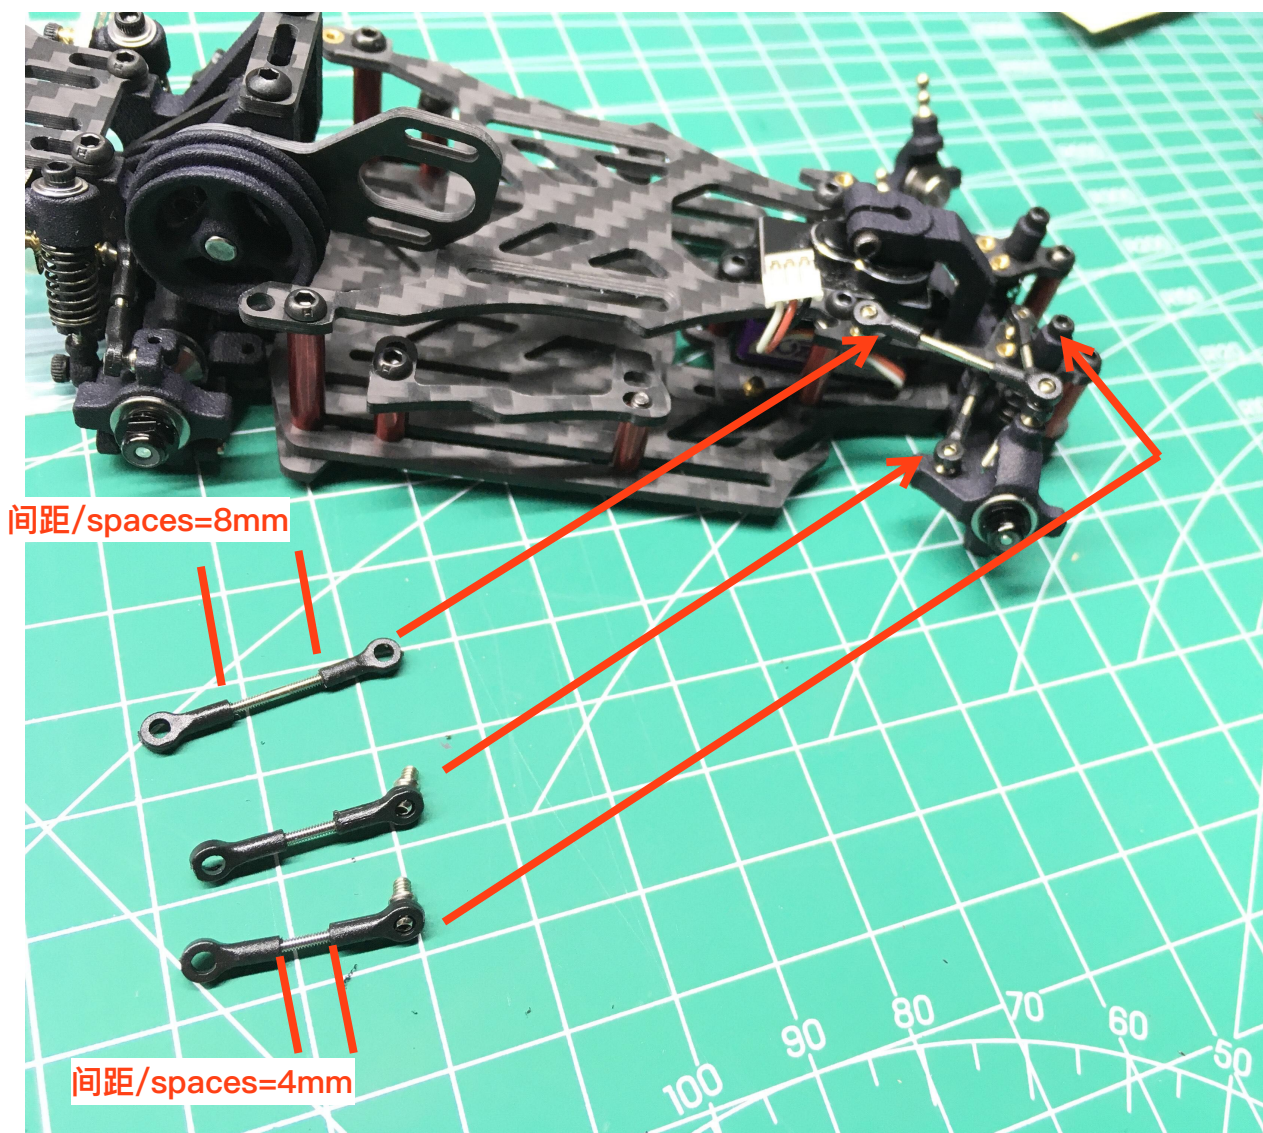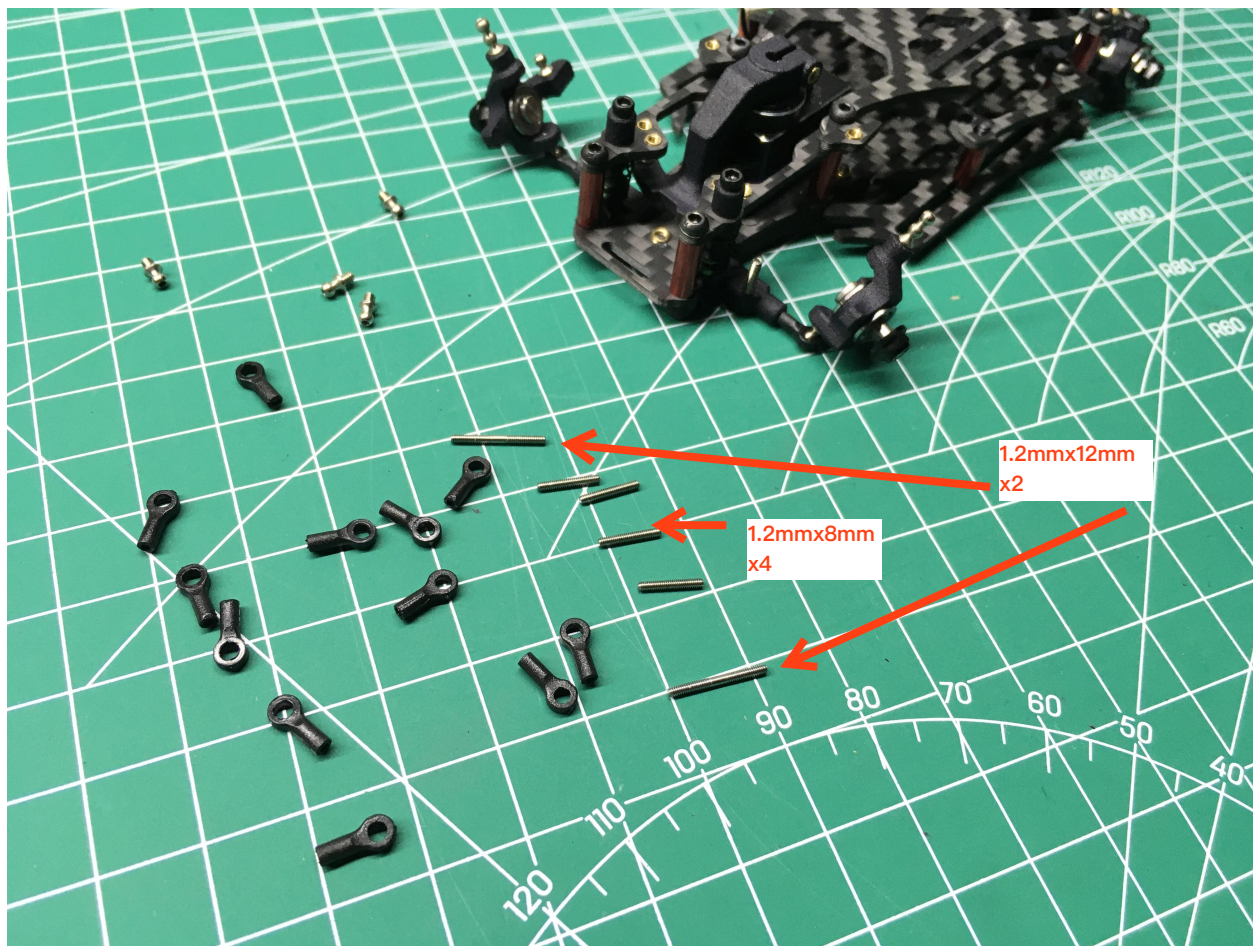


双面胶
用刻刀划开

Double-sided tape
Scribe it

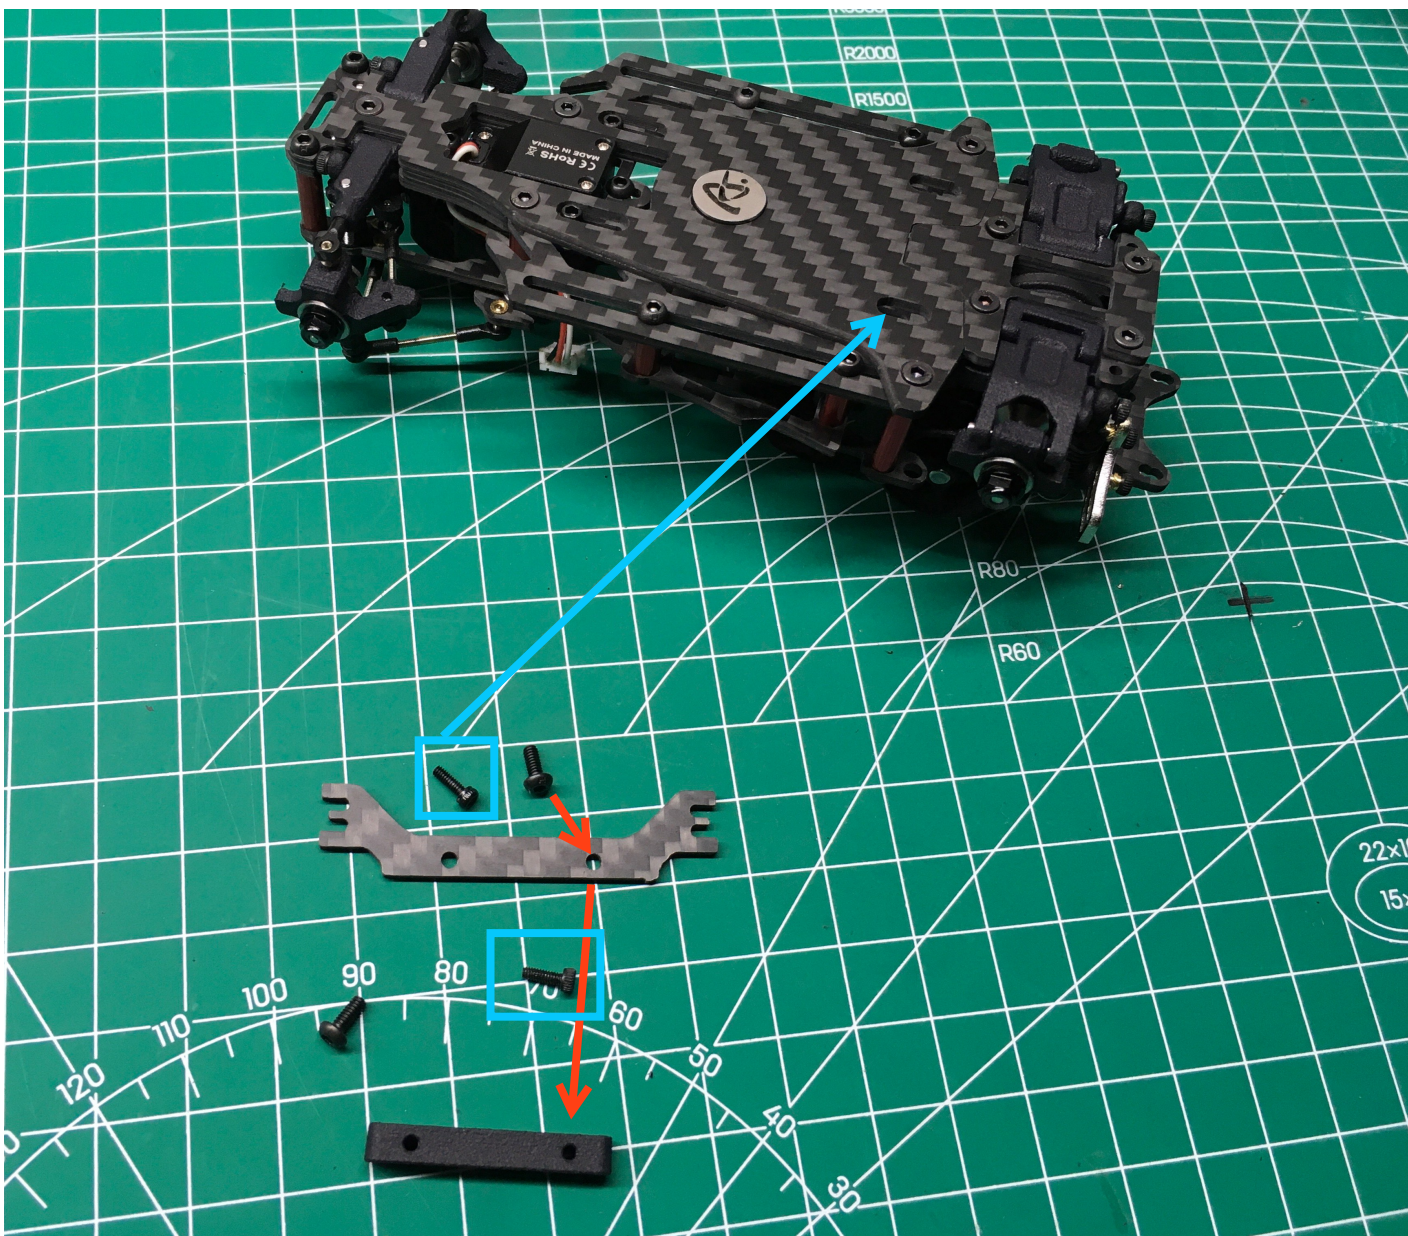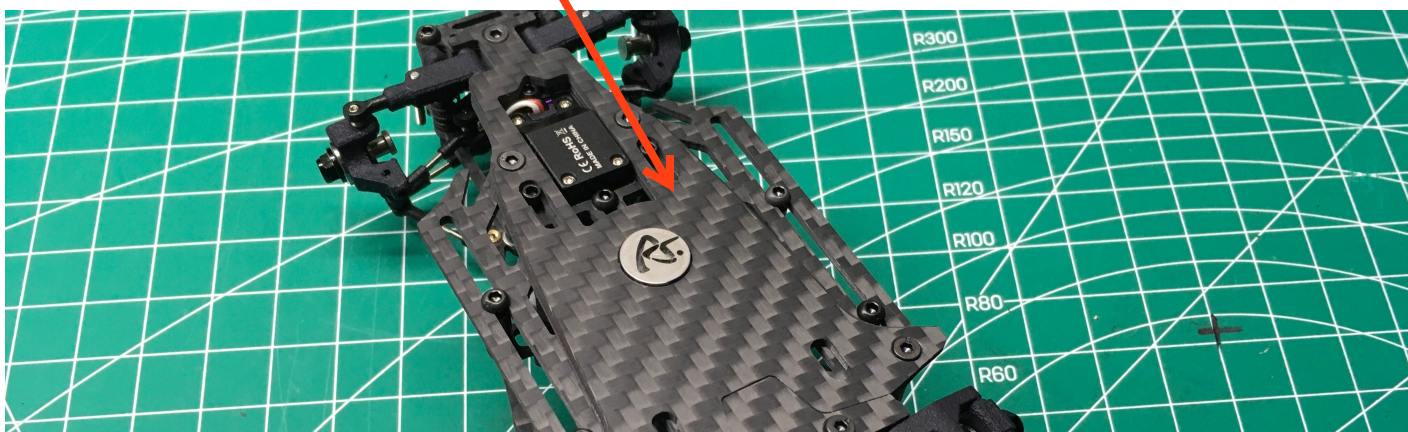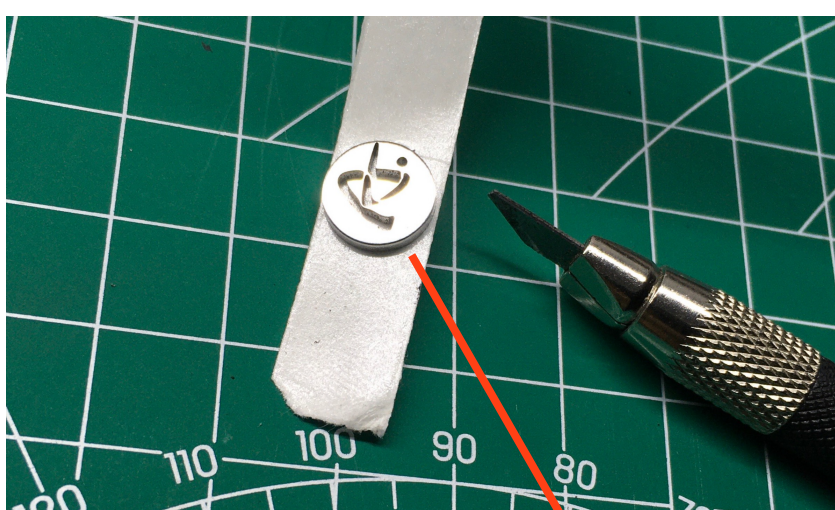

安装可调车舌 Install adjustable tongue

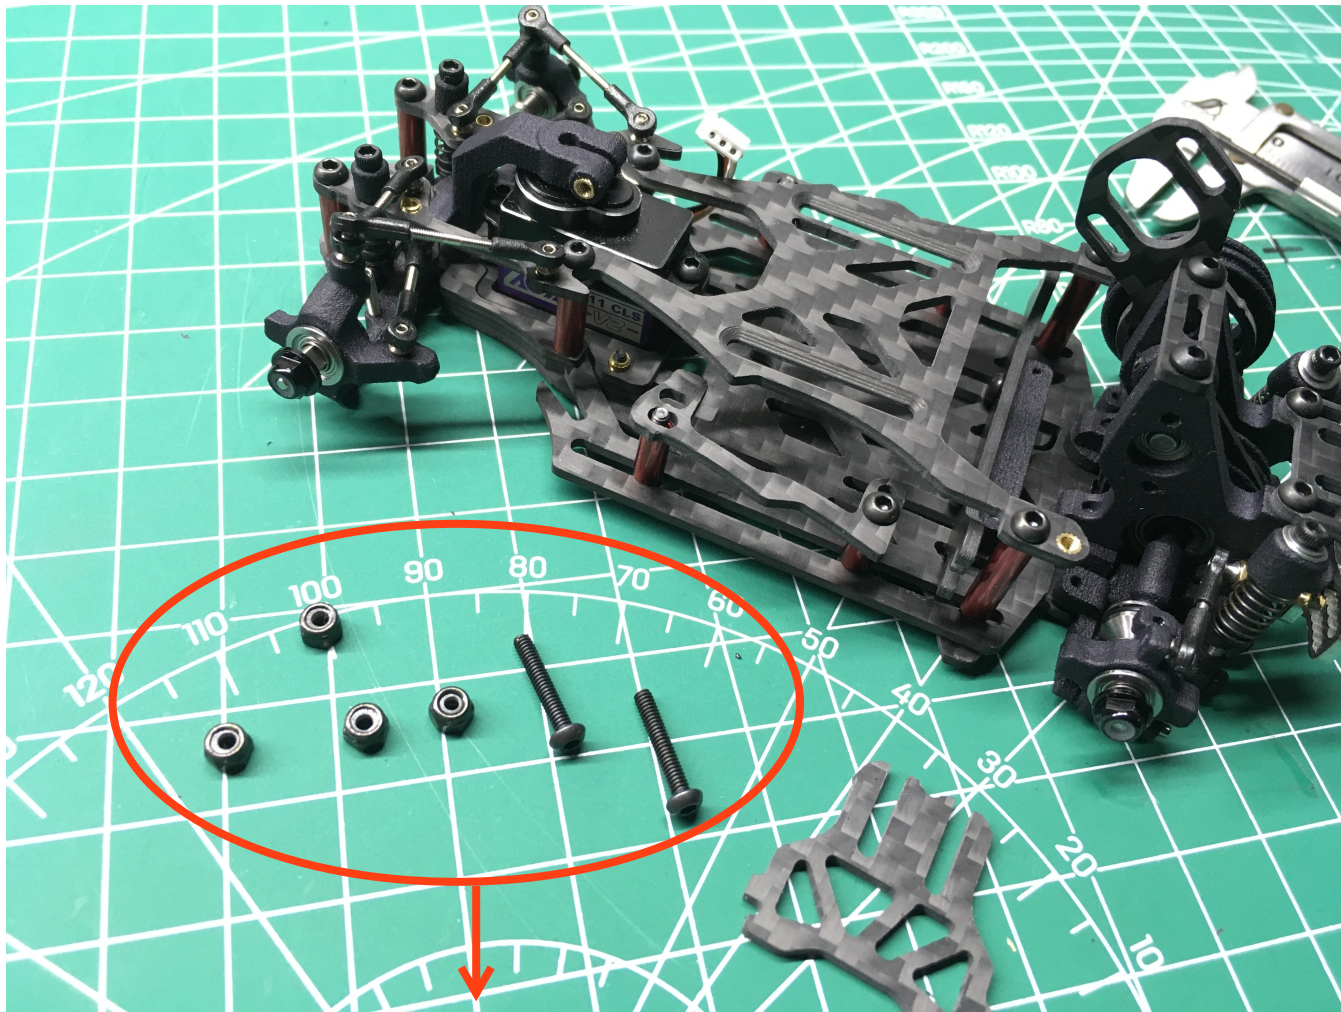

Option parts.

以下为海外版零件。内地版配置和价格均有不同。

Creative Suit A



Counterweight bottom plate (304steel)



黑面800目、白面1000目、灰面1500目

Option parts.

以下为海外版零件。内地版配置和价格均有不同。

7075 Alu
Gearbox



Rear wide arms
+1.5mm
+3.0mm
+4.5mm
(Every side offset)




Quick adjustable rods
1/28
Mini-z



Short rod
13.5-17.5mm
Long rod
18-21.5mm

Ball center to ball center

Quick adjustable rods
1/24
or super wide mini-z

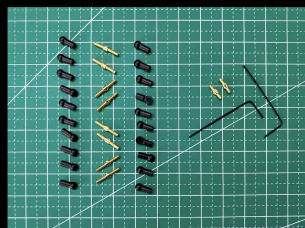

Offset shafts
+1.5mm
+3.0mm
+4.5mm
(Every side offset)





! If you got a
"Creative suit A",
you don't
need these



Super-wide Arm
(metal parts)



Super-wide Arm
(Nylon parts)

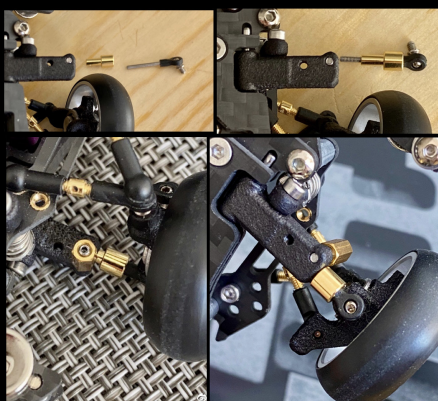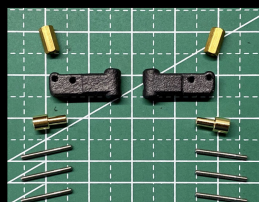



Appreciate Your Test-drive!

Drift Art2

For Drift.Fun.Art :-), to those Alone.Racing.Talents.

but , your imagination is, just

to be continued...