



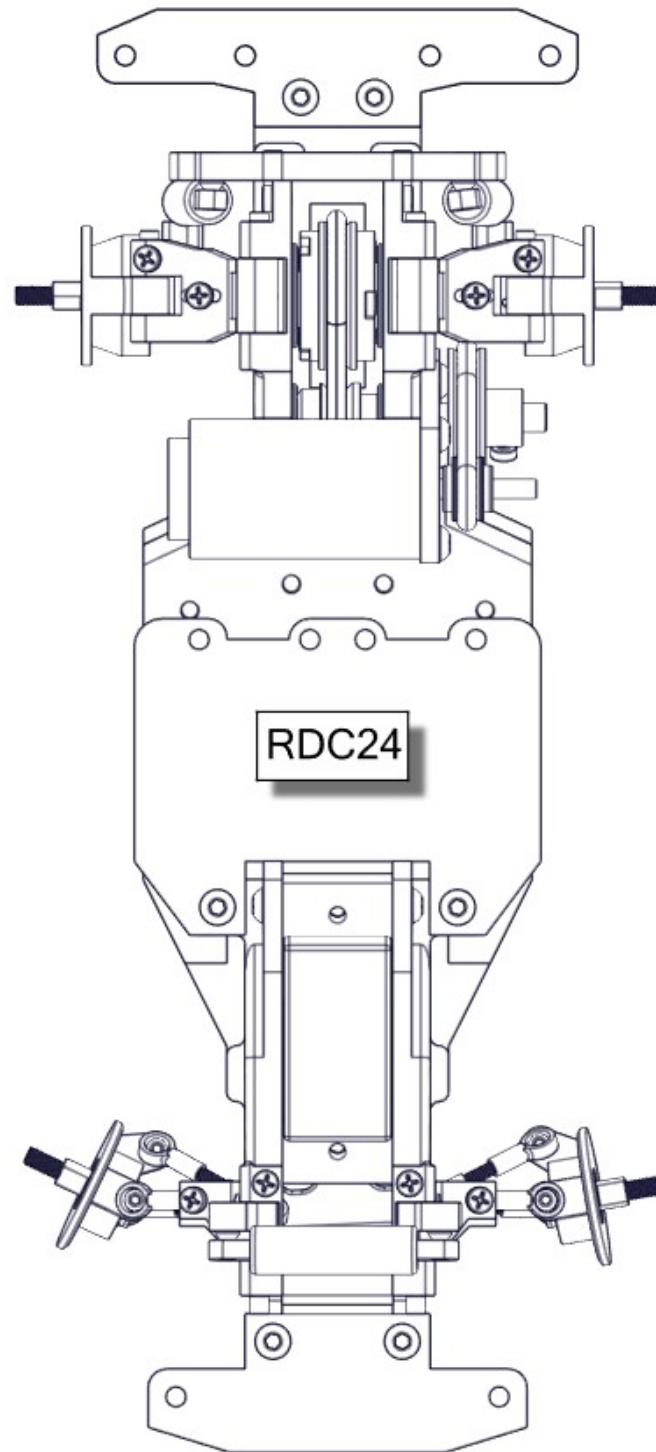

Name	Count
orlandoo ball m1.6	14
olando ball cap	8
o-ring 18id 2cs	2
mr63-2	8
mf106zz	2
mf63zz	2
m2x4	38
m1.4x8-10 rod	2
m1.4x8 rod	4
m1.4x4	11
m1.4x2	13
3x30-31 rod	1
1.4x16	4
1.4x14	4
1.4x11	4


you can use balls from DriftArt

try 17-18mm inner diameter

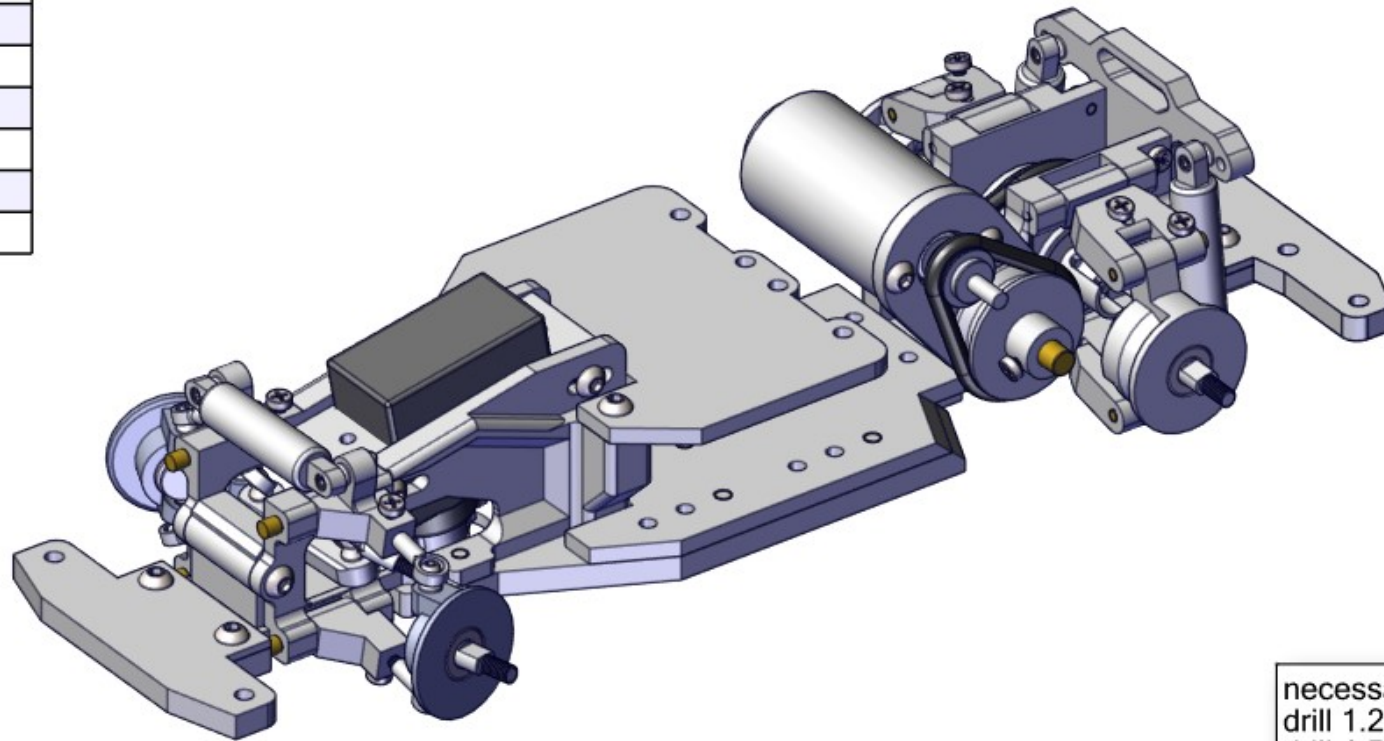


necessary tools:
 drill 1.2mm
 drill 1.5mm
 drill 2.1mm (optional)
 thread tap m1.4
 screwdriver hex0.9


and other screwdrivers
 depends on your screws

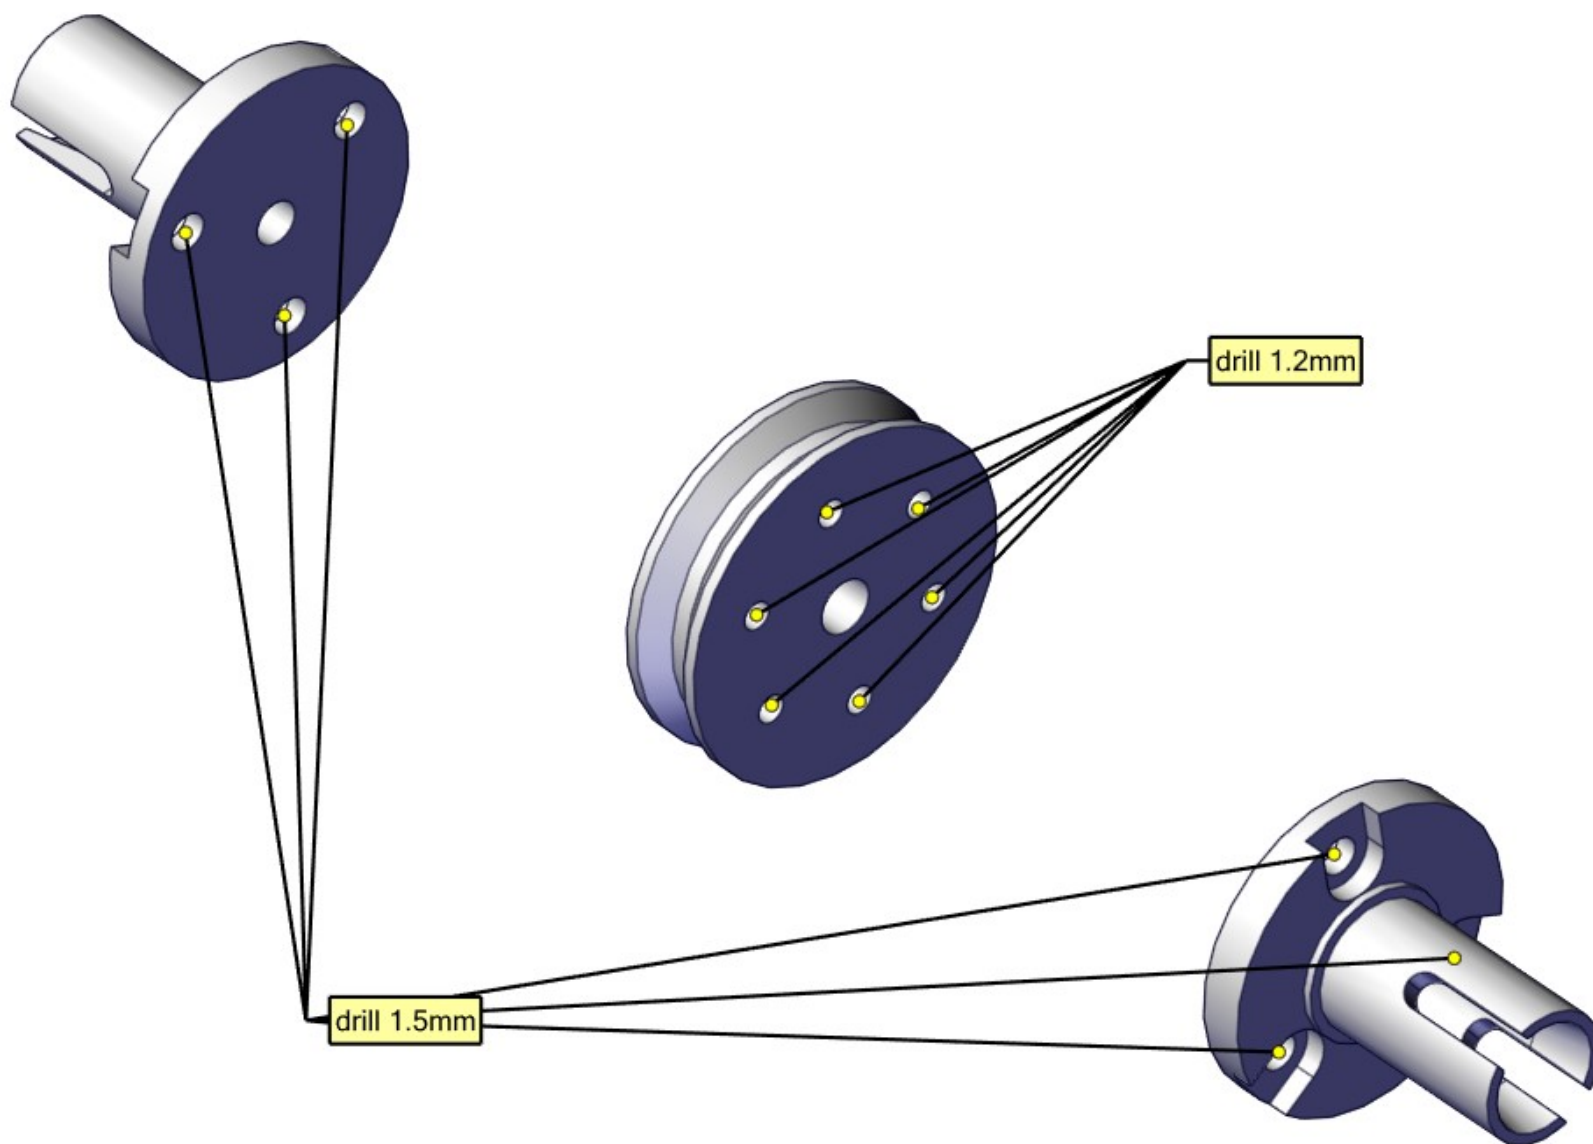



Name	Count
m1.4x4	6

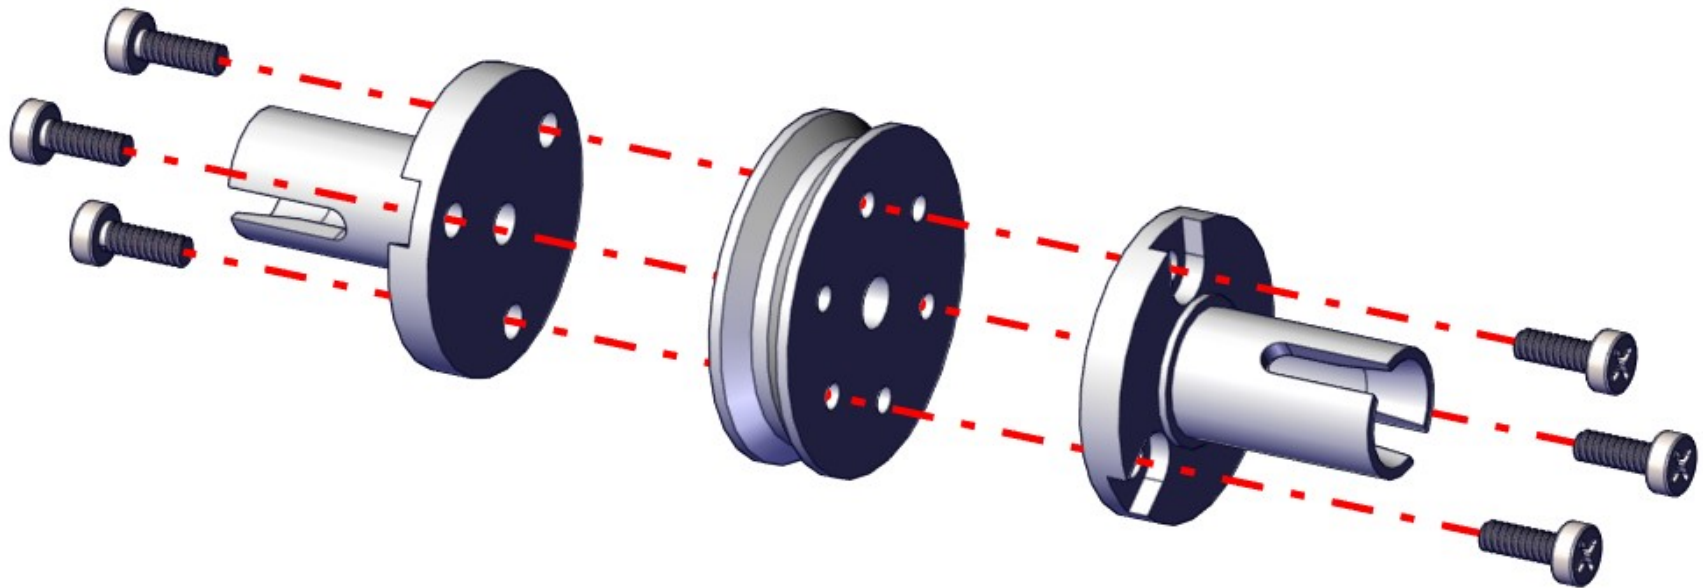


Name	Count
m1.4x2	1
3x30-31 rod	1

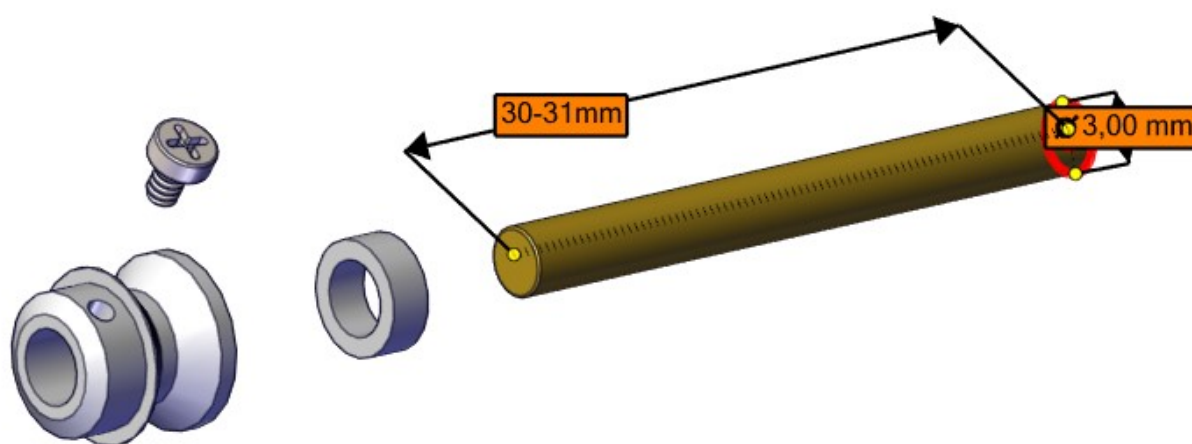


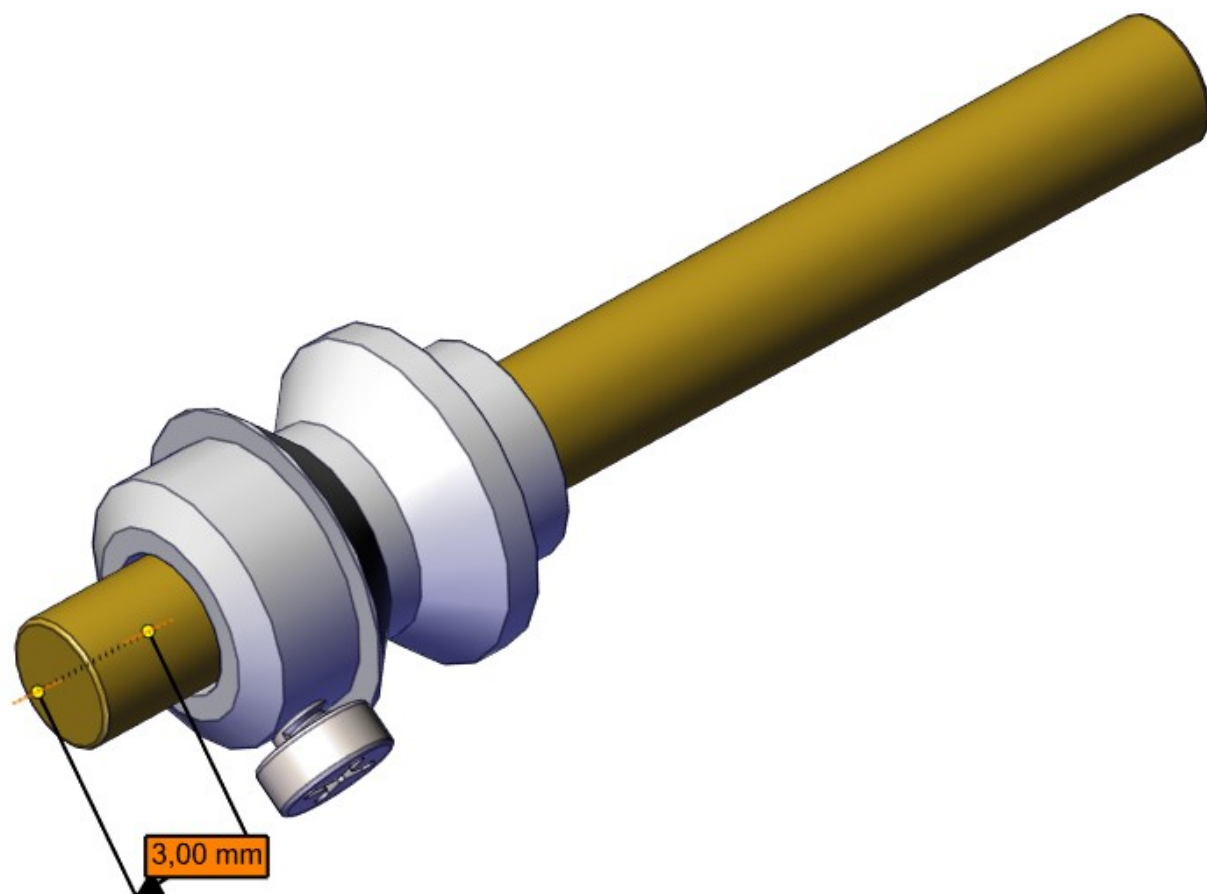


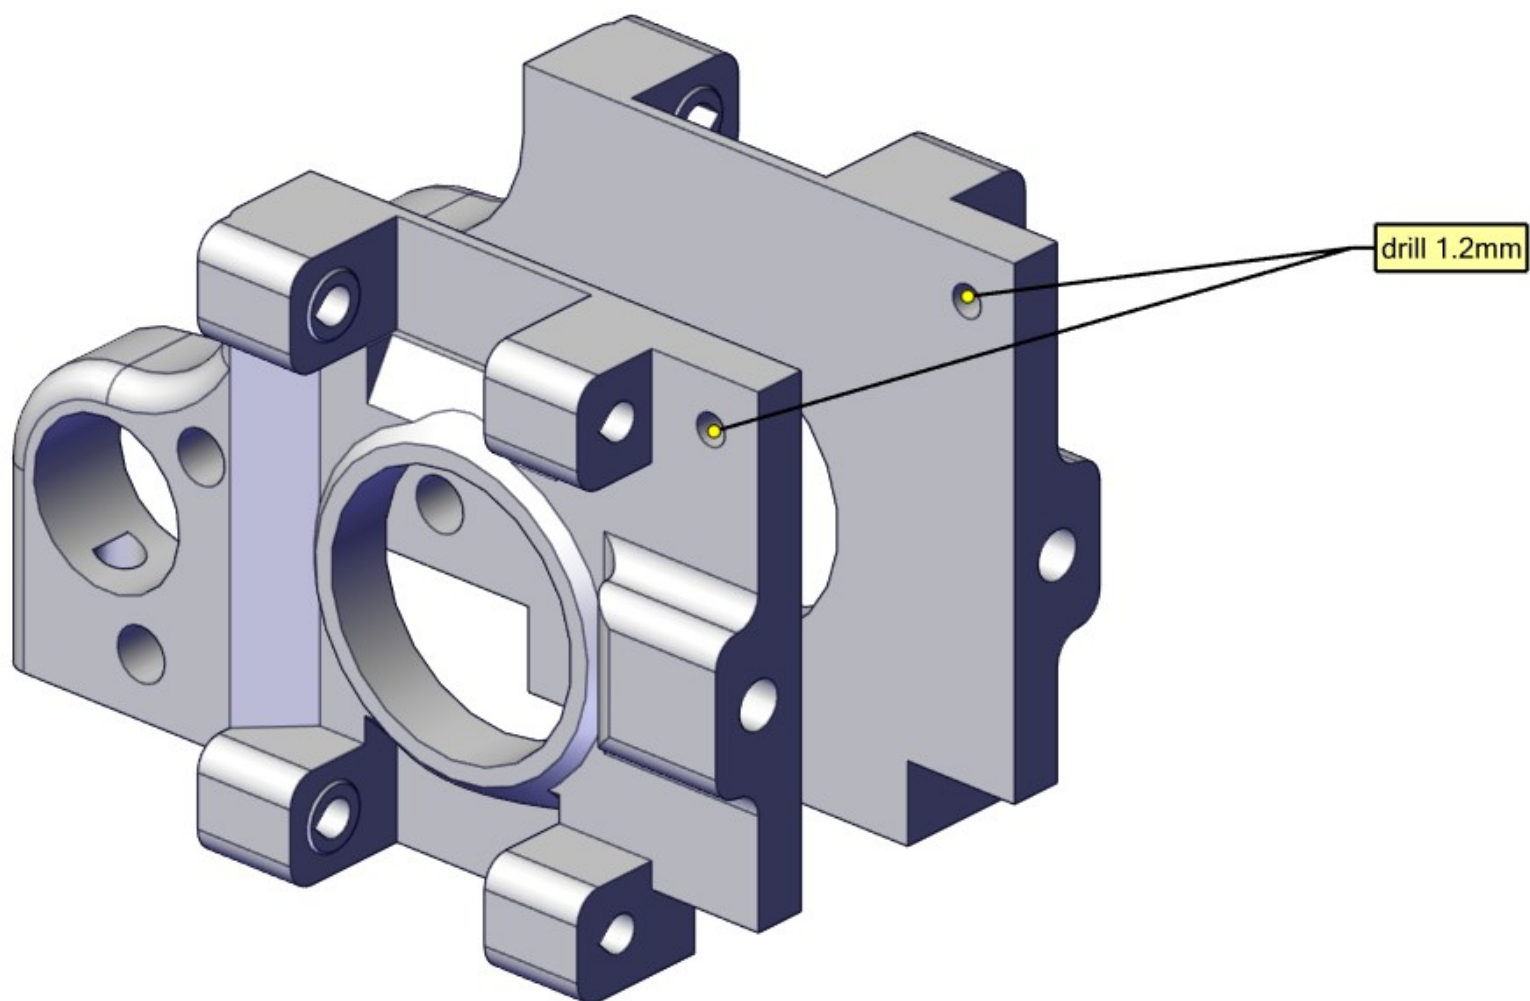


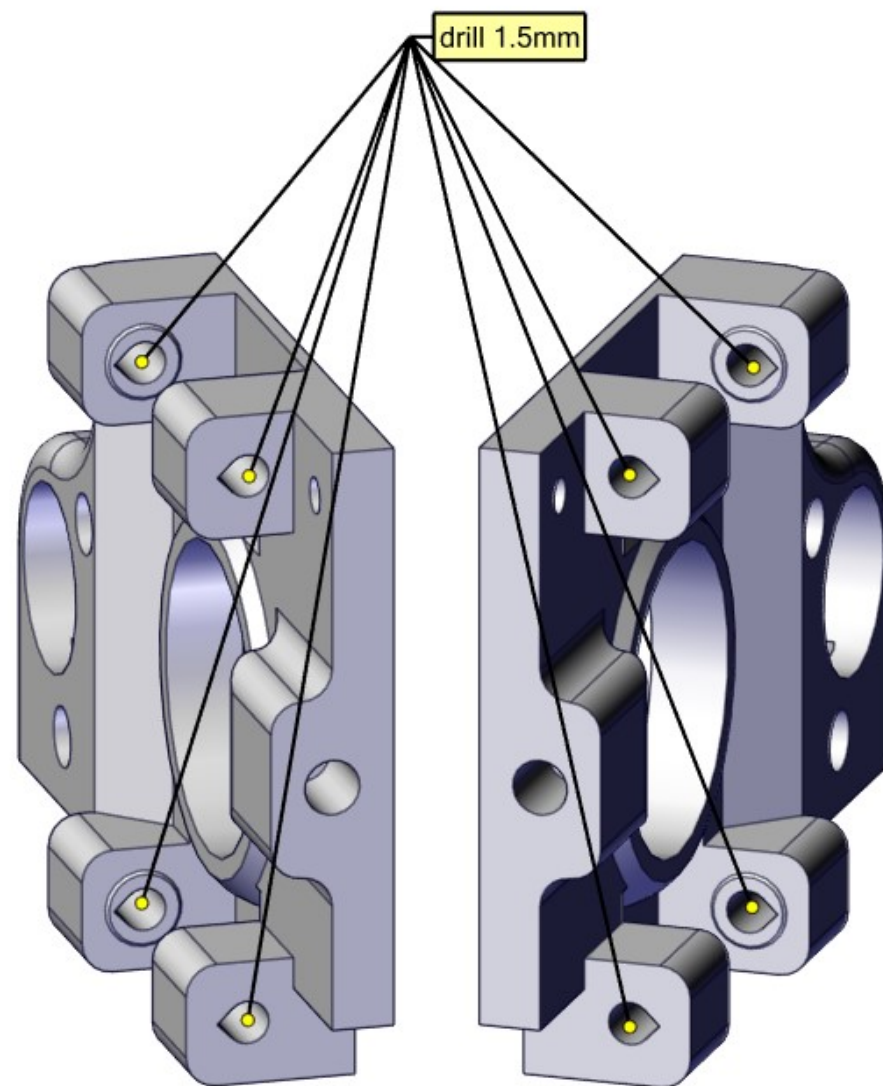


Name	Count
o-ring 18id 2cs	1
mf106zz	2
mf63zz	2

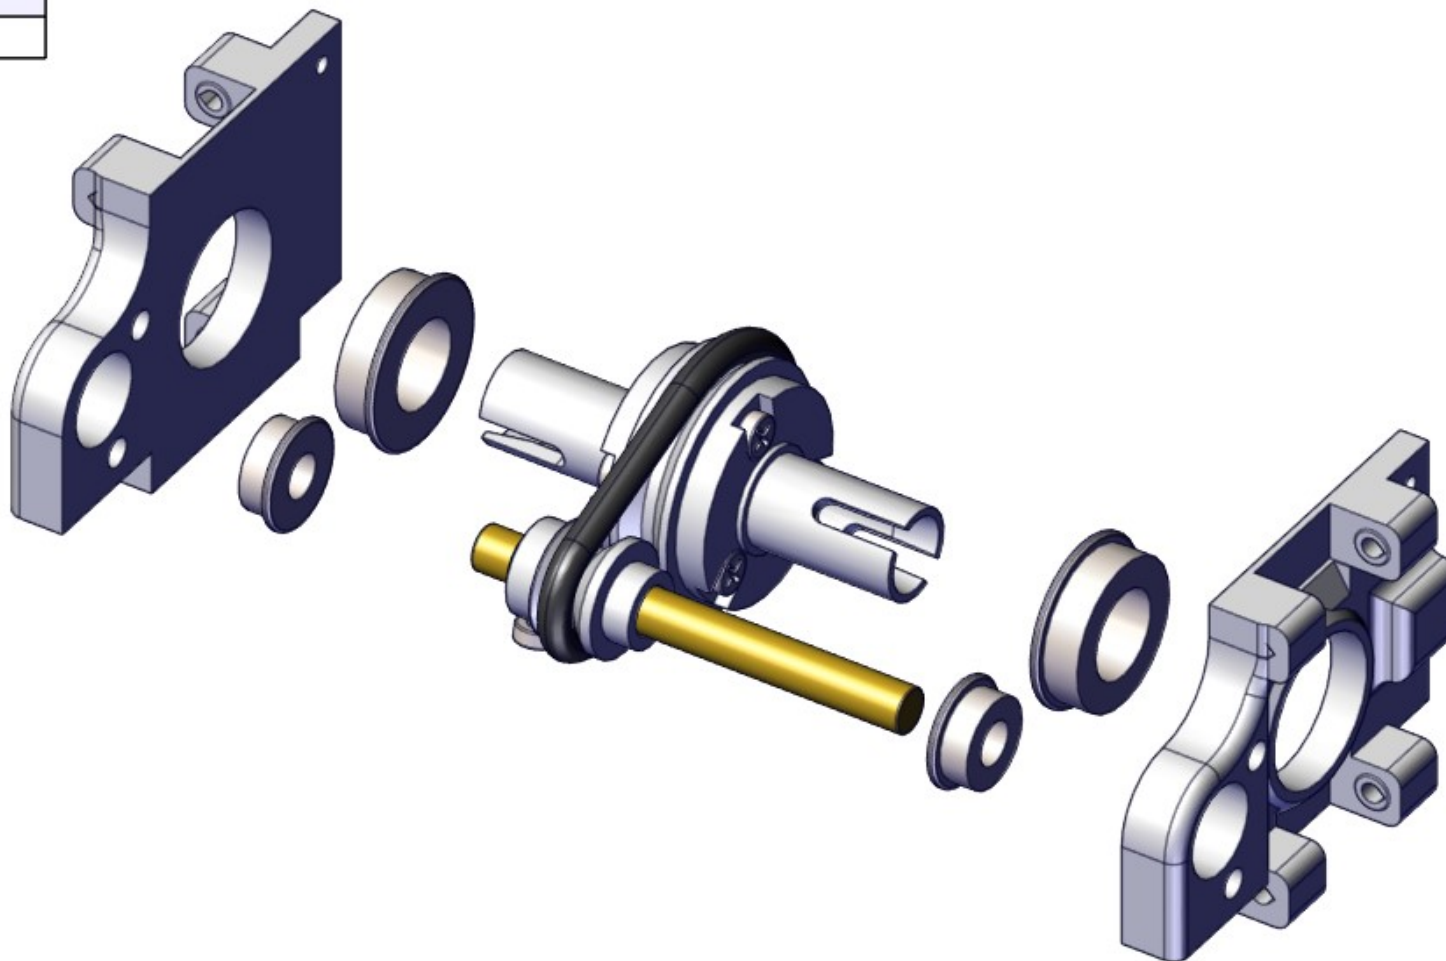

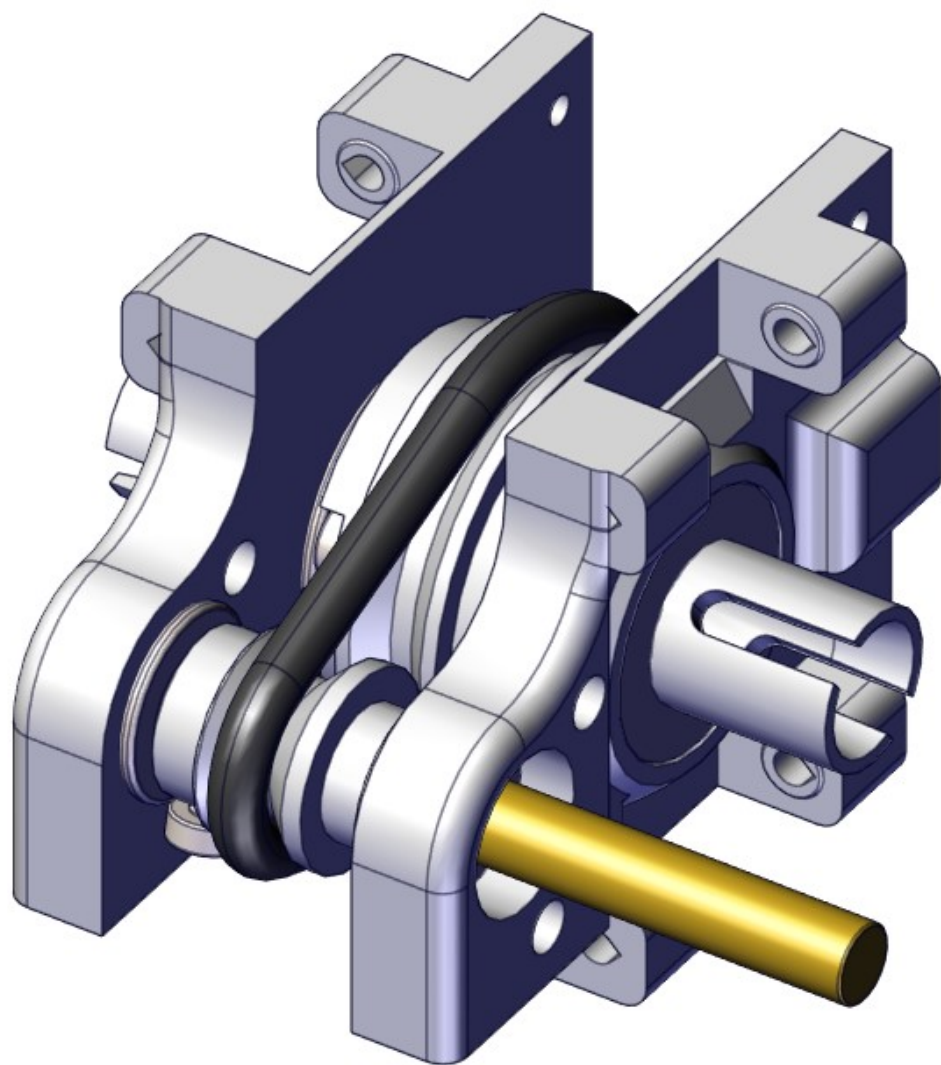


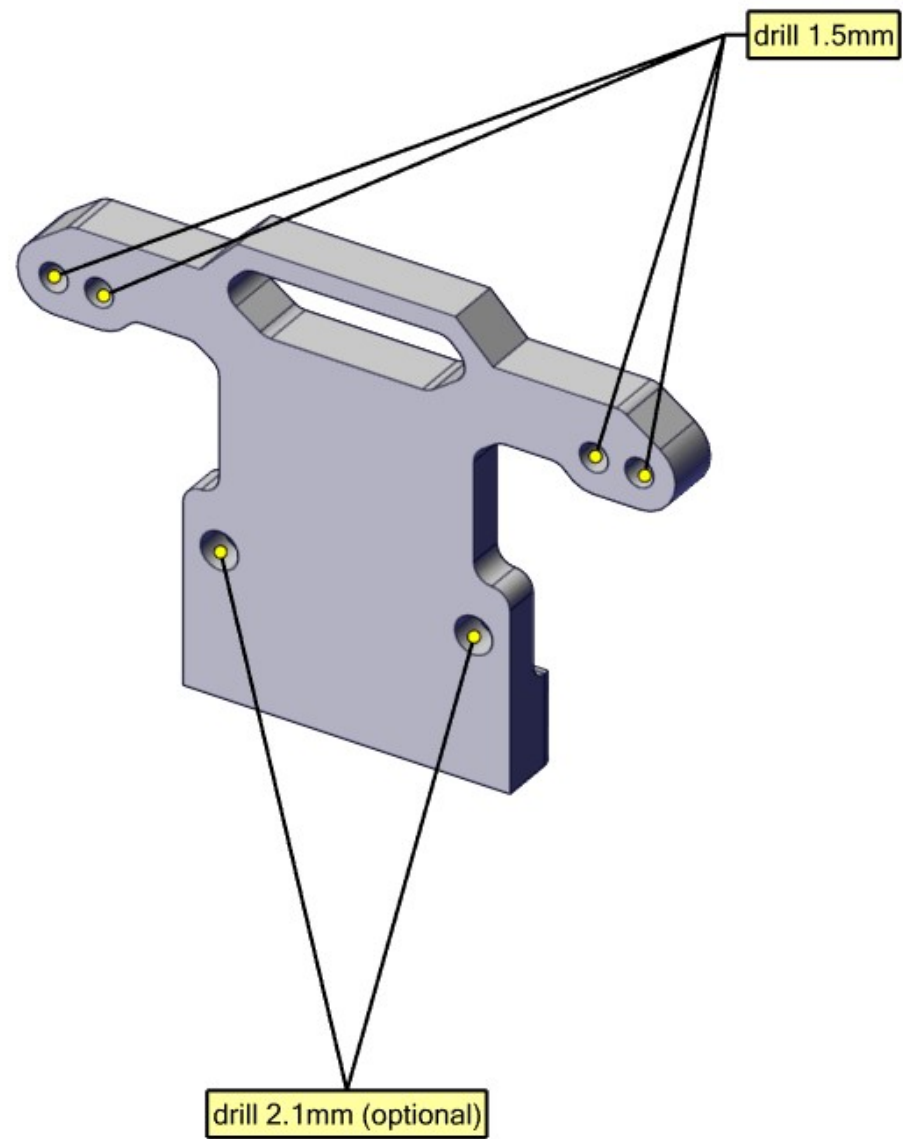




Name	Count
orlandoo ball m1.6	2


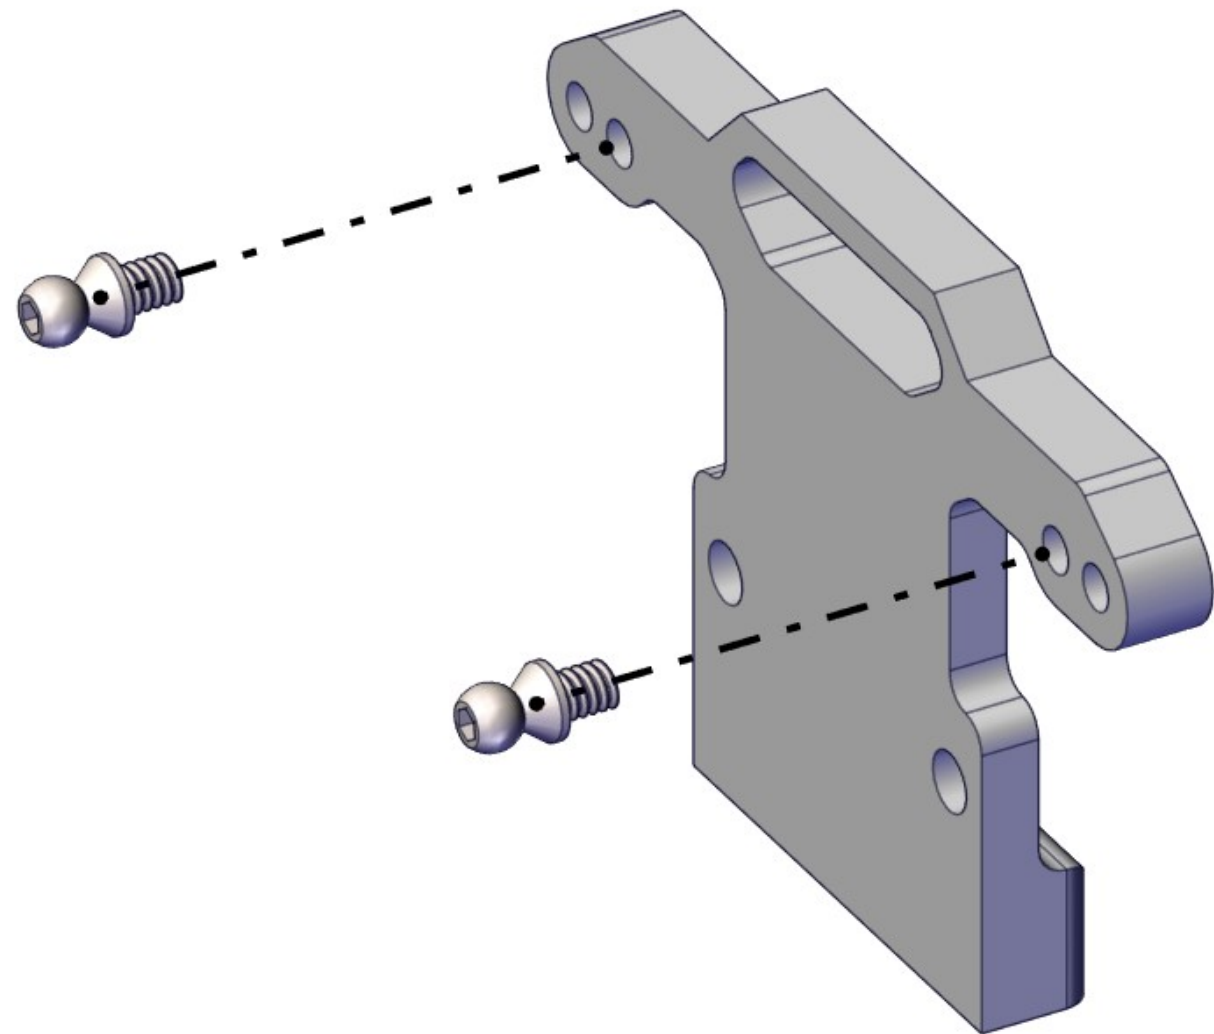


Name	Count
m2x4	2

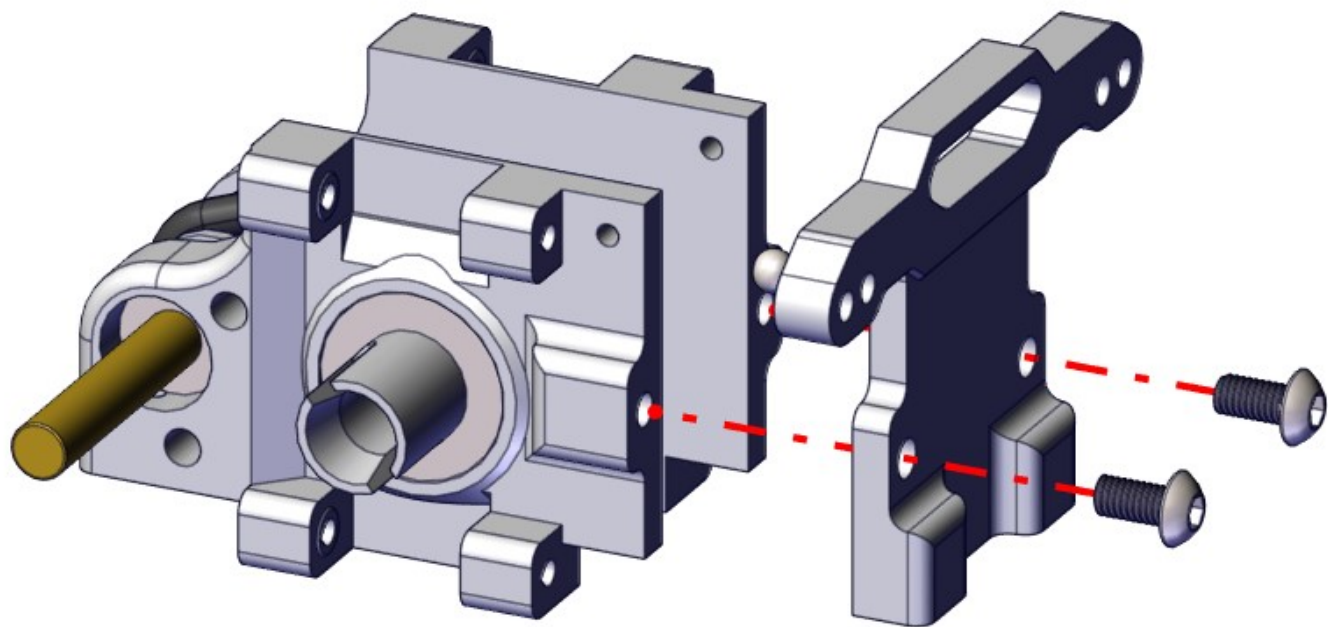


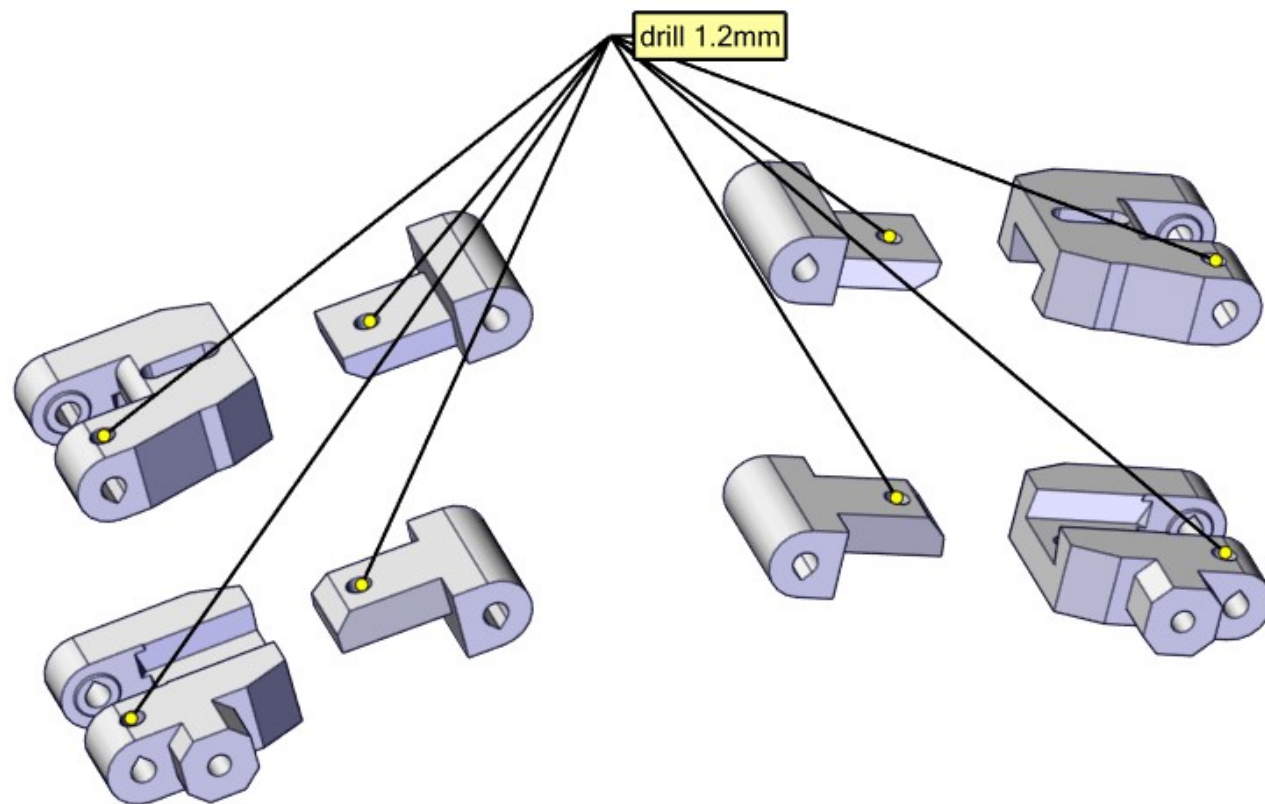

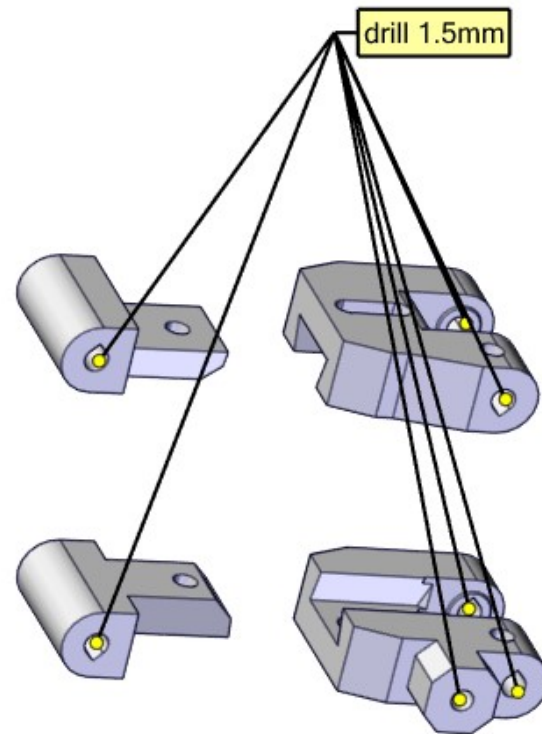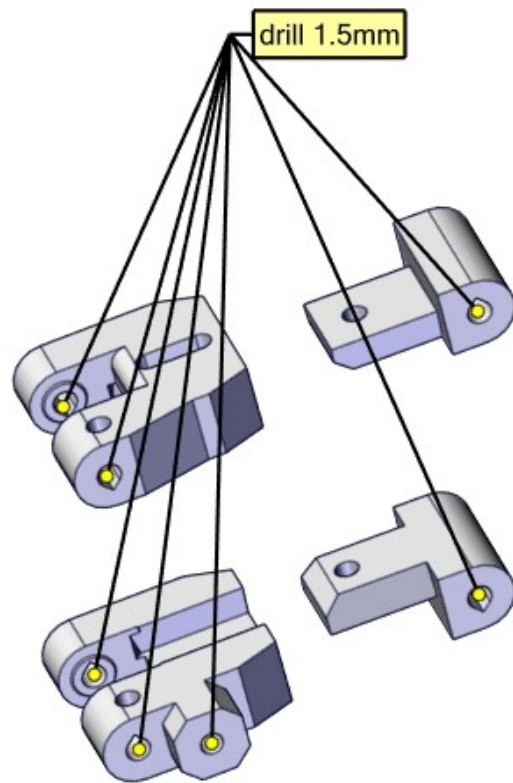


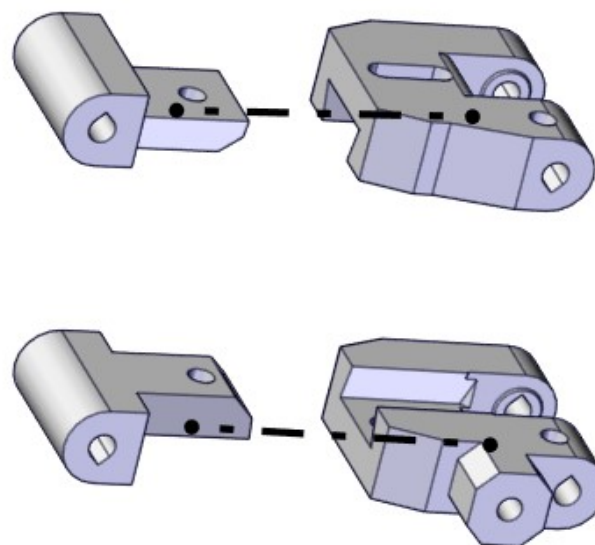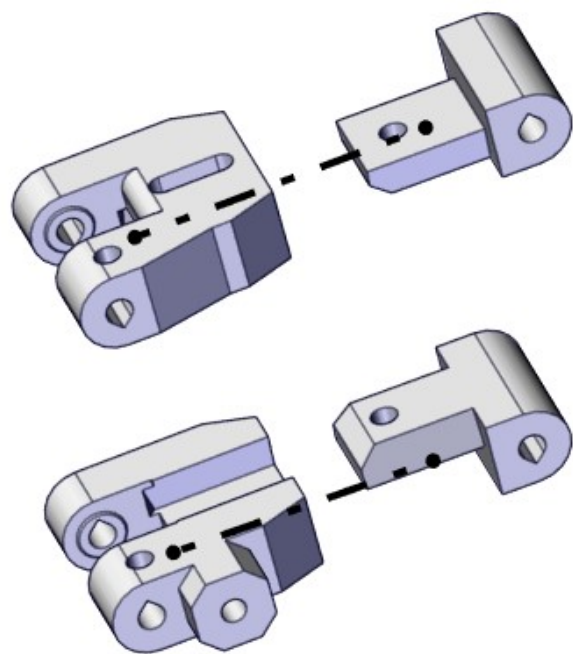


Name	Count
m1.4x4	4

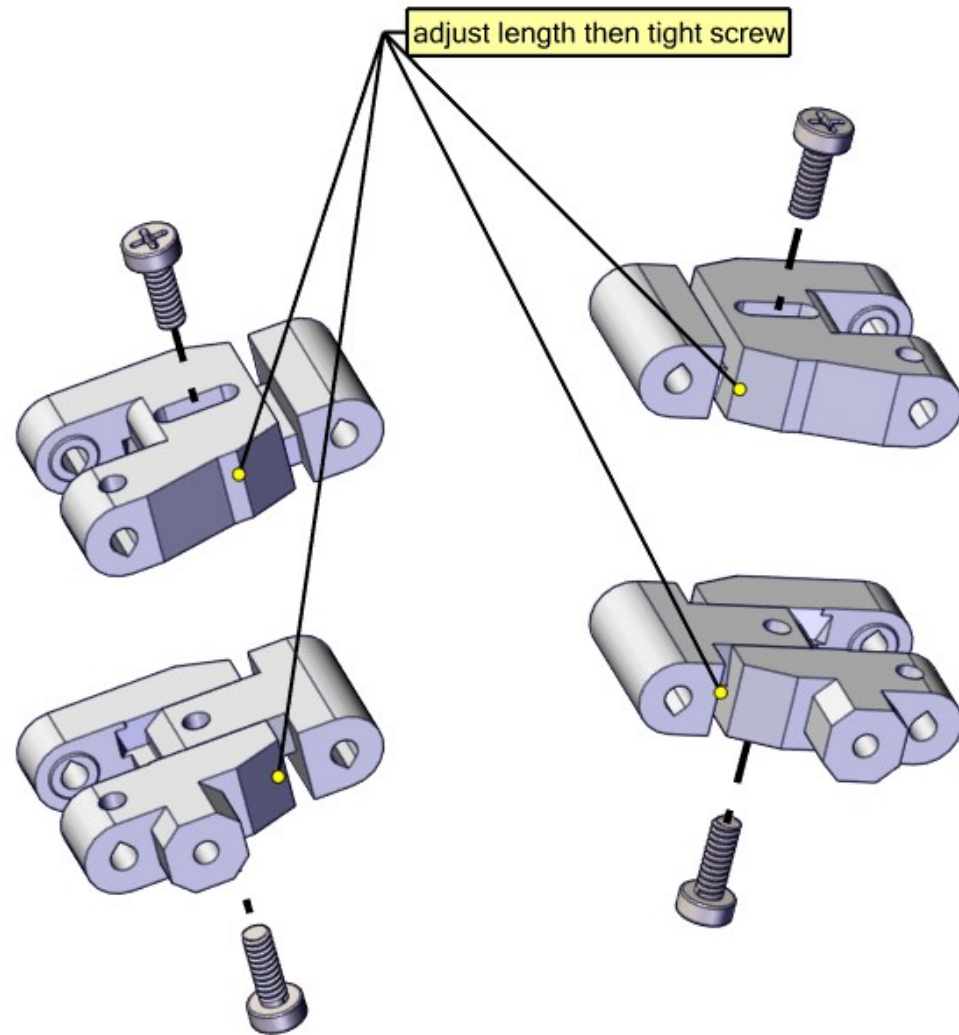


Name	Count
1.4x16	4

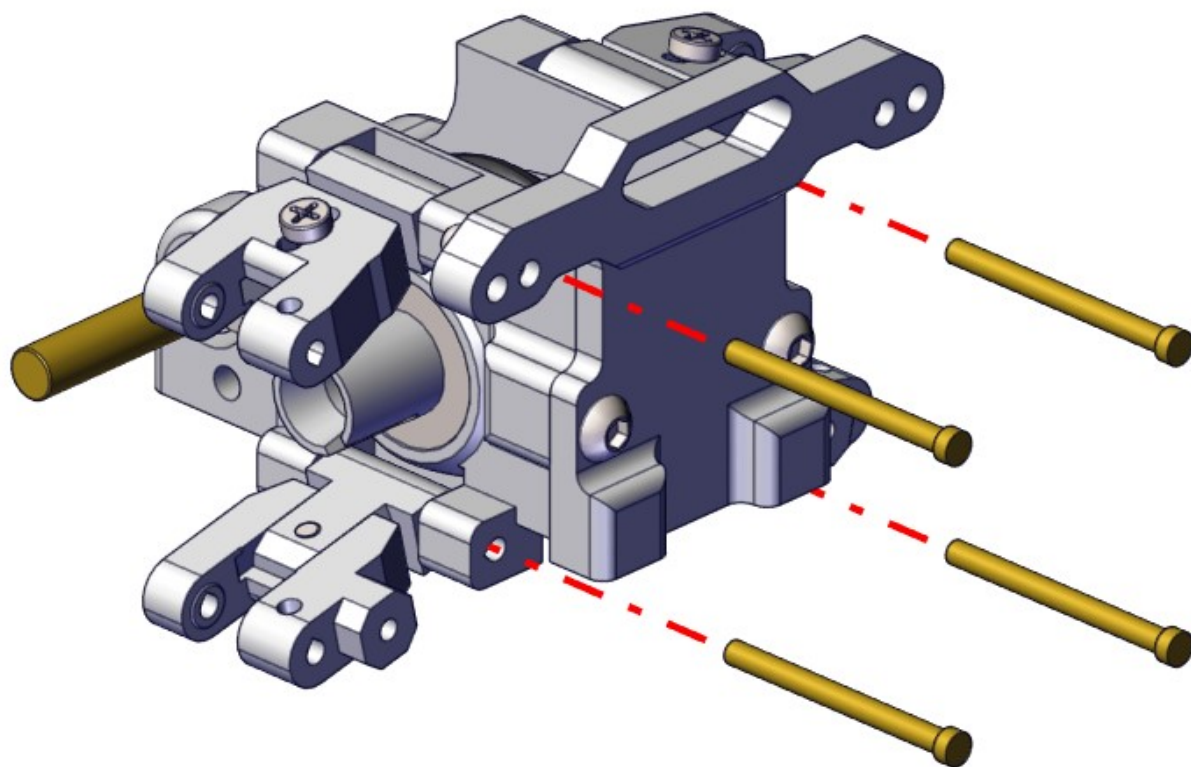


Name	Count
orlandoo ball m1.6	2
m1.4x2	2

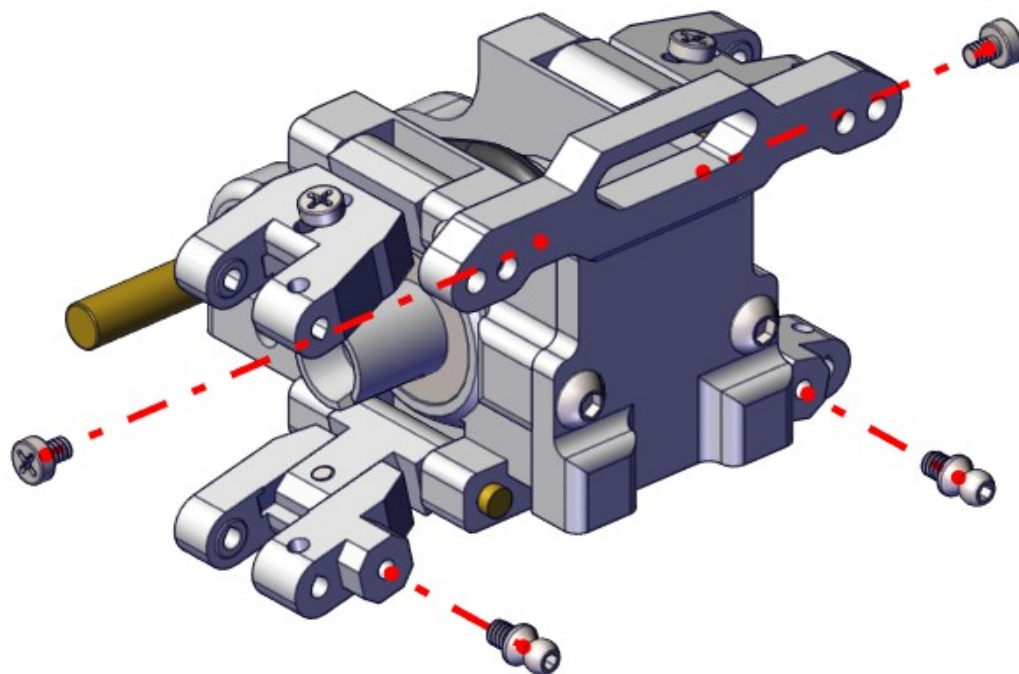


Name	Count
m2x4	2

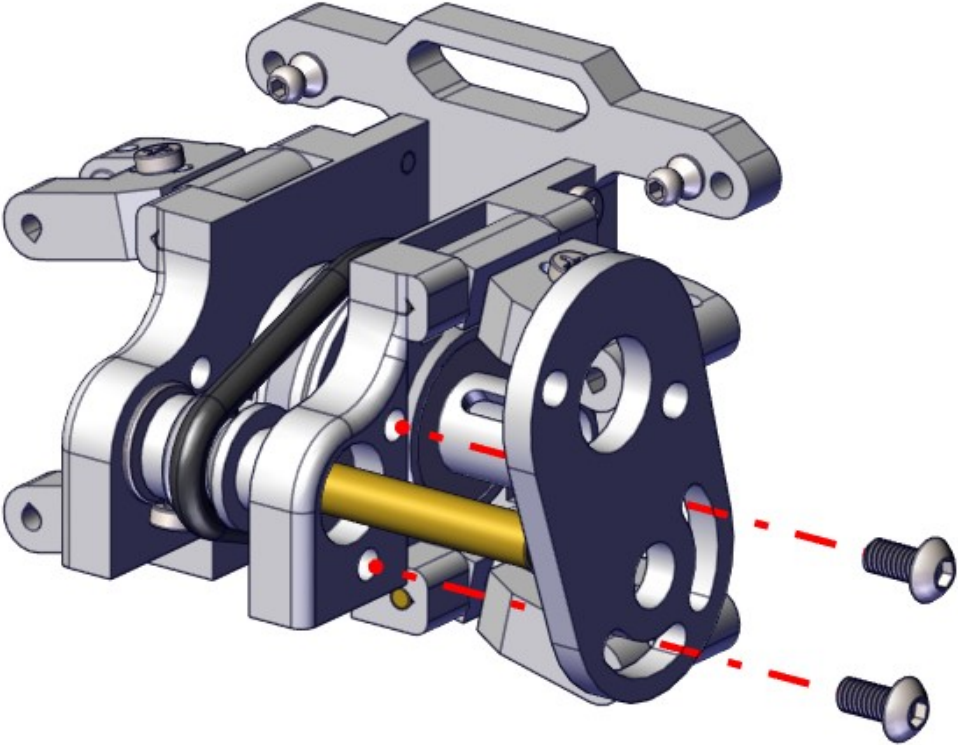


Name	Count
m1.4x2	1

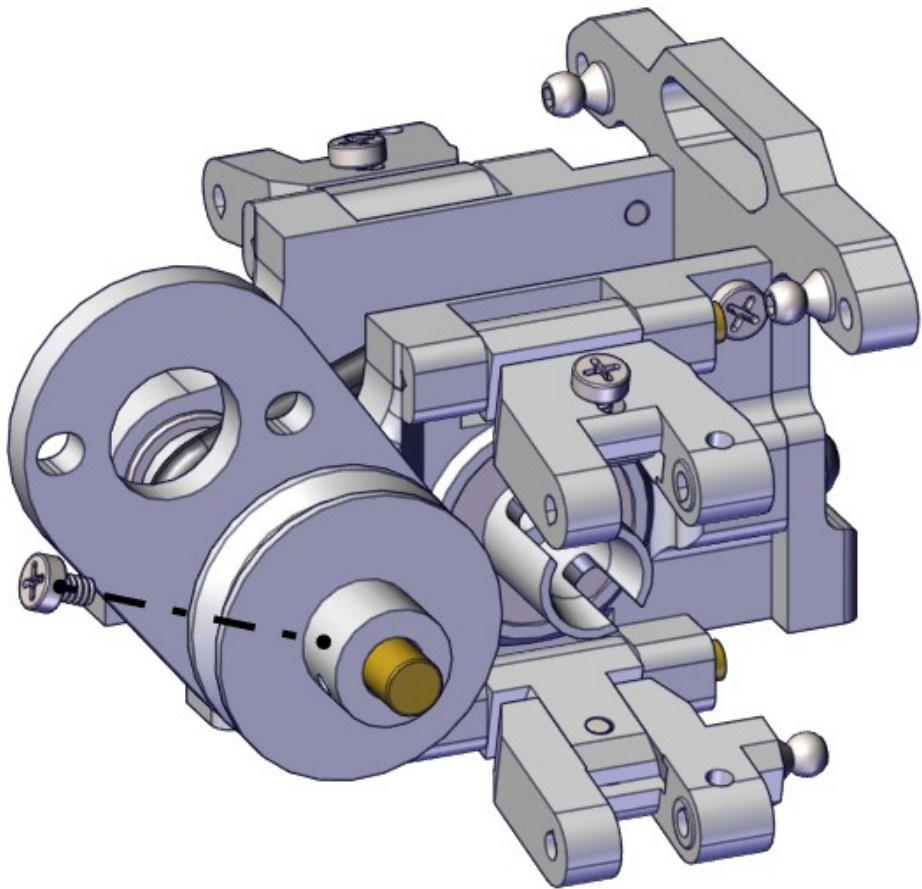


Name	Count
mr63-2	4

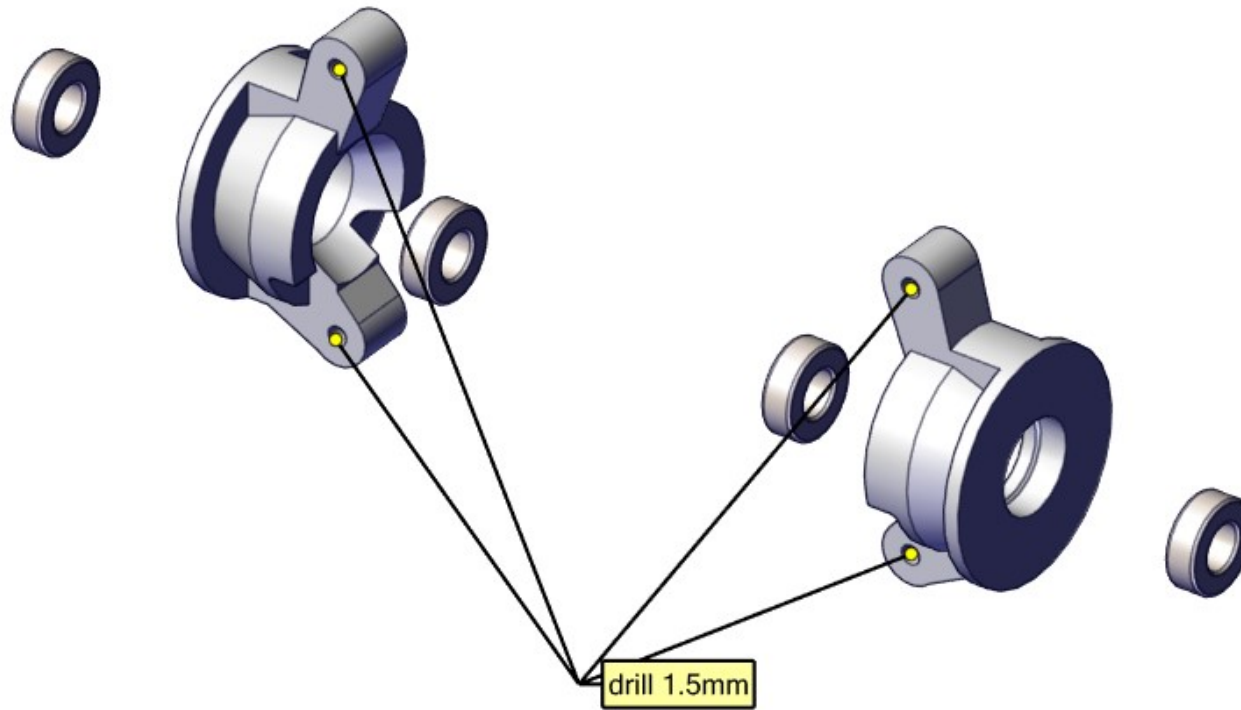


Name	Count
1.4x11	4

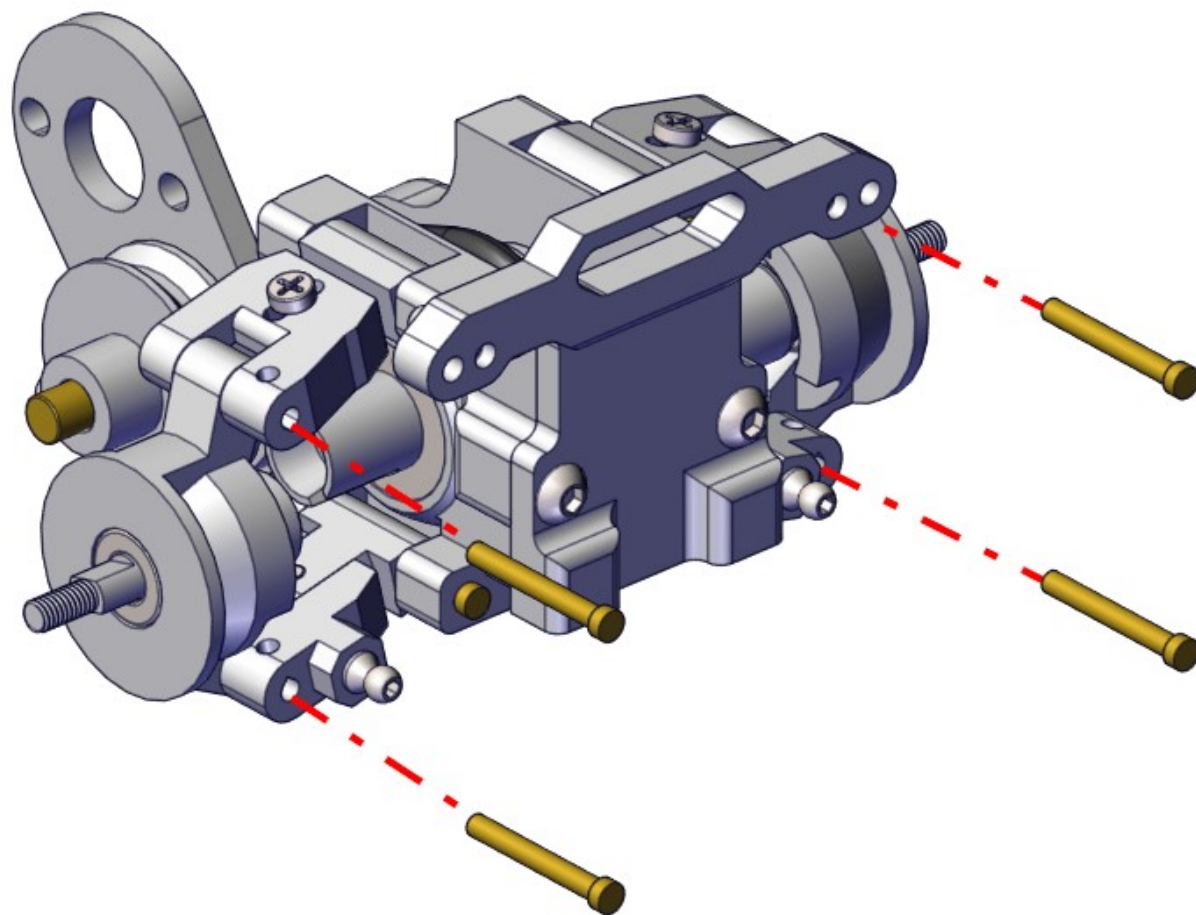


Name	Count
m1.4x2	4

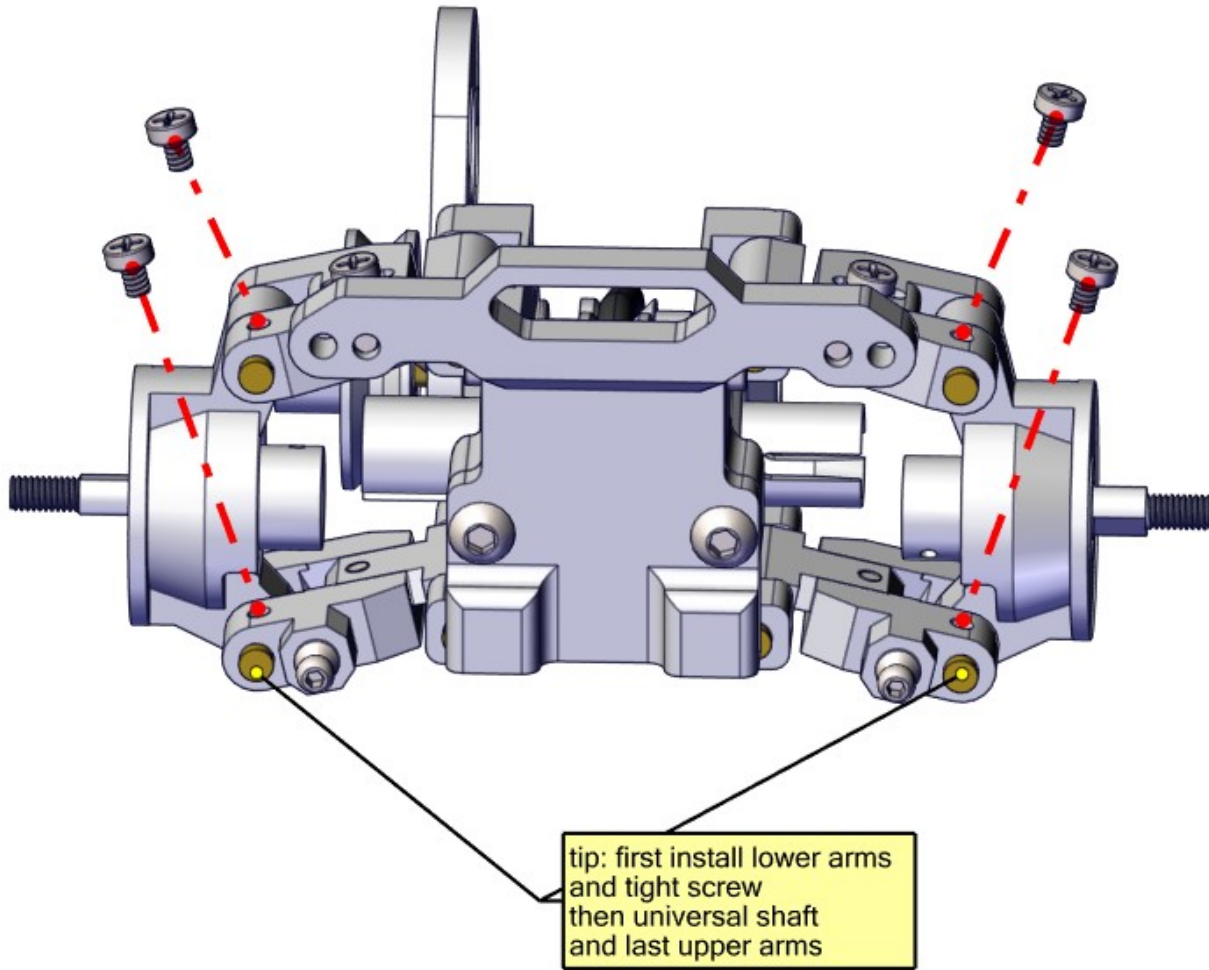


Name	Count
orlandoo shock me5-230(280)	2

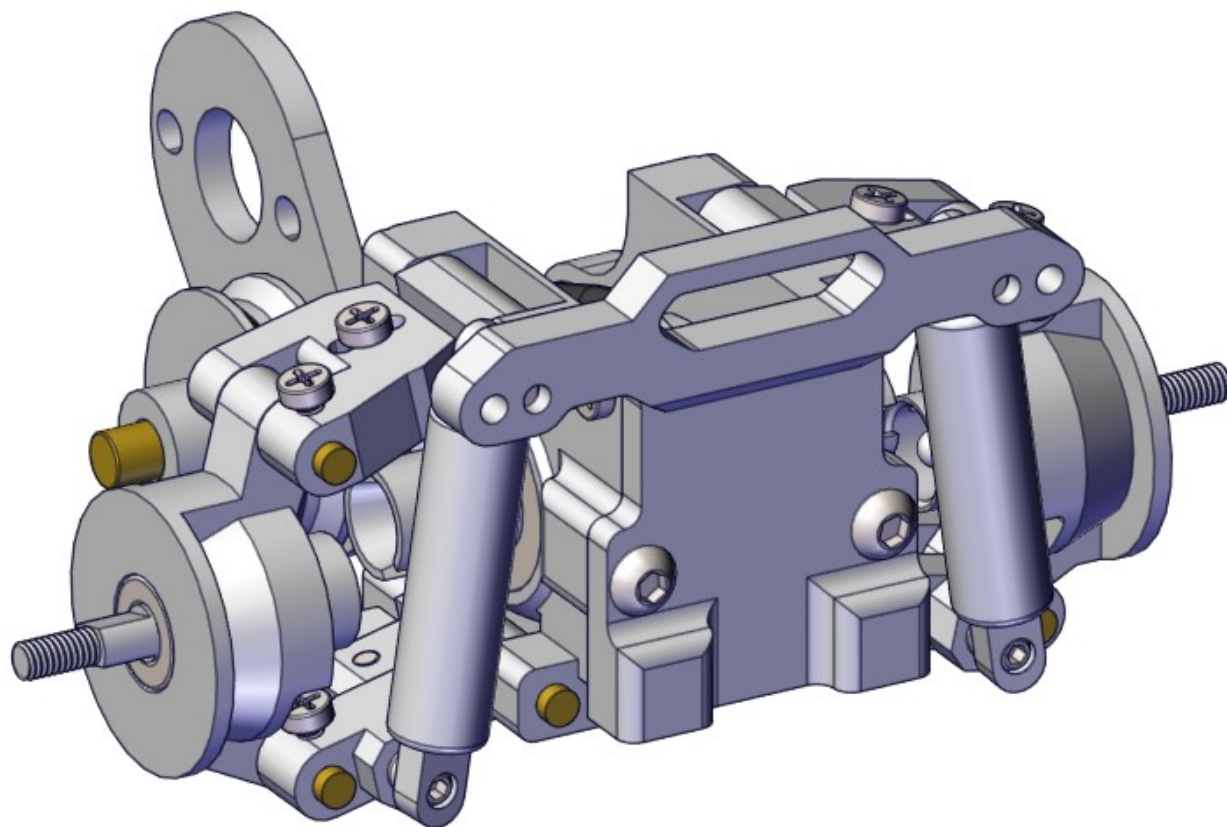


Name	Count
pinion	1
o-ring 18id 2cs pinion-spur	1
m2x4	2

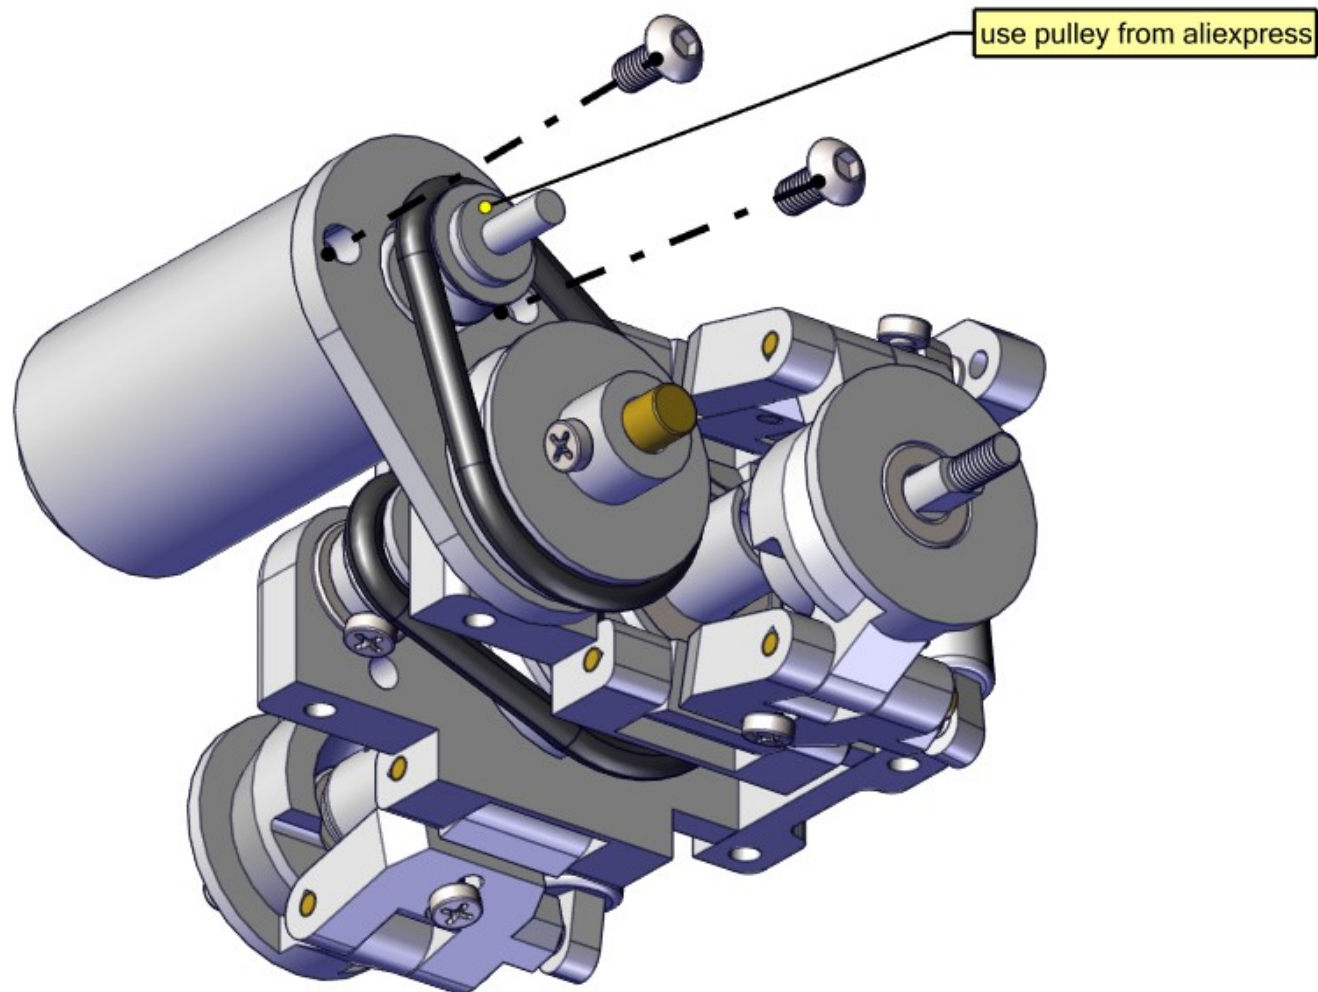



Name	Count
m2x4	4

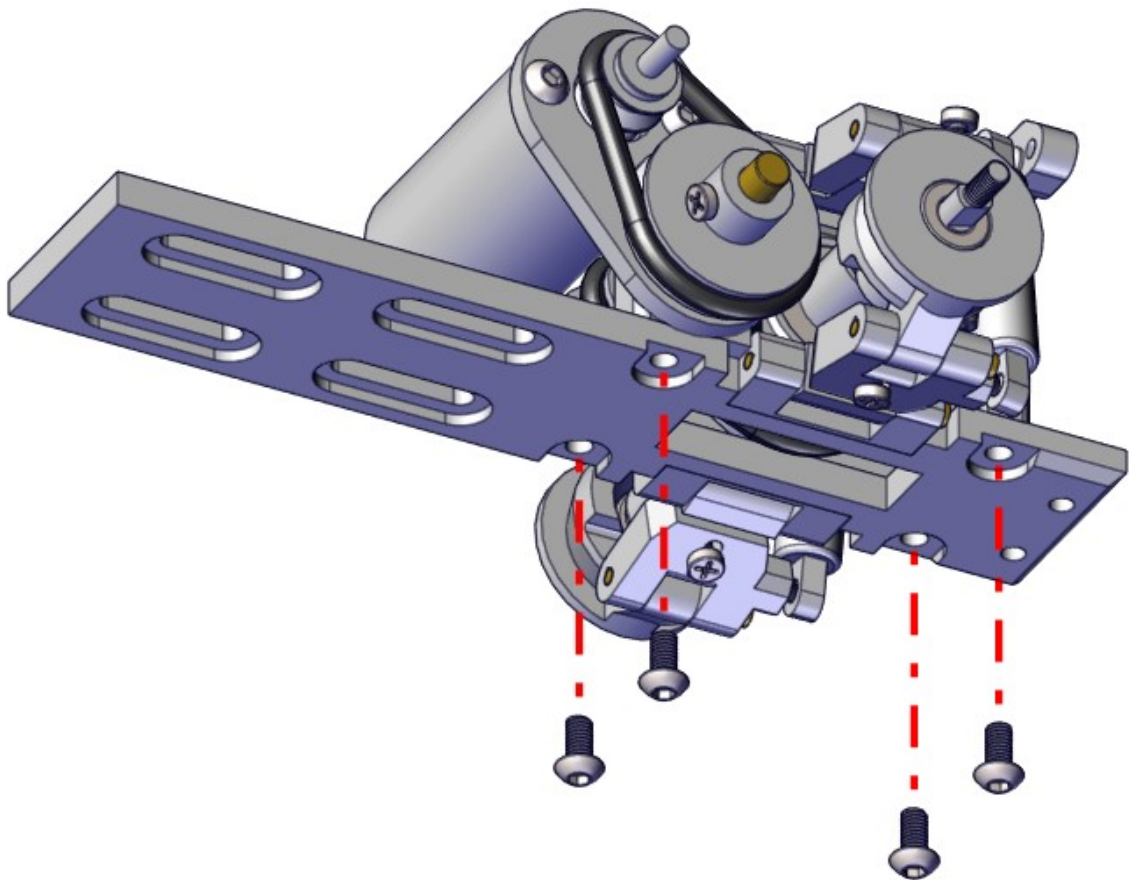


Name	Count
m2x4	2

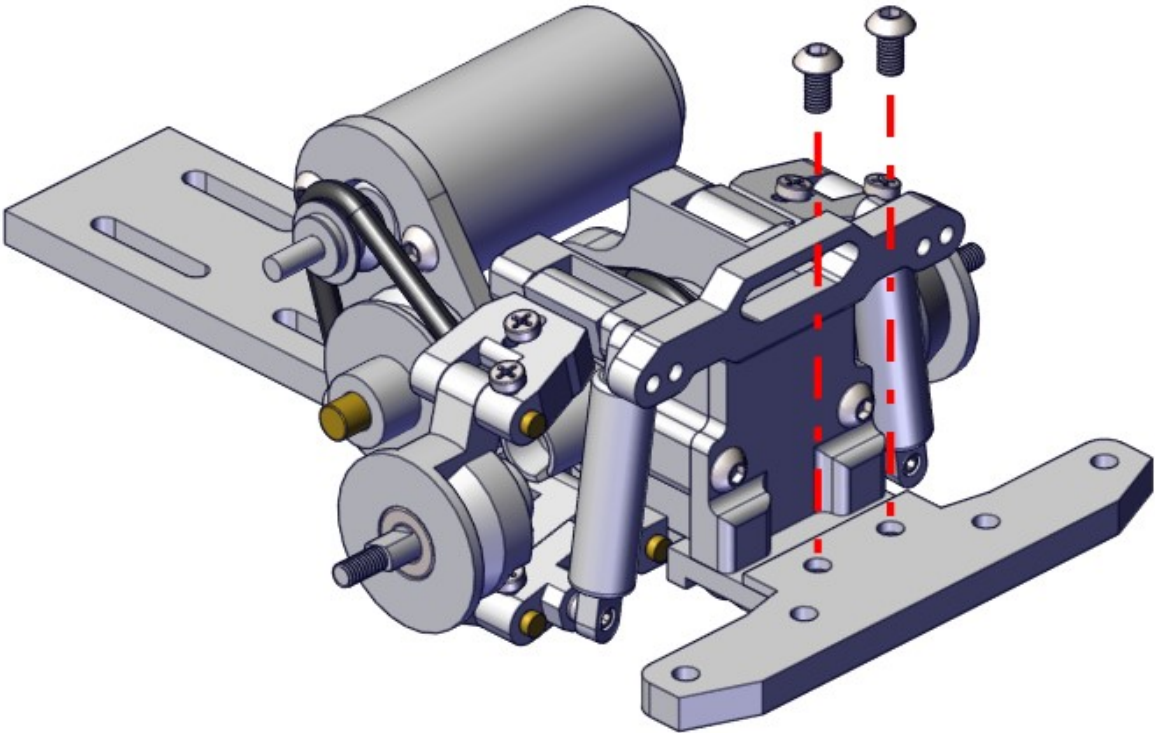

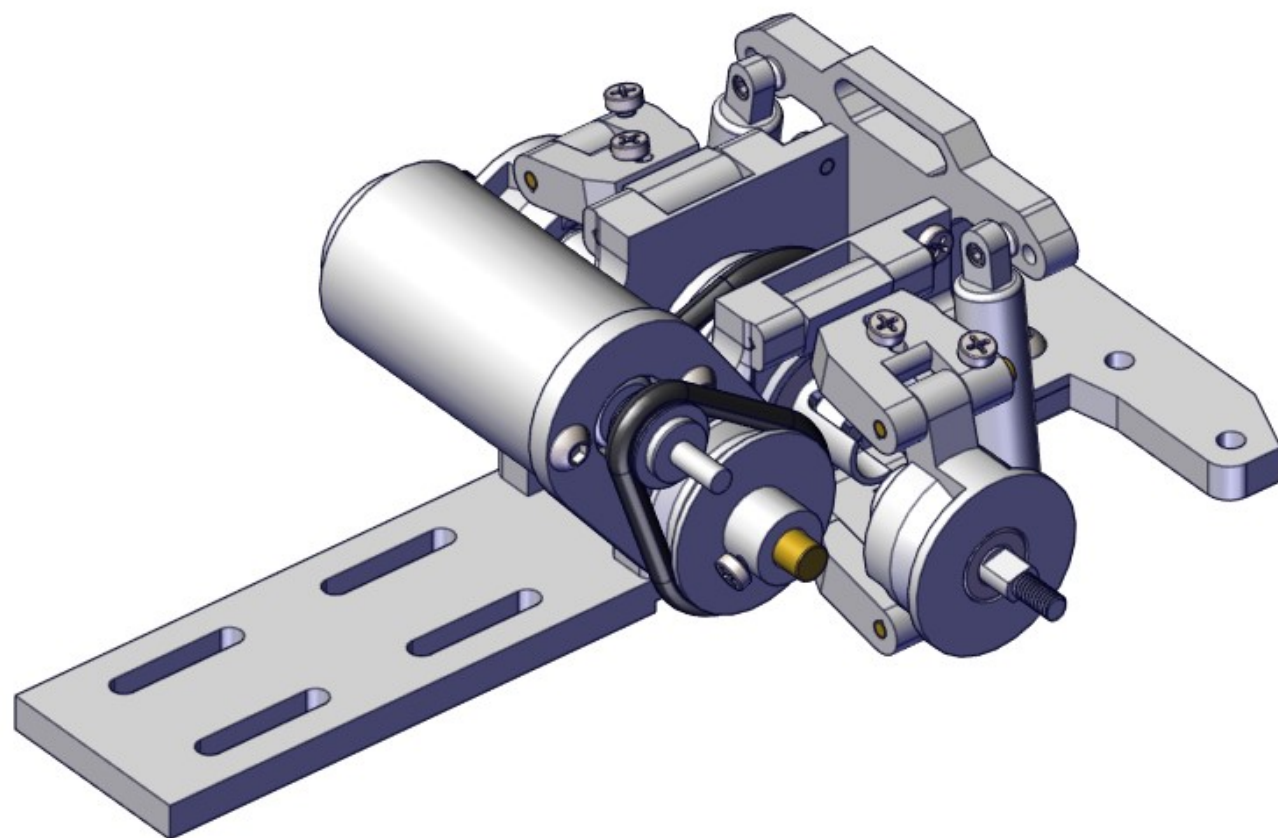


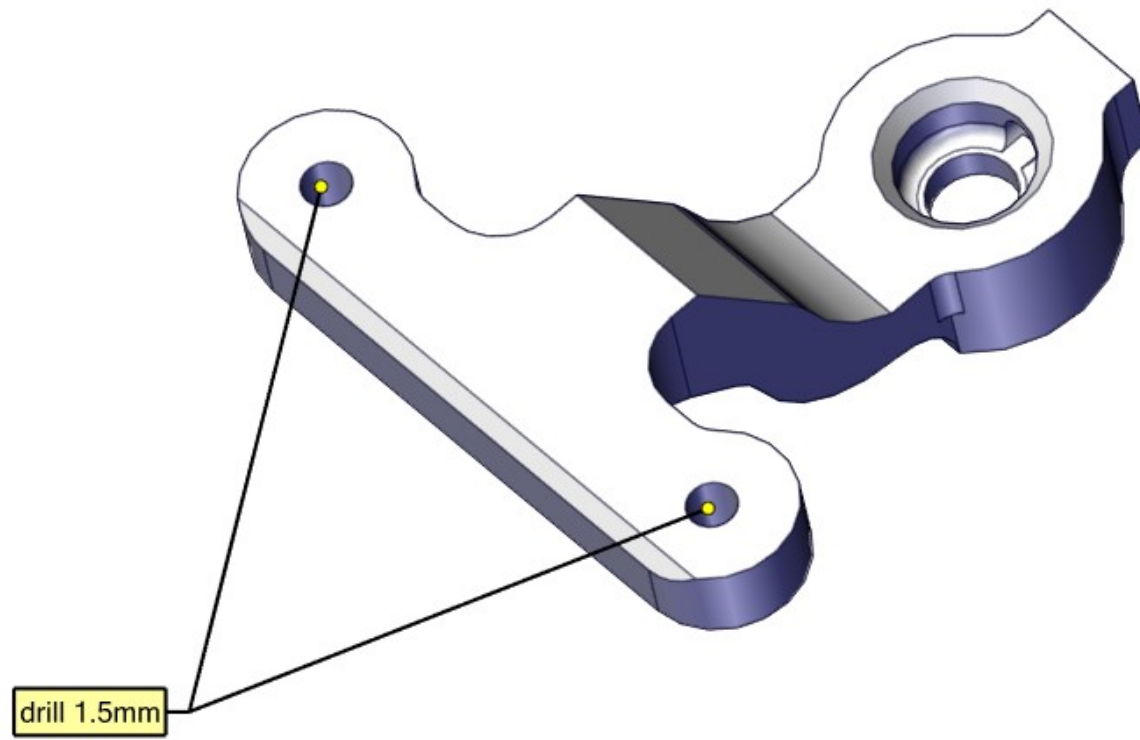


Name	Count
m2x4	2

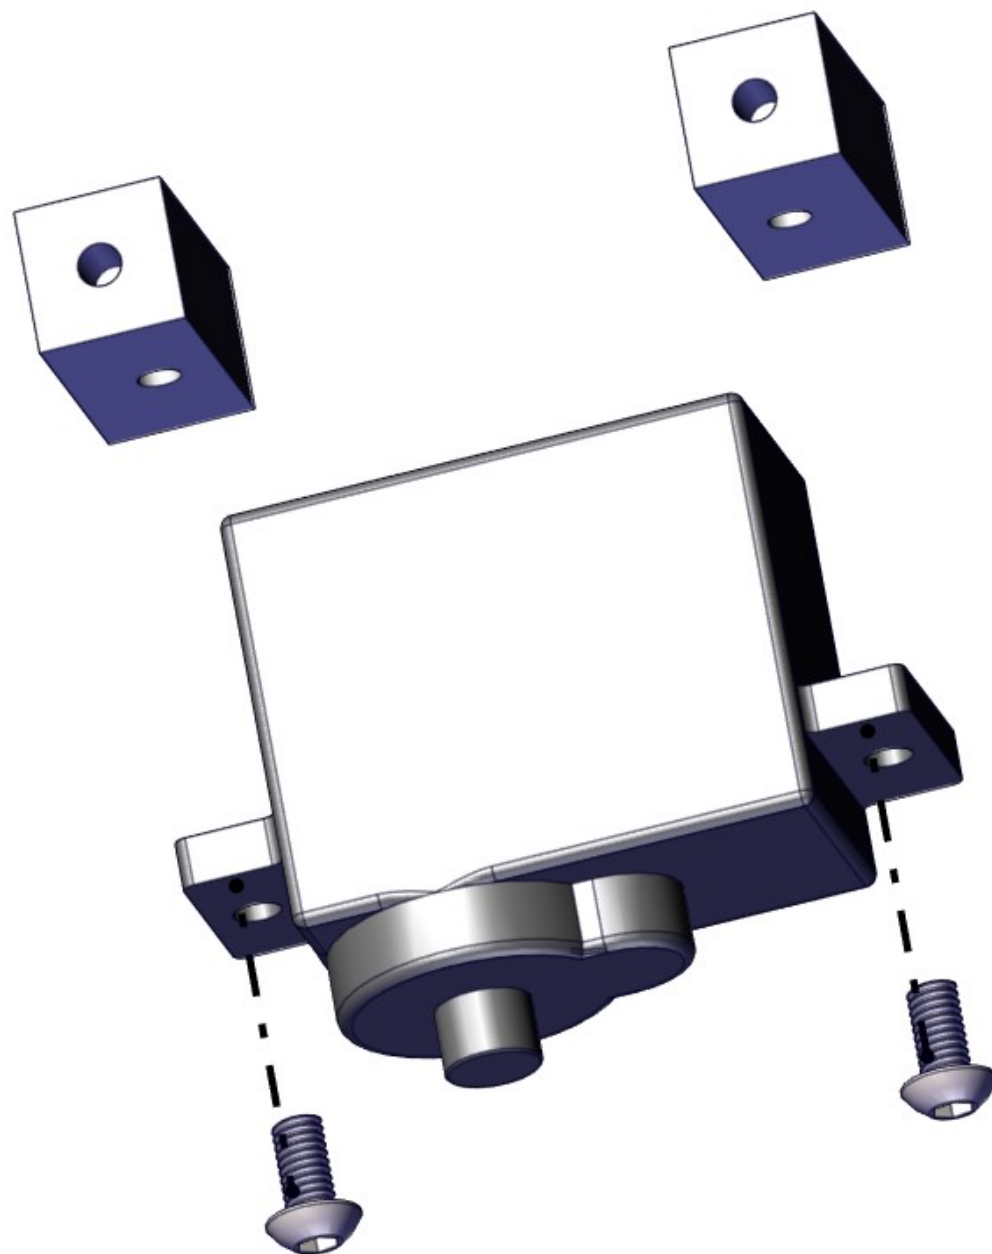


Name	Count
m2x4	1

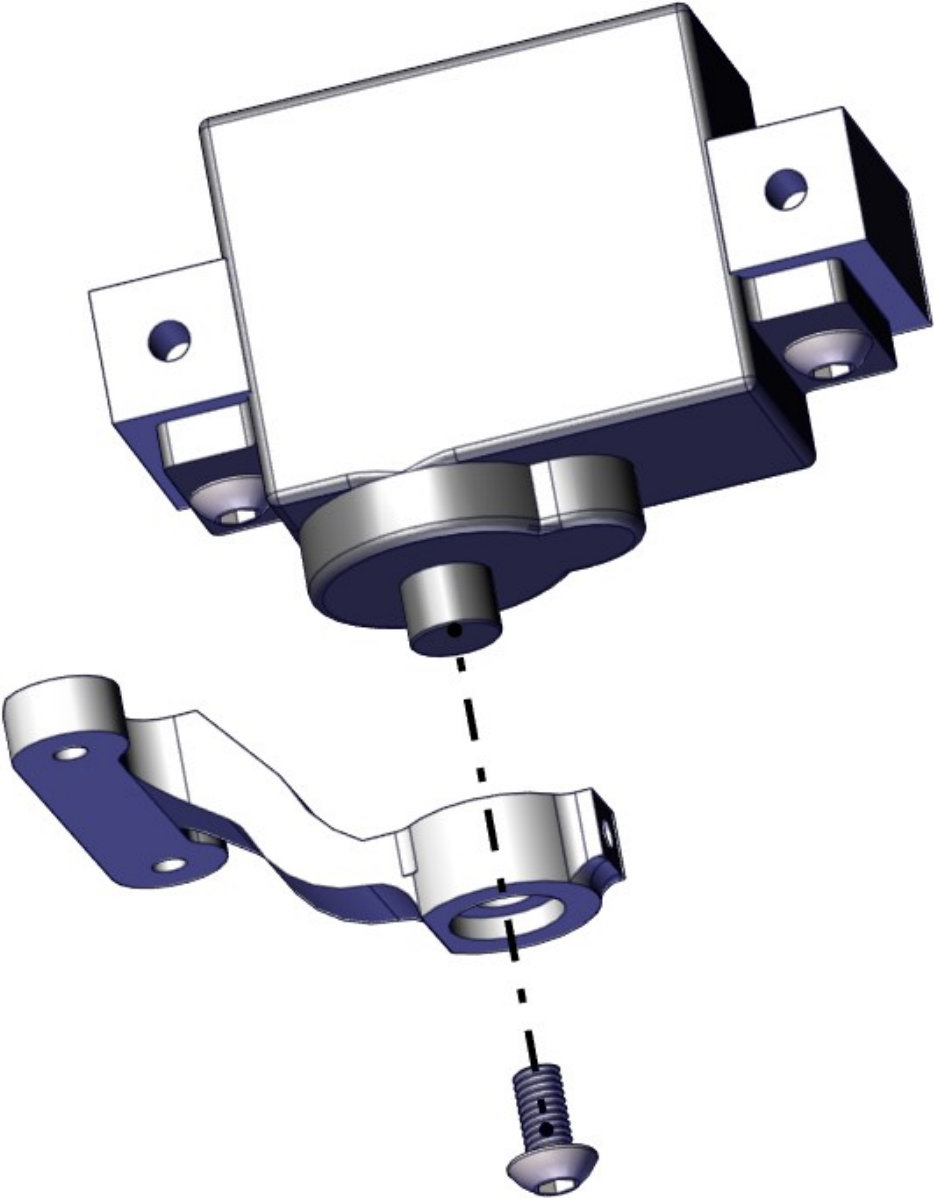



Name	Count
orlandoo ball m1.6	2
m1.4x4	1

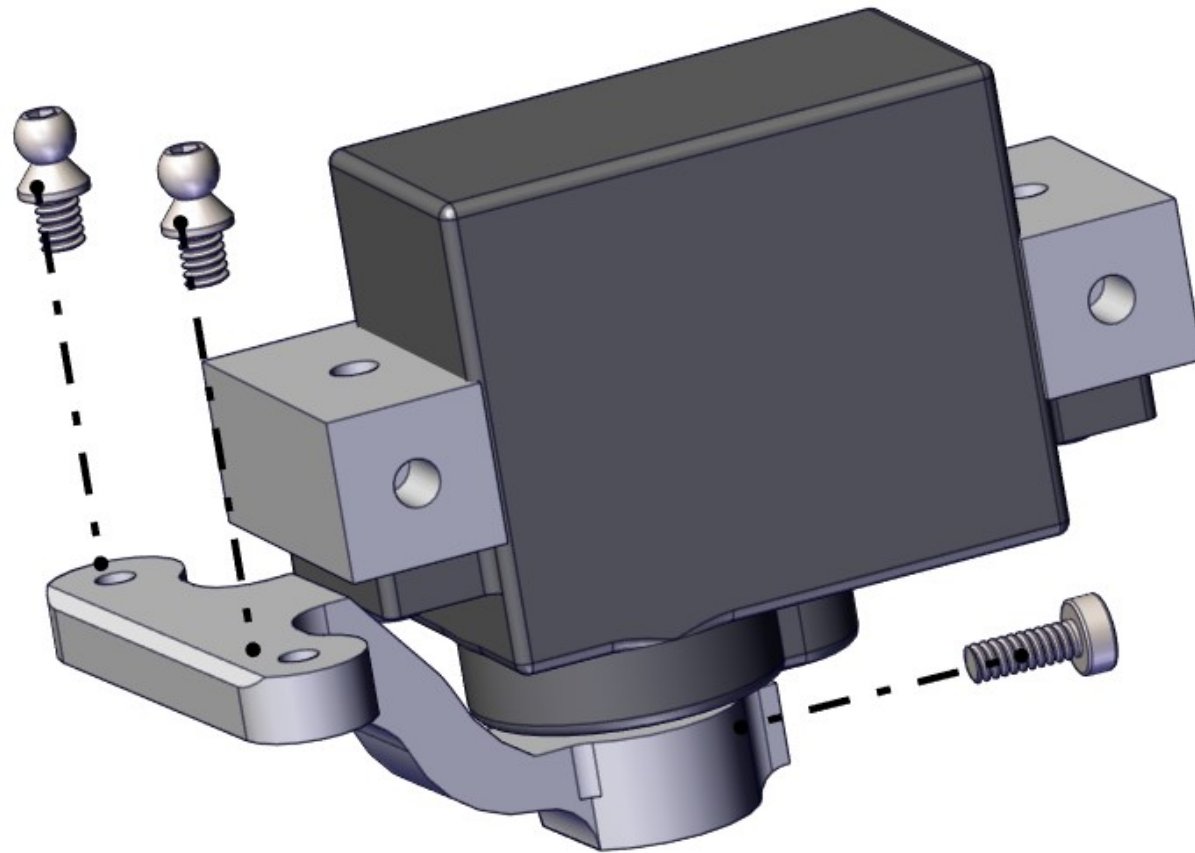

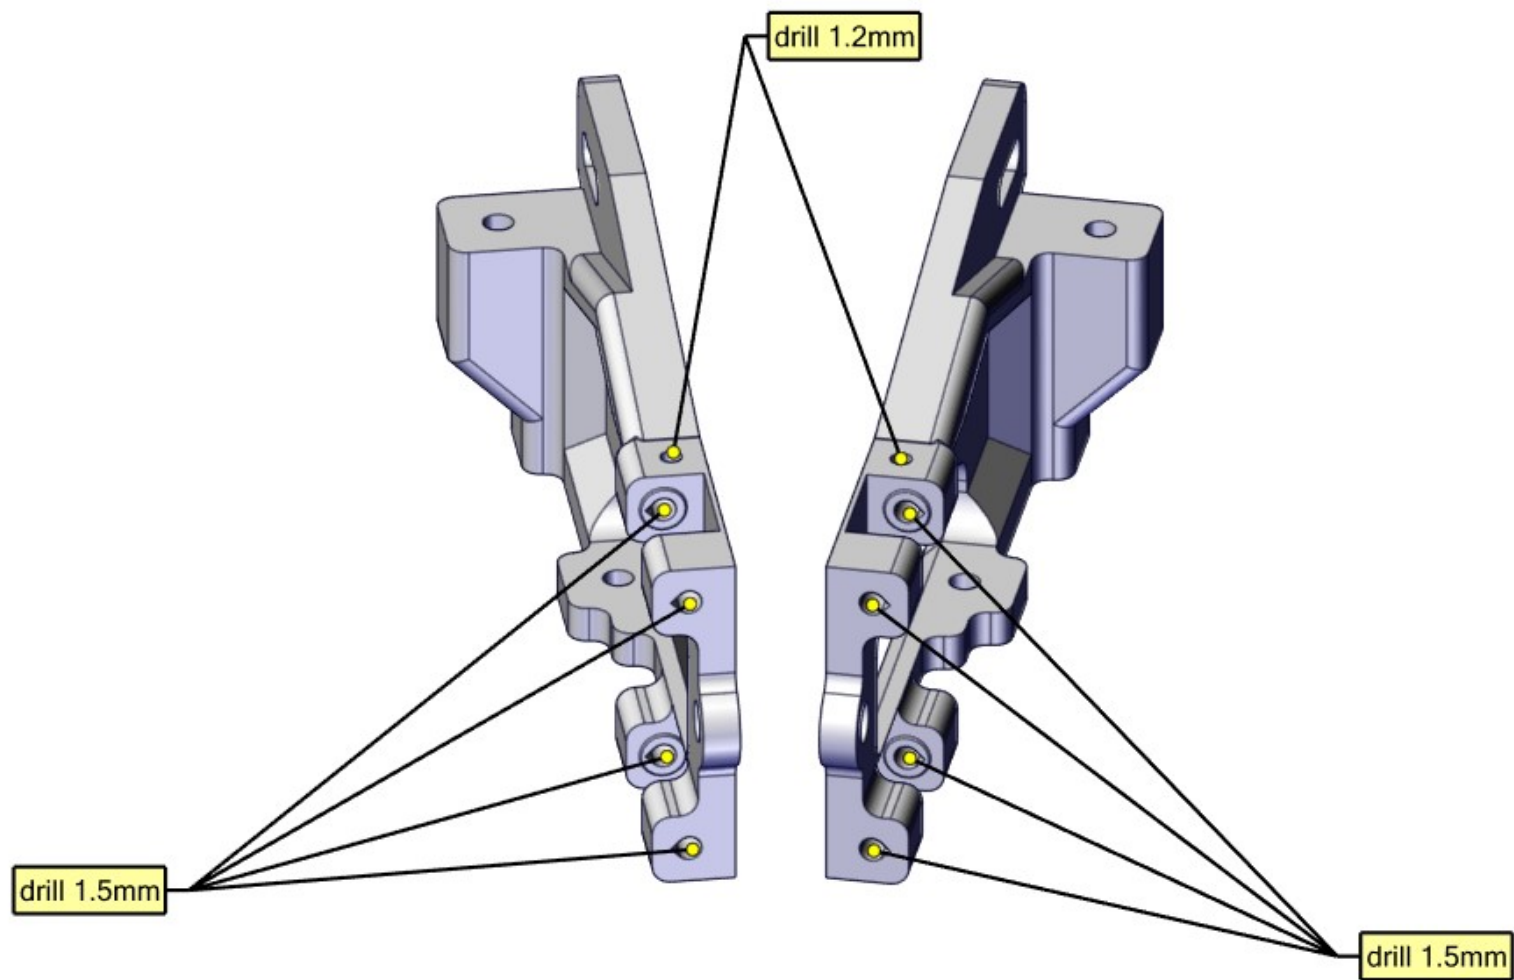



Name	Count
m2x4	6

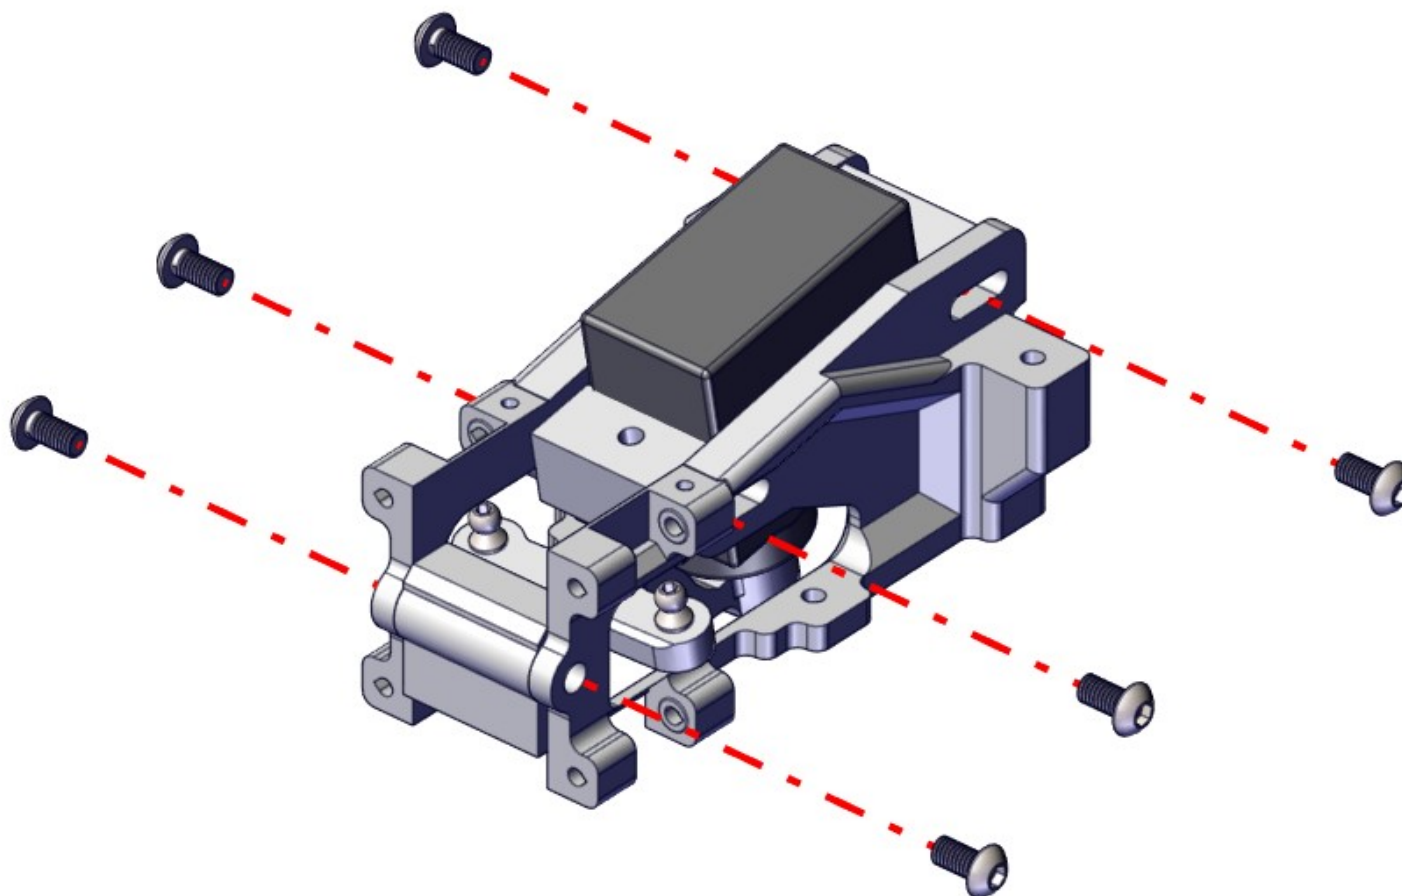


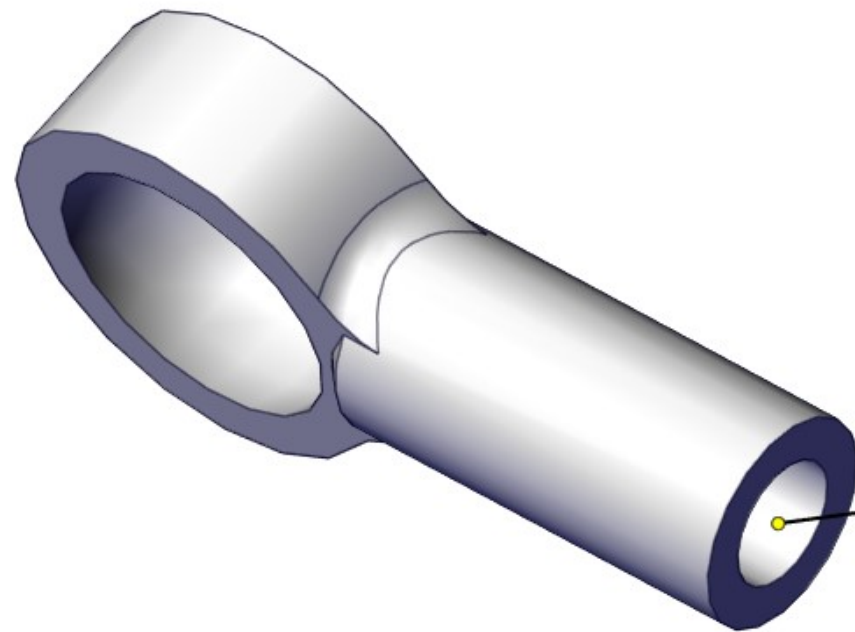


recommendation:
use m1.4 tap
thread on all
orlandoo caps

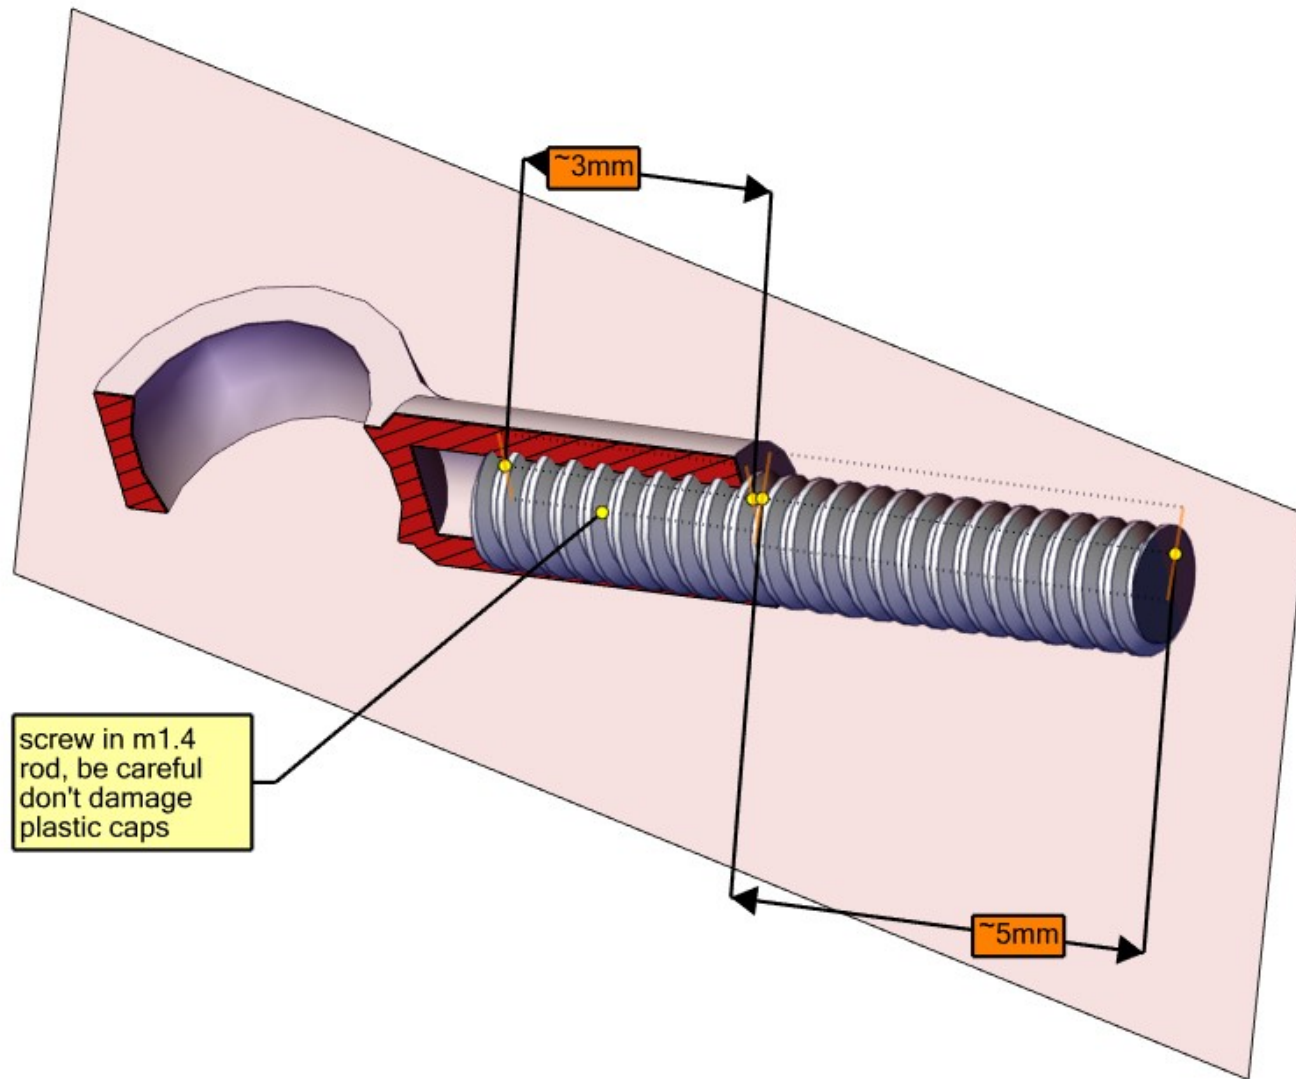

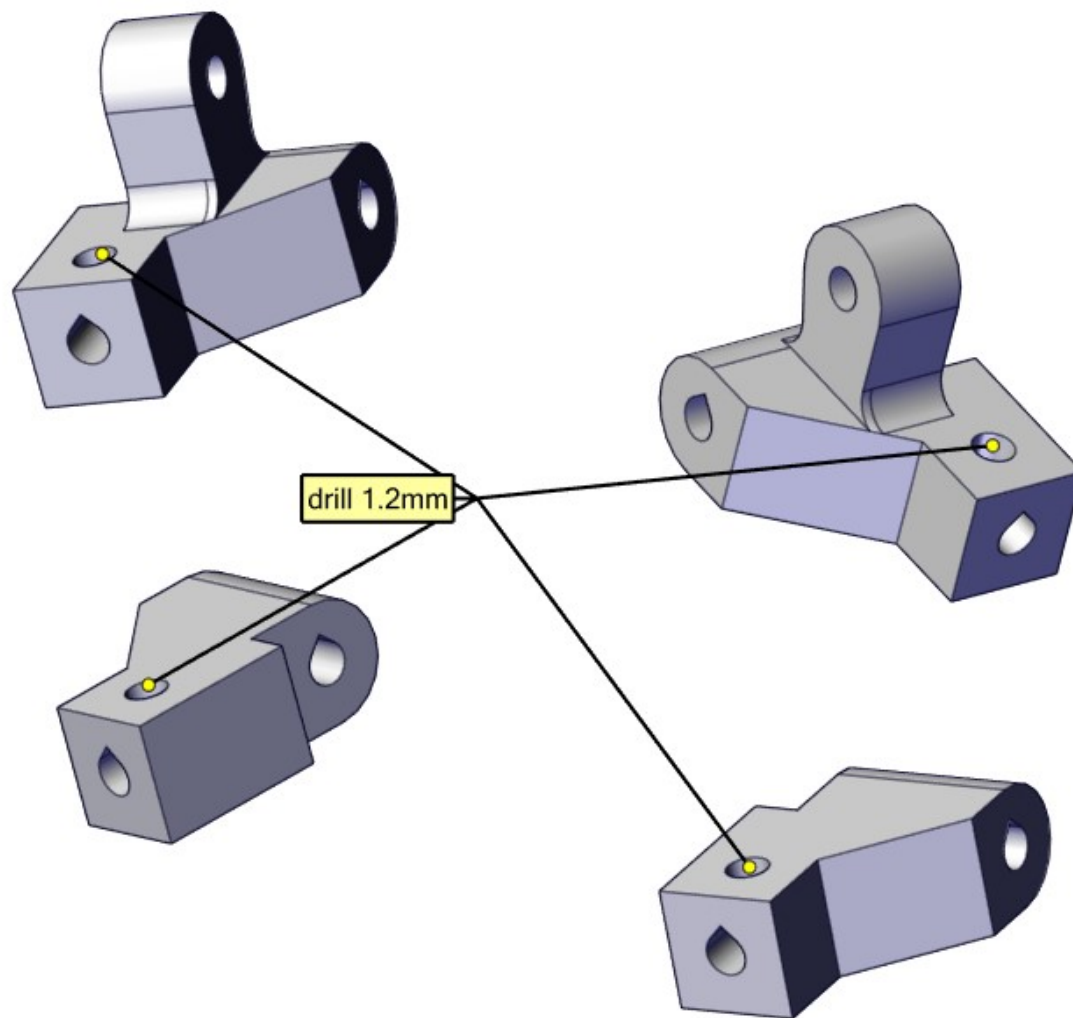




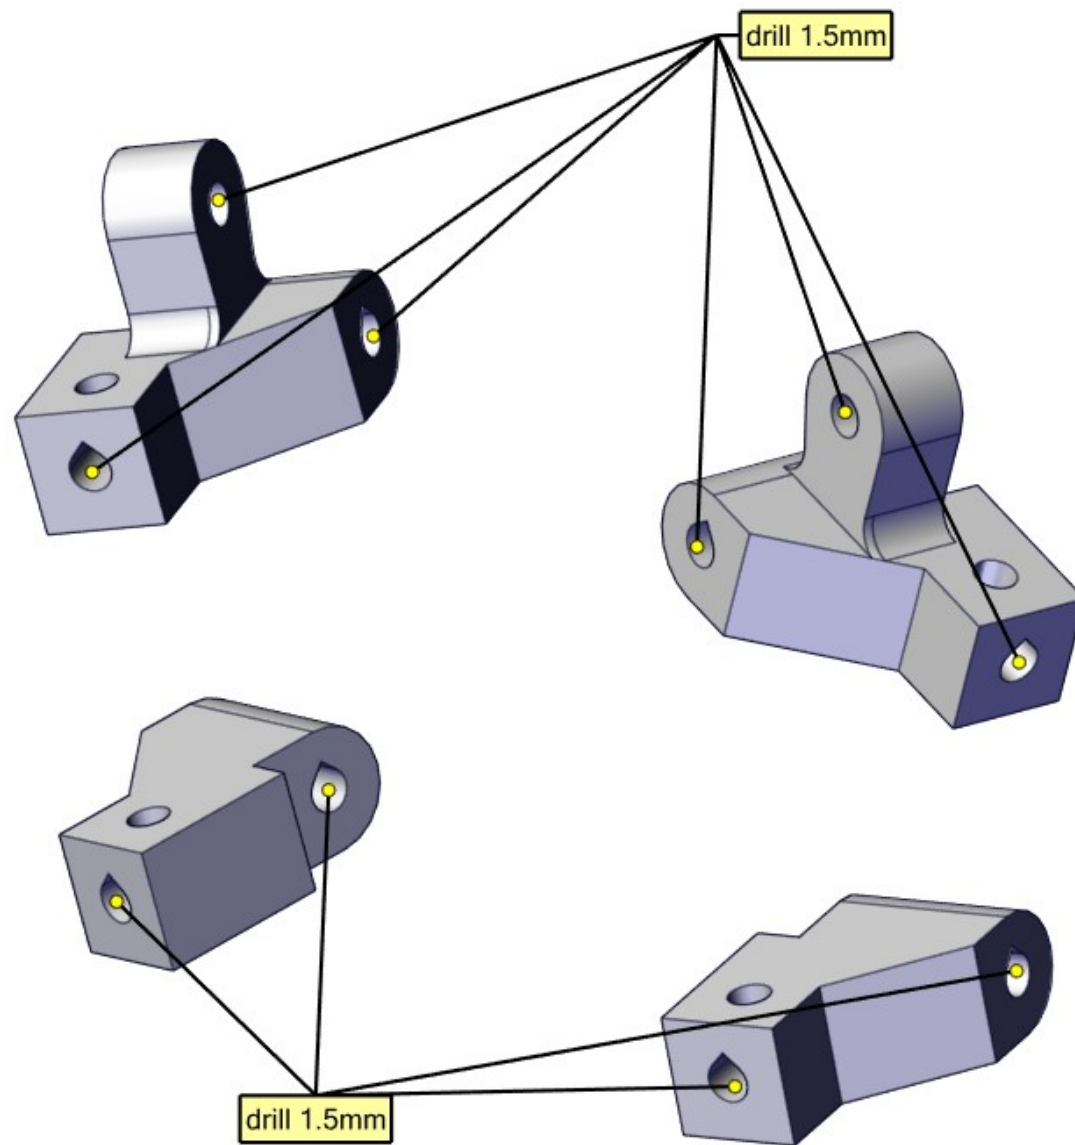


Name	Count
orlandoo ball m1.6	2

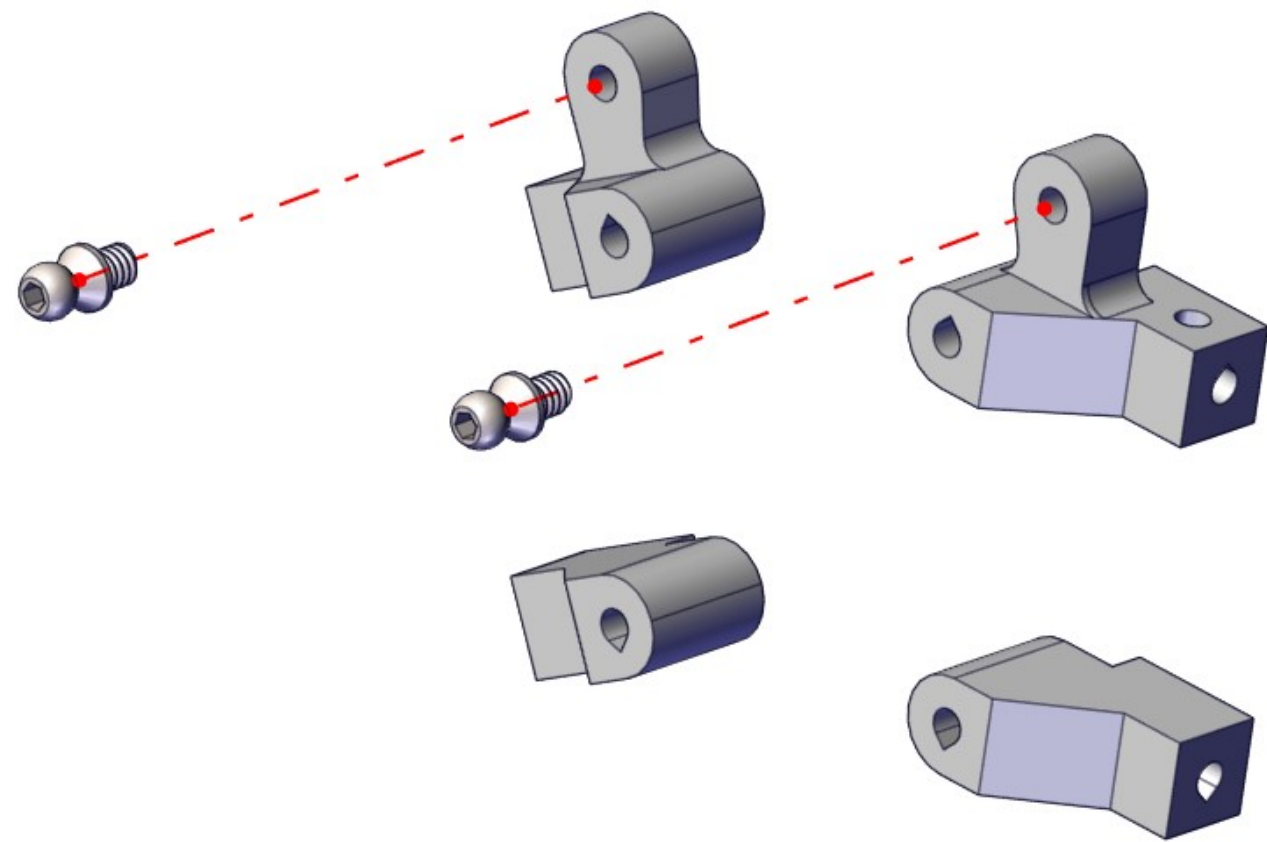



Name	Count
olandoo ball cap	4
m1.4x8 rod	4
m1.4x2	4


adjust length then tight screw

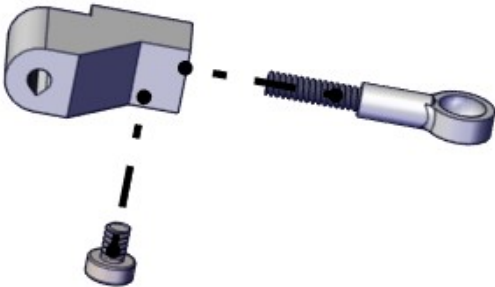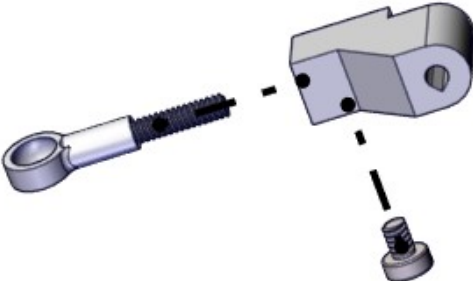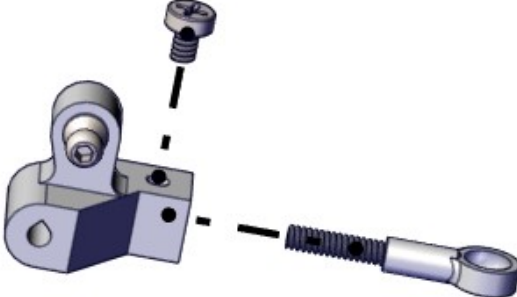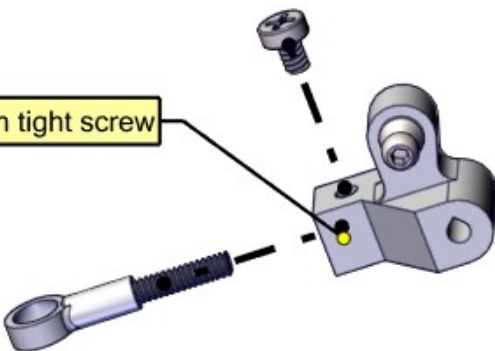



Name	Count
m1.4x2	2
1.4x14	4

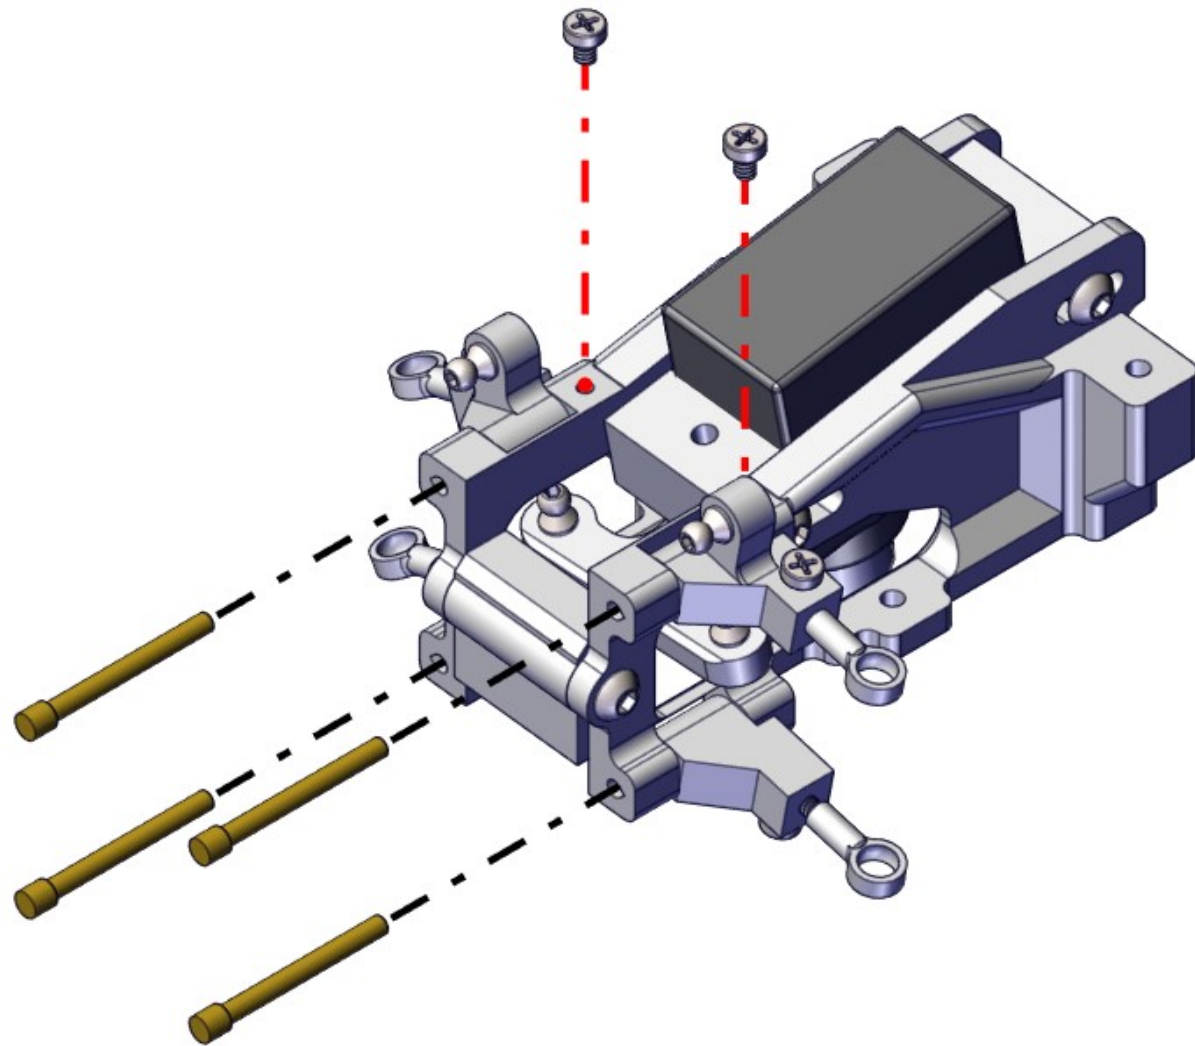

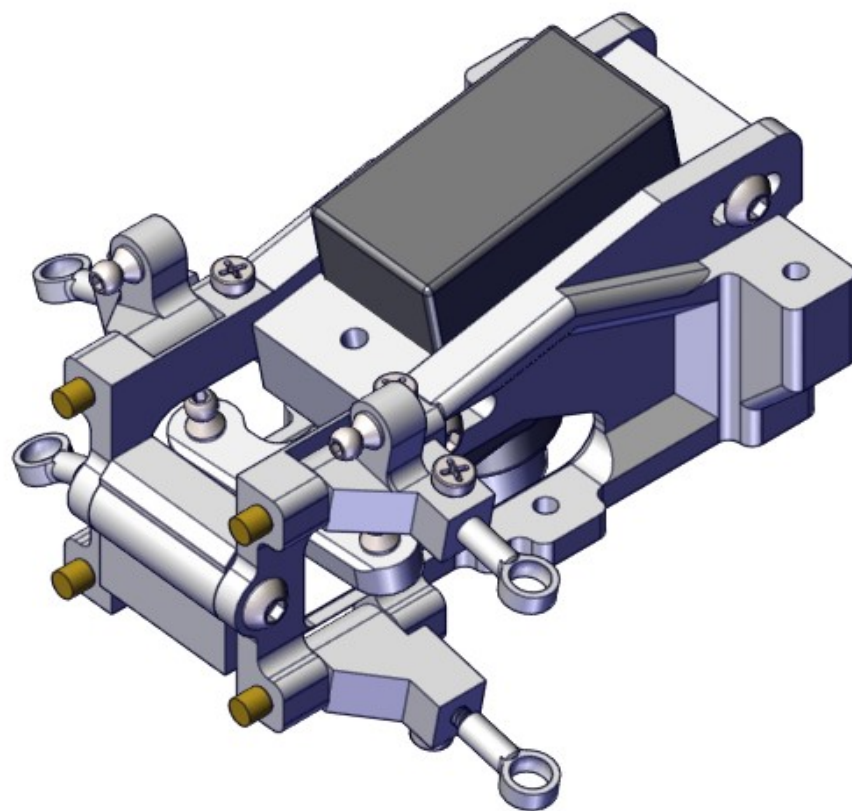


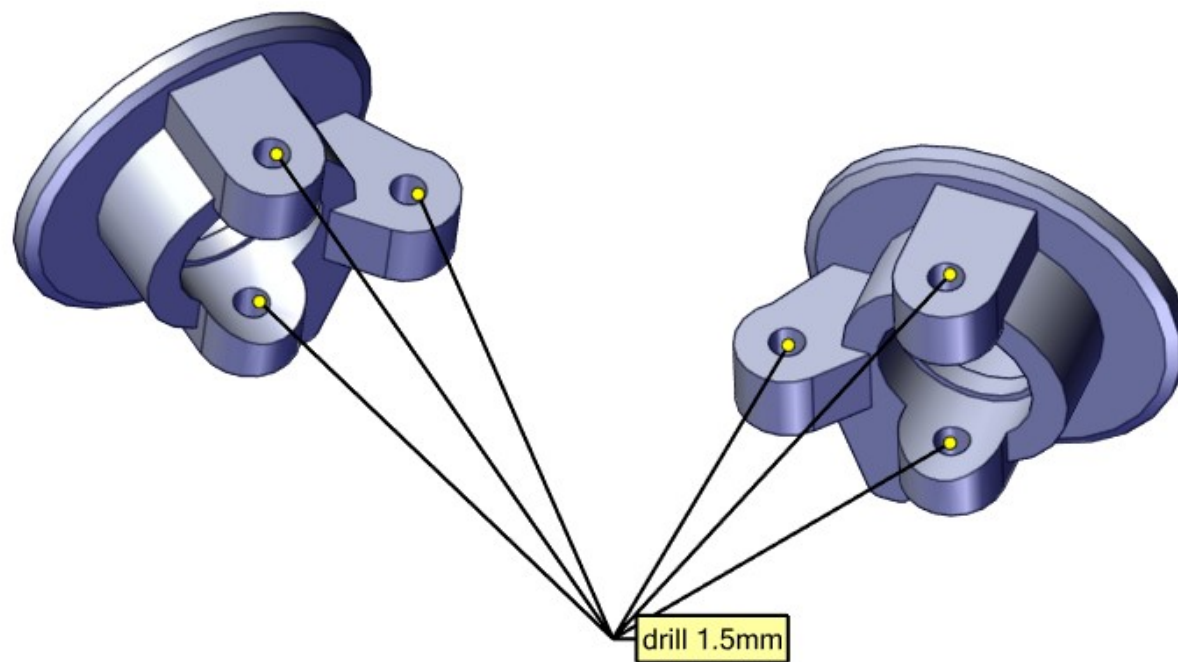


Name	Count
orlandoo ball m1.6	6
mr63-2	4

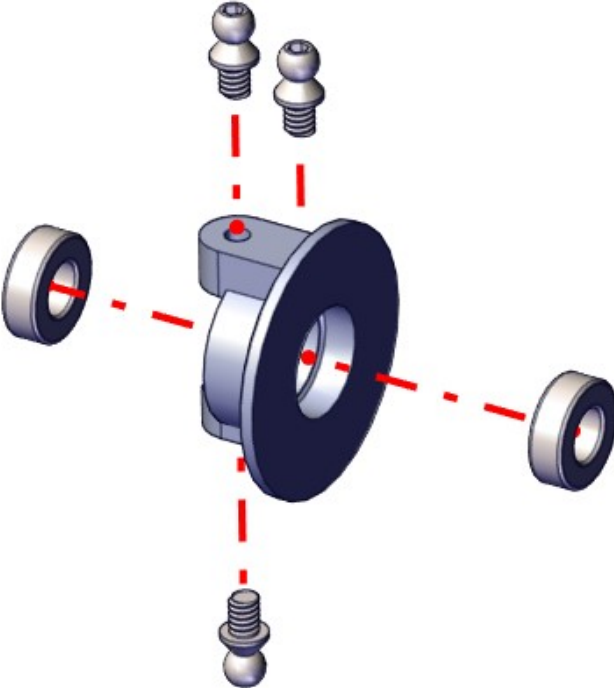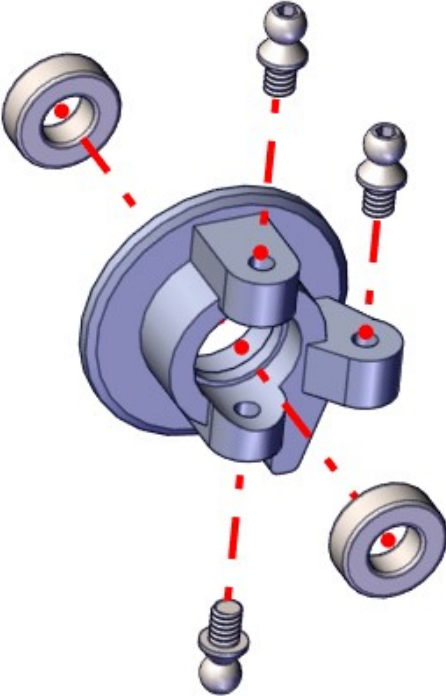


disassemble and cut two universal shafts for front

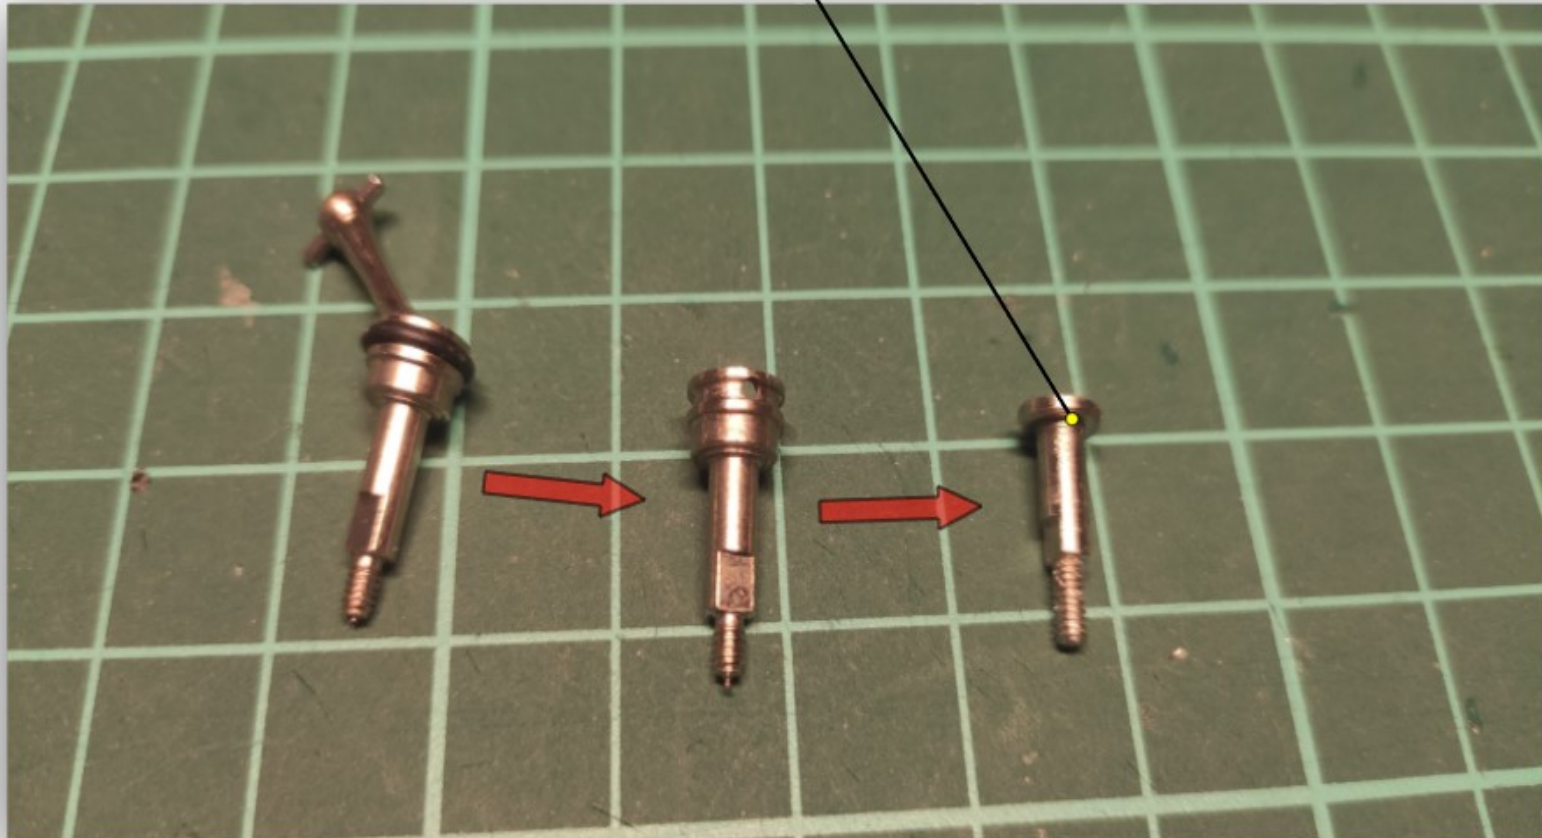


Name	Count
orlandoo shock me5-230(280)	1

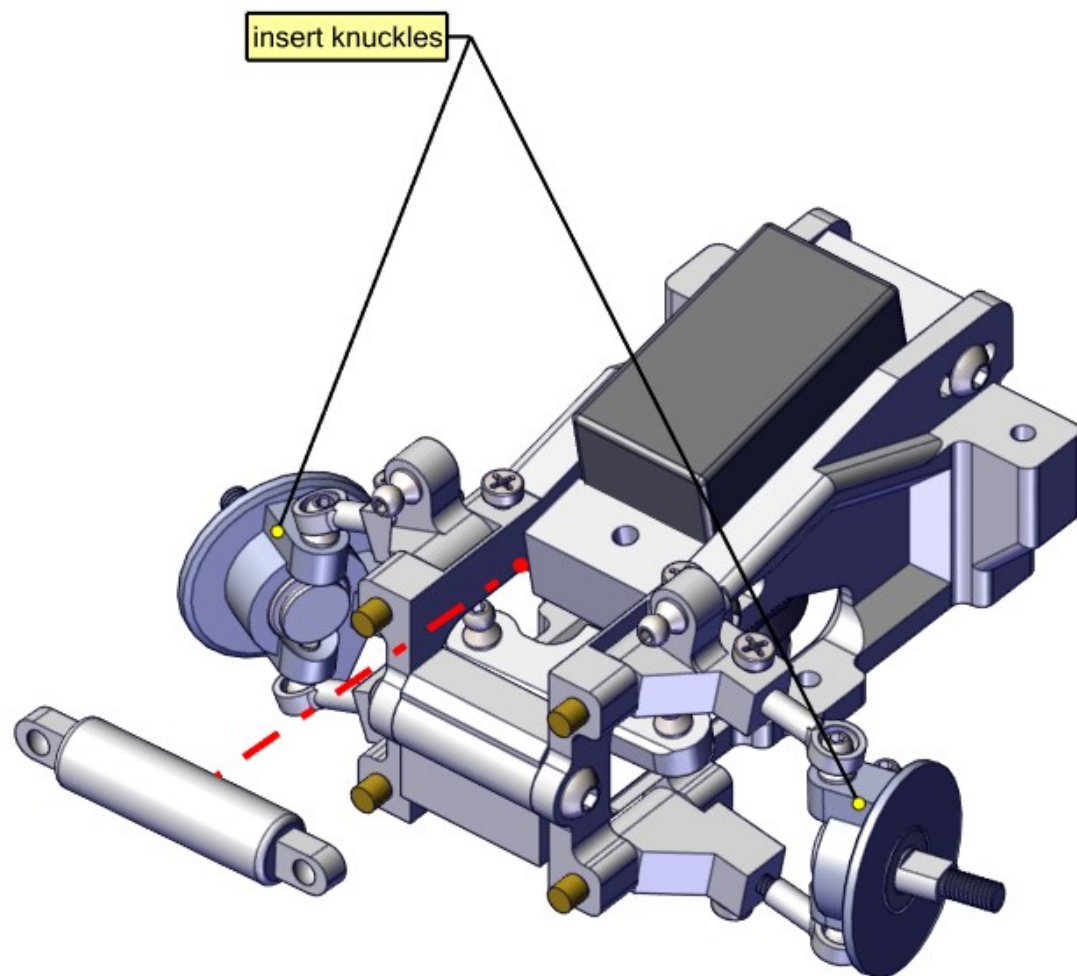


Name	Count
m2x4	5

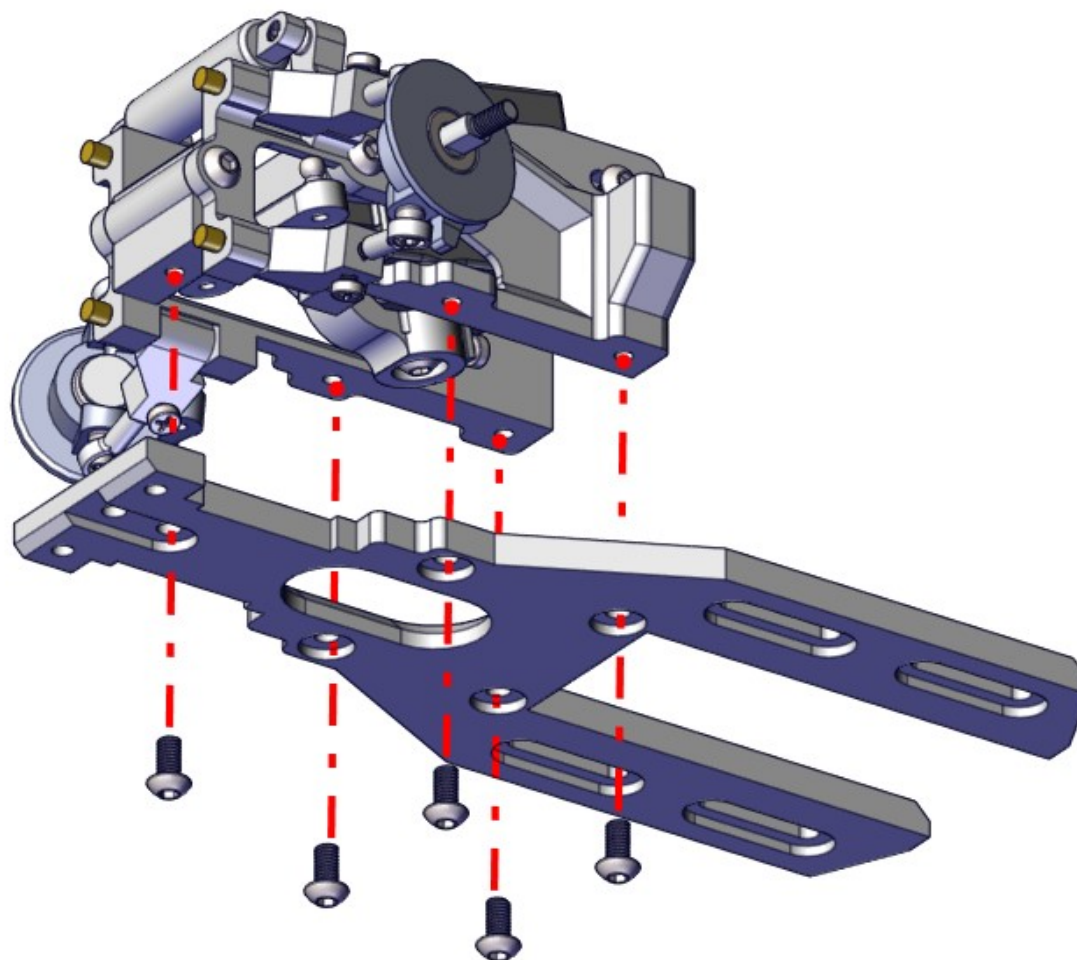


Name	Count
olando ball cap	4
m1.4x8-10 rod	2

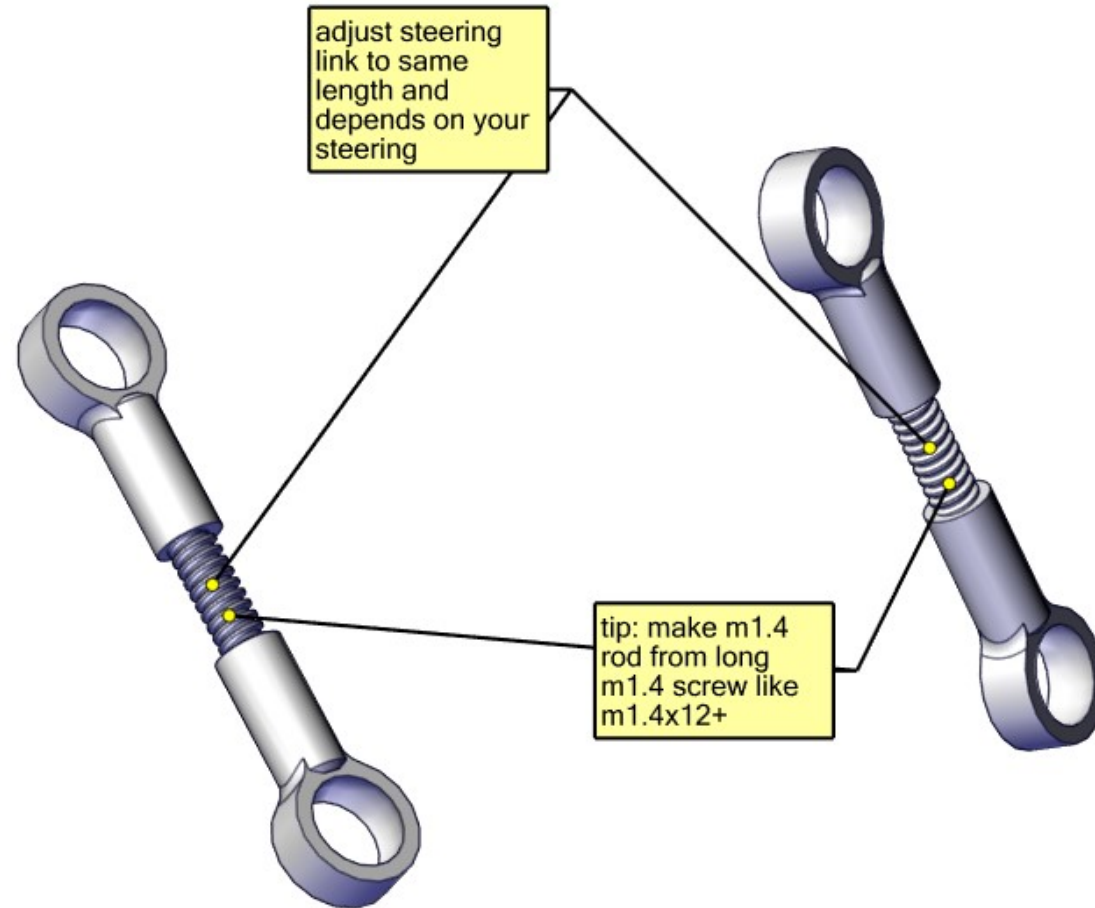


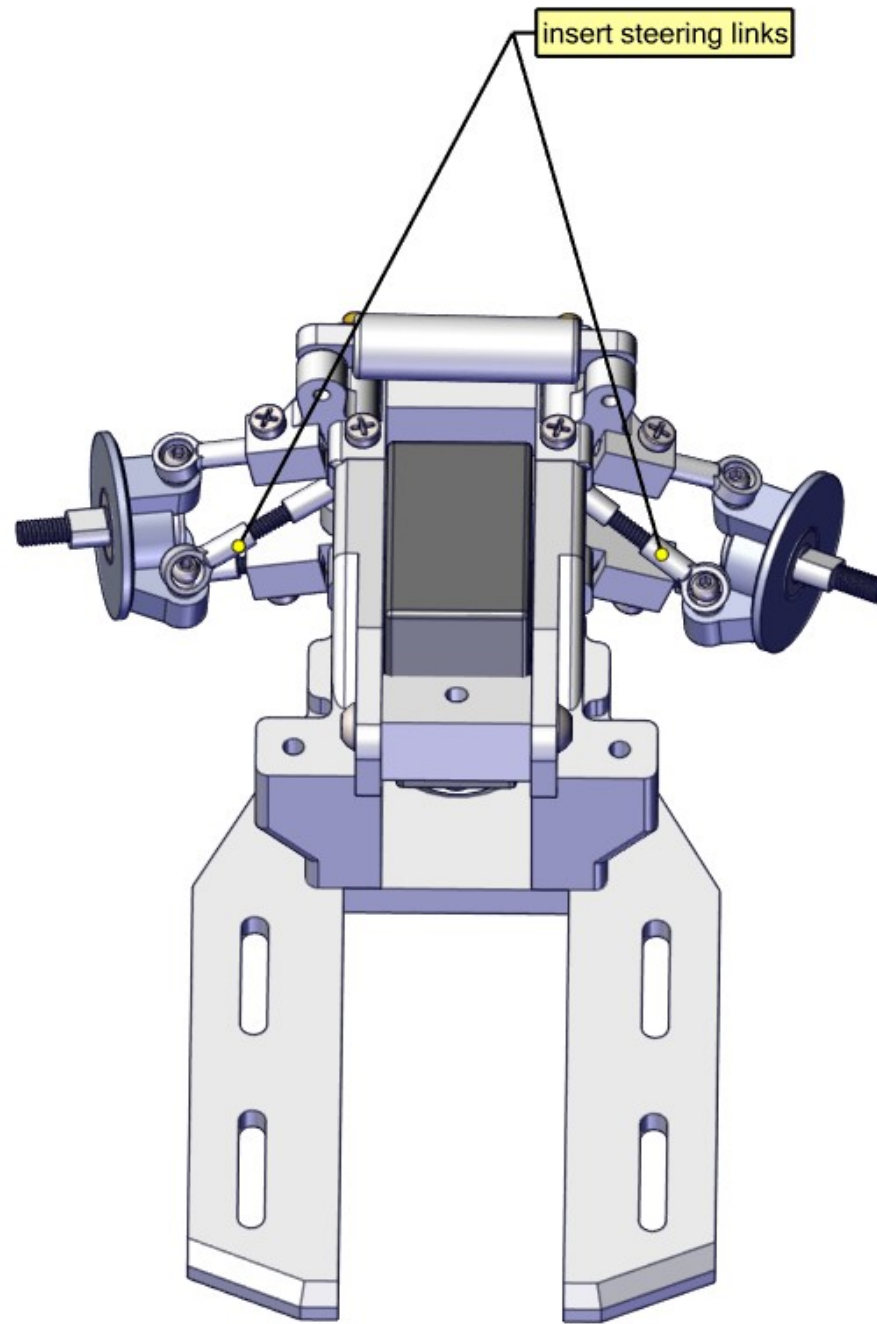

Name	Count
m2x4	2

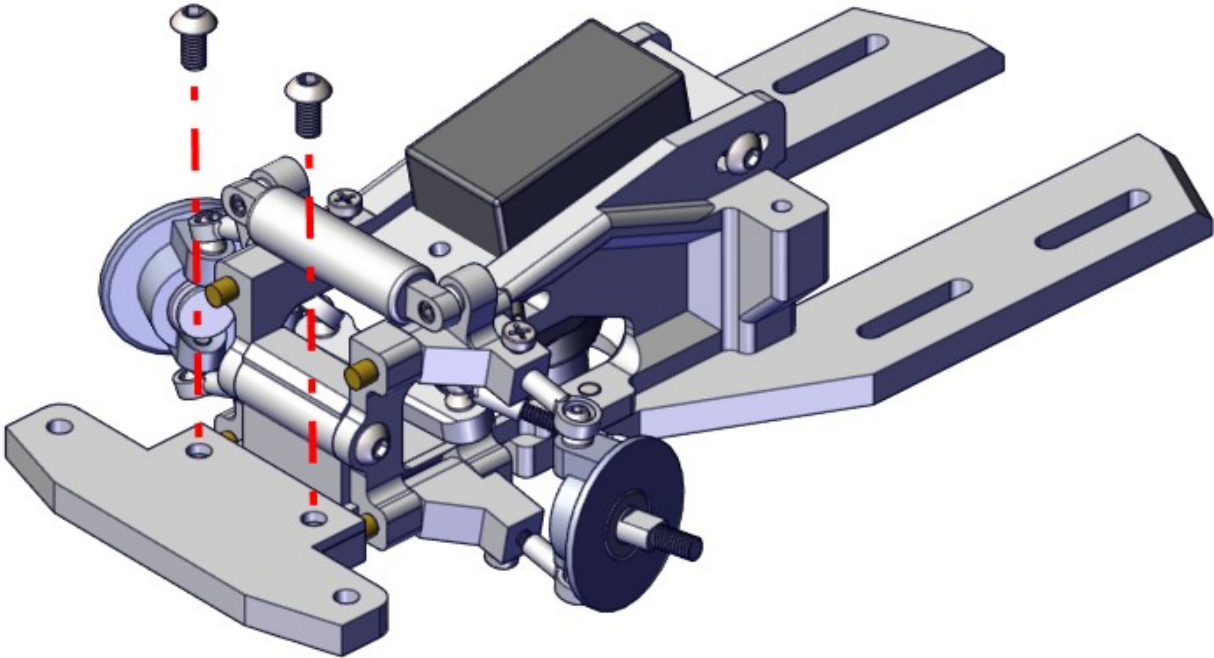

Name	Count
m2x4	8

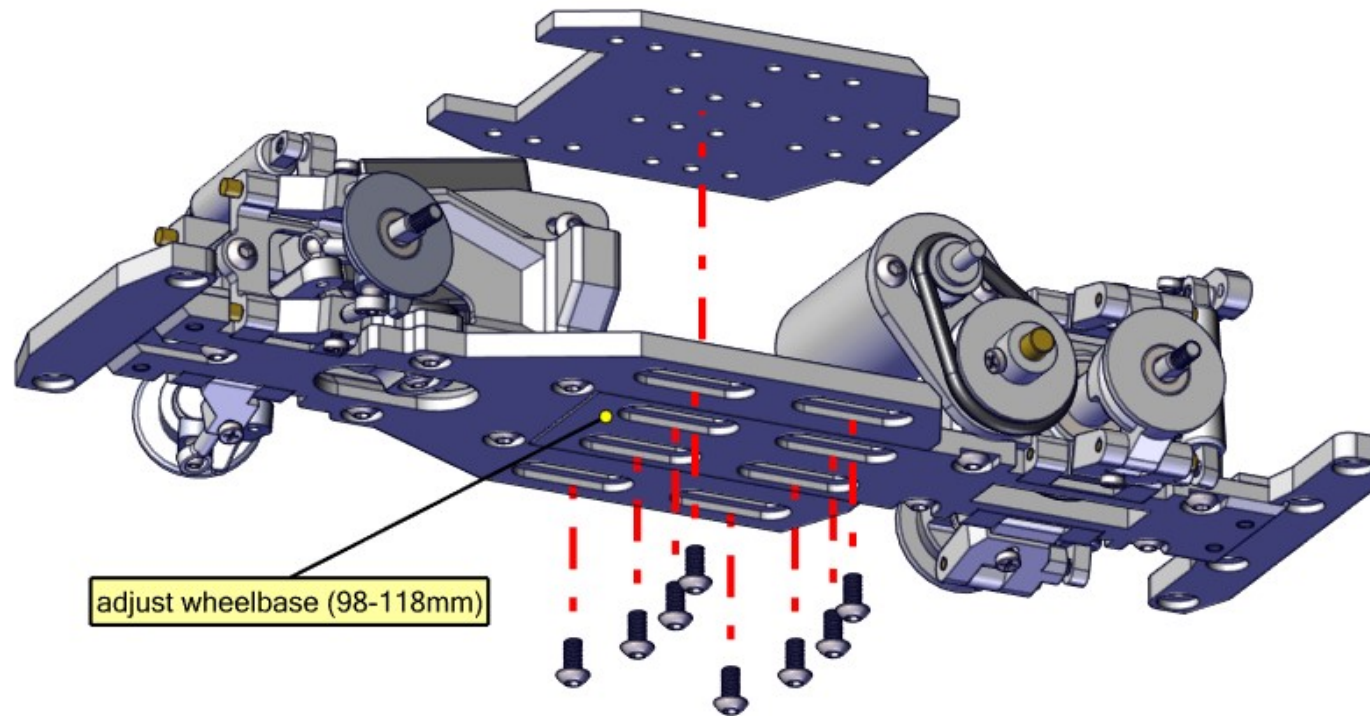

Name	Count
m2x4	2

